


# AUTO-PURGER® M

“ENERGY SAVER”

Compact, NonCondensable Gas (Air) Refrigerant Purger

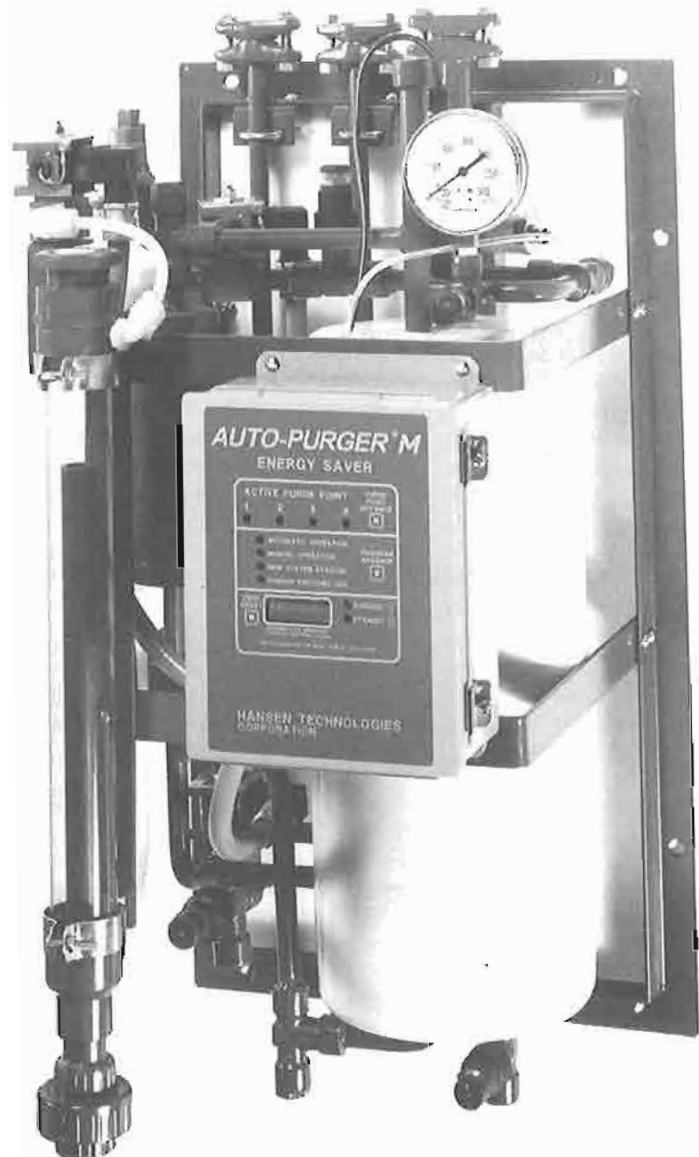

Model APM



## OPERATOR INSTALLATION & INSTRUCTION MANUAL

For 115V and 230V Models

## SECTION I MOUNTING & PIPING INSTALLATION

### INTRODUCTION

The AUTO-PURGER® M is a compact and totally automatic, electronically-controlled, noncondensable gas refrigerant purger for reducing condensing pressure, and thereby saving electrical energy used by the refrigeration system. This deluxe purger is preassembled, prewired, tested, insulated, and includes an automatic water bubbler. Installation requires piping the "foul gas" line, liquid line, suction line, water line, drain line, and wiring the power connection and the remote ½" (13 mm) port purge point solenoid valves, which must be purchased separately. Up to four (4) purge points can be controlled by this purger. The AUTO-PURGER® M (APM) features welded piping and watertight electrical construction. The APM meets the requirements of the Canadian Standards Association (CSA certified).

A typical APM installed in a plant with normal-entering noncondensable loads will handle up to a 200 ton (700 kW) ammonia system. Each purge point will be active between 10 and 30 minutes, depending on the noncondensable gas presence (mostly air) and the purger mode of operation.

### MOUNTING INSTRUCTIONS

Mount the APM straight and securely on a wall or sturdy steel channels capable of supporting 350 lbs. Eight mounting holes in the frame are provided to support the purger (See Figure 1). The APM should be located in an accessible area, but away from the movement of equipment that could accidentally damage the purger. Elevation with respect to condensers or high-pressure receivers is not critical.

An APM is usually installed in the compressor room where it can be monitored, but also may be installed outdoors where temperatures below freezing are not anticipated. The APM comes standard with a watertight NEMA 12,13 (IP55, IP65) control cabinet enclosure with sealed conduit wiring. Any unused electrical entrances to the enclosure must be sealed to protect electronics from moisture.

An optional valve package (VPM) for purger isolation is available from Hansen. It consists of three welded assemblies which include shut-off valves, gauge valves, and mating flanges. An illustration detailing this optional valve package is on page 12 (Figure 12).

### INSTALLATION DIMENSIONS INCHES (mm)

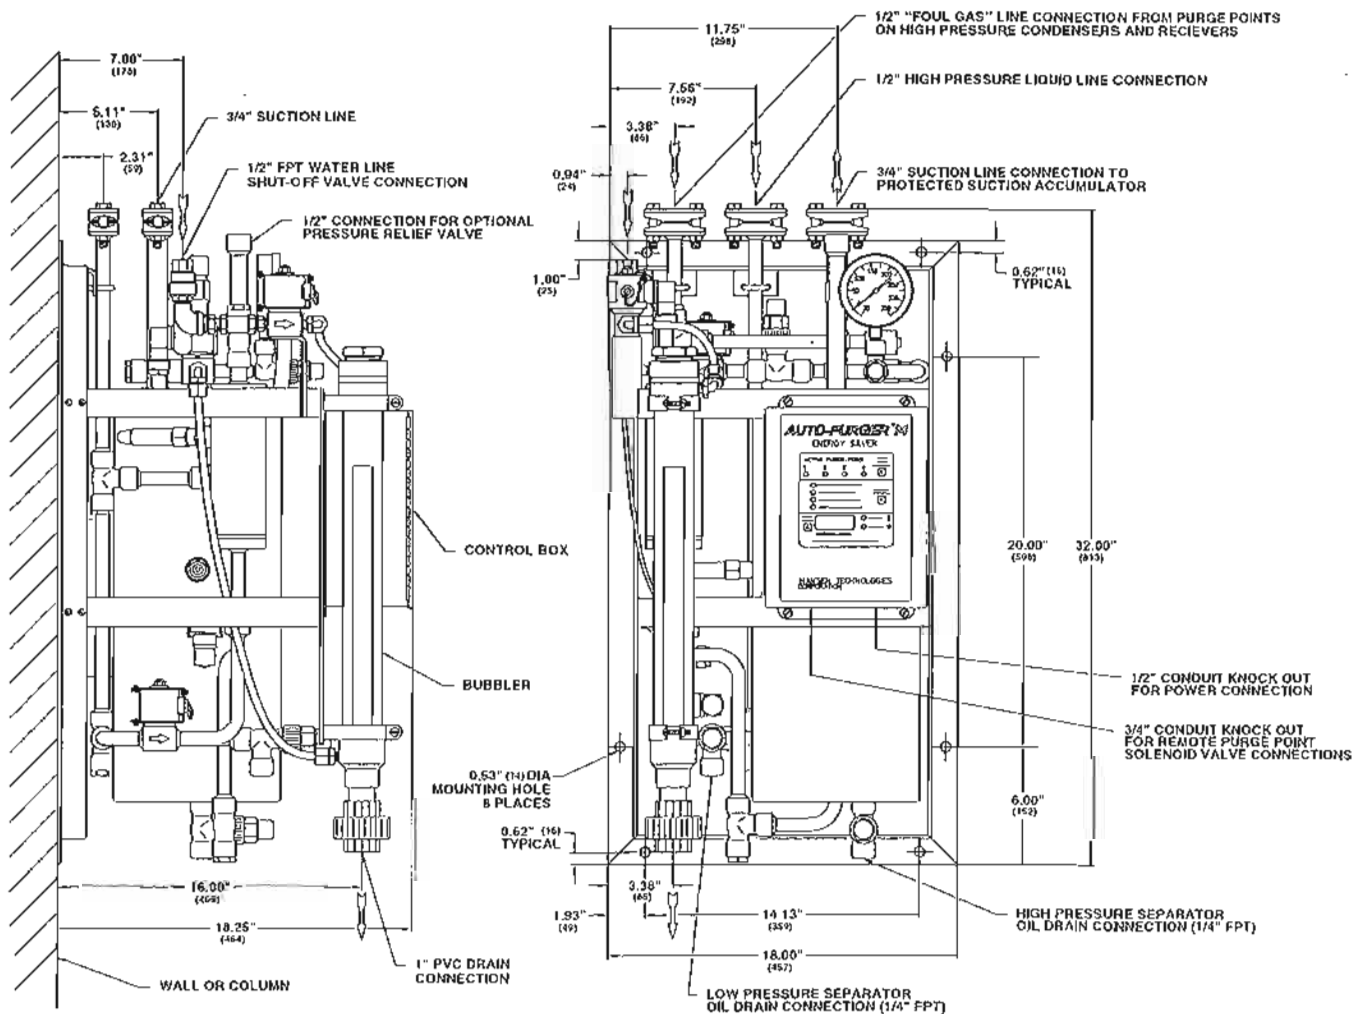


Figure 1.

## "FOUL GAS" PIPING

Purging at several points, up to four with the APM, on the high-pressure side of the system is the best method for removing "foul gas." "Foul gas" is refrigerant gas containing some air or other noncondensibles. Several points should be used because it is nearly impossible to predict where noncondensable gas will accumulate in a system.

Even for multipoint purging, only one purge point should be purged at a time. Connecting two purge points from two condensers or receivers may result in gas flowing from one condenser to another. This is due to an unequal pressure drop, even though the differences in pressure drop are very small, for example 1/4 psig (0.02 bar). The result would be that, even in the best of circumstances, only one point is effectively purged. The best practice is to purge each condenser and receiver circuit separately.

When utilizing multipoint purging, the purge point solenoid valves can be manifolded into one "foul gas" line to the purger. A 1/2" size line is the minimum and should be pitched toward the purger to drain any condensed liquid. Also, no liquid traps are allowed either before or after the purge point solenoid valves (See Figure 2). The "foul gas" line should not pass through cold areas where further condensing of the saturated gas can occur. If this cannot be avoided, the line must be insulated because flooded purge point lines result in flooding the APM with liquid, causing a temporary halt of noncondensibles being removed. If flooding can not be avoided, additional condensate drainage may be necessary.


It is important that all purge points be located above any liquid surfaces to avoid drawing liquid refrigerant, rather than vapor, into the APM.

## EVAPORATIVE CONDENSER PIPING

Typically, evaporative condenser outlet liquid drain lines on each circuit must drop a minimum of 4 feet (1.2 m) for ammonia from the centerline of the evaporative condenser outlet to the centerline of highest elevation of the liquid line manifold to receiver. Preferably, each circuit should have a P-trap to balance variations in pressure drop in each circuit to prevent liquid from backing up into one or more condensers, and thereby flooding the purge point. **Most air from the system will normally be trapped between the condenser and the P-trap.** Also, a properly-sized equalizer line from the receiver will help drain condenser circuits into the receiver. Refer to ASHRAE GUIDELINES or IAR Papers on condenser piping design. Hansen Technologies can provide copies of these articles. Also, consult the condenser manufacturers' installation instructions for additional piping and sizing information.

On evaporative condensers, avoid using one purge point solenoid valve to purge two circuits. This practice negates the P-trap on the condenser drain line because of the purge connections of the two circuits and may back liquid up into one circuit.

### TYPICAL APPLICATION

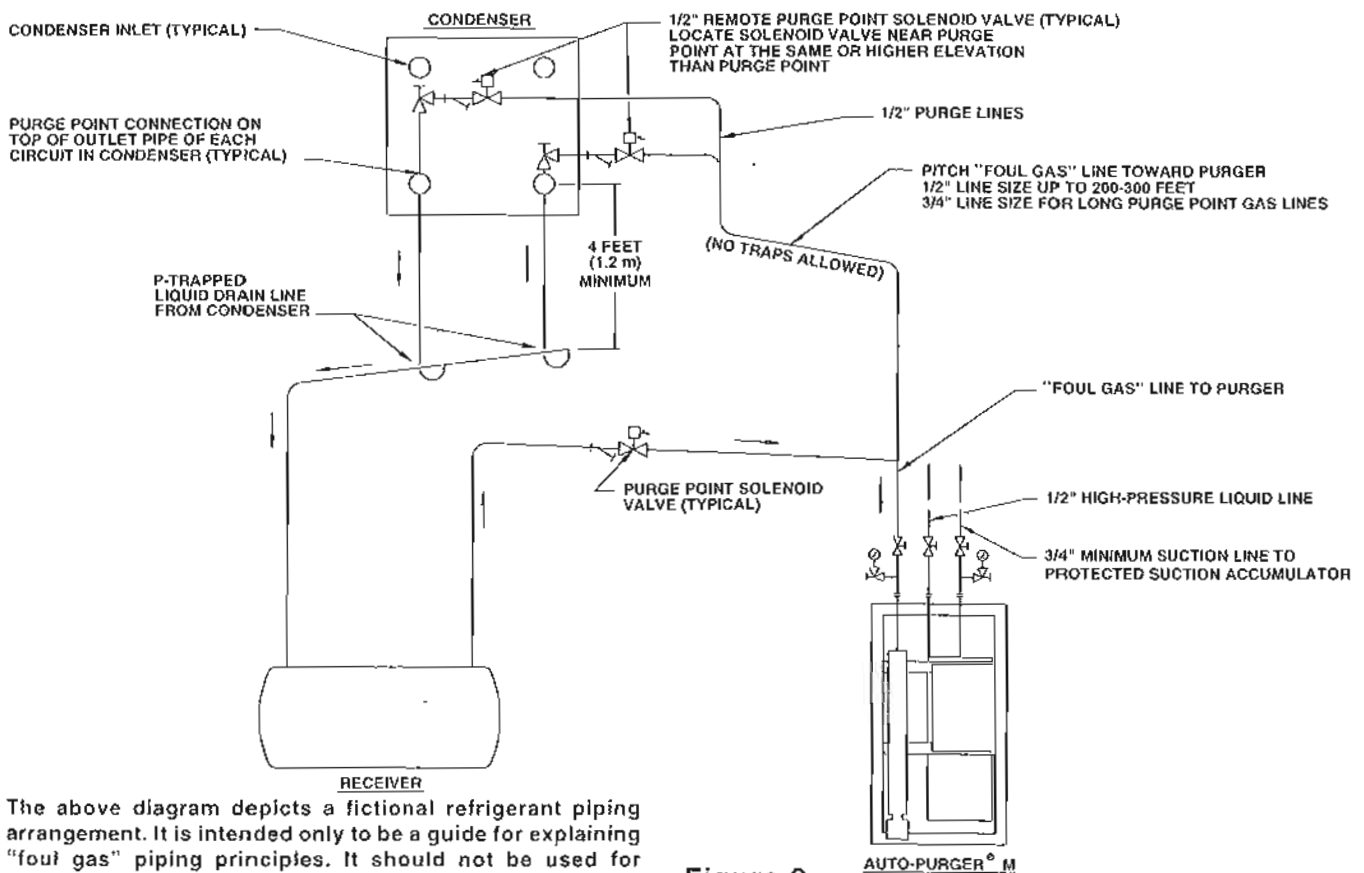

The above diagram depicts a fictional refrigerant piping arrangement. It is intended only to be a guide for explaining "foul gas" piping principles. It should not be used for construction.

Figure 2.

## PURGE POINT CONNECTIONS

"Foul gas" lines from condensers should be purged at points recommended by the condenser manufacturer. Usually, this is at the top of each circuit's outlet header which drains down through a P-trap to the receiver. In some cases, a small high-pressure auxiliary receiver is located at the outlet of one or more condensers. This receiver should have a purge point at the top, preferably at a "dead" area away from condenser drain pipes. Below is a typical valve arrangement for a purge point (Figure 3). **Regardless of the purge point location, it is absolutely necessary to ensure that liquid is not drawn into the foul gas line.**

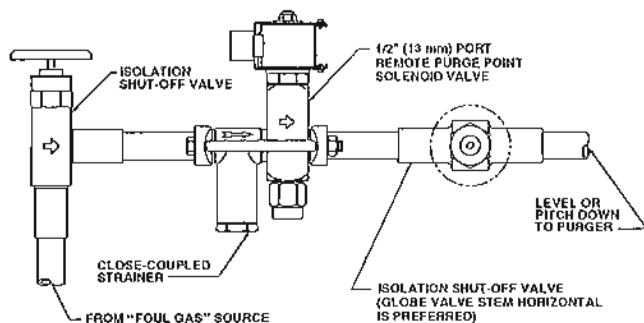


Figure 3.

Where a high-pressure float regulator is used to drain one or more condensers, the top of the float valve chamber should also be a purge point.

Horizontal shell and tube water-cooled condensers, and heat exchangers should be purged at the top, usually at the point(s) furthest from the compressor discharge main inlet.

Vertical condensers should be purged near the top of the vessel if possible.

For certain types of oil separators where very low velocities may exist near the top of the vessel, purging may be advisable from a top fitting.

It is normally not advisable to purge controlled pressure receivers, high-pressure thermosyphon vessels, or vessels located on the low side of the system.

## SUCTION LINE

The  $\frac{3}{4}$ " suction line from the purger should be connected to a protected main suction line or a suction accumulator. Install a suction line isolation shut-off valve near purger. Excess amounts of liquid from the purger evaporator may occasionally be transmitted through the suction line. The suction temperature must be 40F (4.4°C) or less to satisfy the APM temperature sensor before purging will occur.

## LIQUID LINE

A high-pressure  $\frac{1}{2}$ " liquid line is required for the APM. The connection to the high-pressure liquid source should be a location where oil will not be directed into the purger. Install liquid line shut-off valve near the purger. The liquid line supplies refrigerant during start-up and feeds make-up liquid as required. The only requirement is the liquid supply

pressure must be sufficiently above the purger evaporator pressure, usually greater than 60 psi (4.1 bar). During operation, only 5% of the liquid refrigerant required for cooling comes from the liquid line. The remainder of the refrigerant is condensate from the "foul gas" line, which is collected in the drain, condensed in the coil, and into the evaporator.

## WATER LINE

The APM has an automatic water bubbler to eliminate any water bottle attention. Connect the water supply to the purger water shut-off valve (See Figure 1). Water pressure should be between 30 and 80 psig (2 and 5 bar). The factory-installed flow controller limits the amount of water going into the bubbler.

The transparent tube of the water bubbler may become coated with mineral deposits after a period of time. These deposits can be removed by adding a cup of vinegar to the water in the bubbler and cleaning the clear tube through the top plastic fitting with the brush supplied. A water conditioning filter cartridge and housing are available for abnormally hard water.

## DRAIN LINE

A 1" PVC socket water drain connection is located at the bottom of the bubbler (an alternate 1" FPT threaded adapter is also supplied). The water should flow to a suitable drain. Initially, fill the water bubbler with water via the threaded plug located at the top of the bubbler. Keep the plug lubricated and hand-tight. A circular, thin, plastic "stick-on" acts as a bubbler relief device in case of water drain plugging. The drain line should be supported to prevent undue stress on the water bubbler.

## OIL DRAINS

There are two  $\frac{3}{8}$ " valve oil drain connections near the bottom of purger (see Figure 1) from which oil can be drained. These valves are fitted with  $\frac{5}{16}$ " (8 mm) socket plugs. Before draining oil, first close the liquid and "foul gas" lines to prevent additional liquid from entering the purger. Wait approximately one half hour and then turn the purger off. Allow the purger to pump out, then close the suction line shut-off valve. Use normal refrigerant oil draining precautions to prevent human or property damage. In general, oil will not be a problem unless the liquid line is connected to a vessel or line where oil can enter the purger. See also the Caution section on page 12. Escaping refrigerant may cause personal injury, particularly to the eyes and lungs.

## LEAK TEST

Use standard refrigeration procedures to check the APM for leaks before placing it into service. See also the Caution section on page 12. Manually open one purge point solenoid valve. Open the "foul gas" line shut-off valve and wait a few moments for the flooded evaporator to pressurize through the metering orifice. Allow pressure to build to condensing pressure, as shown on the high side pressure gauge. Close the "foul gas" line shut-off valve and check the purger for leaks.

## SECTION II ELECTRICAL INSTALLATION & OPERATION

### ELECTRICAL CONNECTIONS

The standard electrical requirement for the APM is 115V 50/60 Hz. Also available is 230V 50/60 Hz. The control cabinet has a bottom 1/2" knockout for power connection and bottom 3/4" knockout for individual purge point solenoid valves (See Figure 4). Any additional knockouts, if necessary, should be made on the bottom of the control cabinet. A grounding block inside the control cabinet is provided for 3-wire purge point solenoid coils. Carefully study the wiring diagram below (Figure 5) to avoid electrical short circuits.

Connect electrical wiring from each purge point solenoid to the remote purge point solenoid plug-in connector screw terminals (1 through 8) plus the grounding block. Normally, the voltage of the remote purge point solenoid valves is the same as the purger. However, if the purge point solenoid valve coil voltage is different, simply remove and discard the factory-installed jumpers between terminals 13 & 14 and 15 & 16. Bring the purge point solenoid line (L1) connection to terminal 14 and neutral (L2) to terminal 16.

### CONTROL CABINET (INSIDE VIEW)

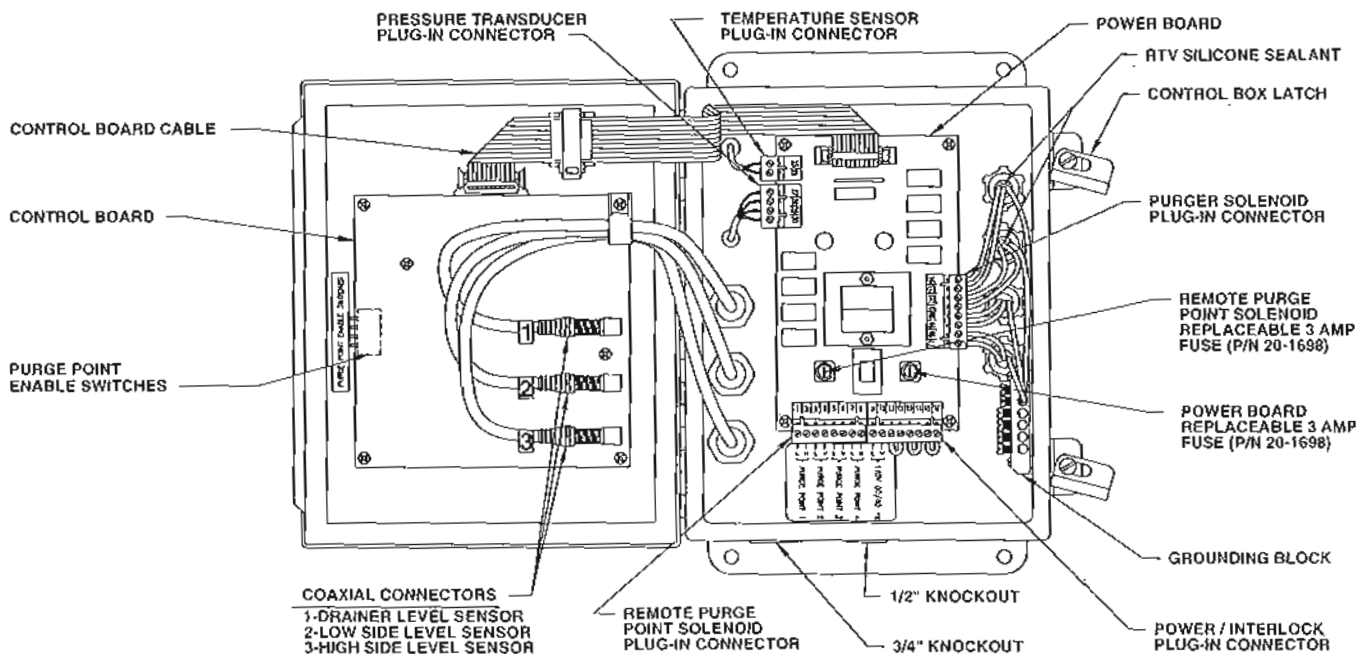


Figure 4.

### WIRING DIAGRAM

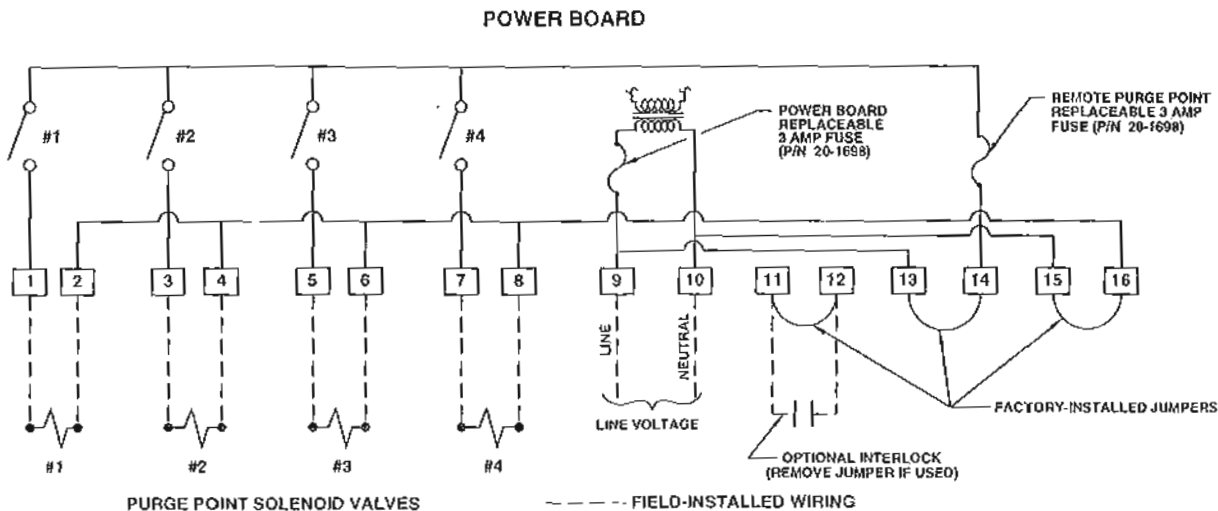


Figure 5.

## FEATURES OF THE APM

The purger can be set to one of several operating modes to suit the requirement of the system. These include: Automatic Operation, Manual Operation, New System Start-up, and Purger Switched Off. The mode of operation can be selected by repeatedly pushing the program advance button on the front panel until the desired purger mode light is on. (See Figure 6).

## AUTOMATIC OPERATION

The Automatic Operation mode is where the purger should be set when normal levels of noncondensibles are in the refrigeration system. The microprocessor-based electronics of the APM uses its "logic" to locate noncondensibles and spend more time purging those points. The purger will energize the first enabled purge point solenoid (see page 7, Purge Point Enable Switches). If after 10 minutes noncondensibles are not released, the purger then will advance to the next enabled purge point. If noncondensibles are released at any purge point within the first 10 minutes, then the purger will continue to process gas and remain at that purge point for increments of 10 minutes as long as noncondensibles are released during the 10 minute time period. This "smart" feature will continue for a maximum of 30 minutes. After 30 minutes, the purger will go on to the next active purge point regardless if noncondensibles are released. Once noncondensibles have been minimized, and enabled purge points cycle without releasing noncondensibles, the purger will go into "Standby" mode for two hours (the Standby purger status light will be on). After two hours on Standby, the purger will then resume operation to seek out noncondensibles that may have collected.

## MANUAL OPERATION

Manual Operation mode allows the operator to select one purge point continuously. This is usually the case if a large volume of noncondensibles is suspected to be at a particular point. To select this mode, push the program advance button until the Manual Operation purger mode light is on. Then, push the purge point advance button to select the purge point. In this mode, the purger will purge this point only. However, noncondensibles must be present for the purger to release gas from the purger. If not, the purger will go into Standby mode.

## NEW SYSTEM STARTUP

The New System Startup mode is to be used when the refrigeration system is known to contain large amounts of noncondensibles gas. This may be due to new system startup, extensive repairs to a system, or the presence of an abnormal vacuum leak on the low side of the system. The APM automatically sequences the purge point solenoid valves for a fixed period of 10 minutes each to remove air from each of the enabled purge points. The purger will not go into Standby mode while in New System Startup mode.

## PURGER SWITCHED OFF

When the purger is in this position, all solenoid valves close and the purger will pump out if the suction valve is open.

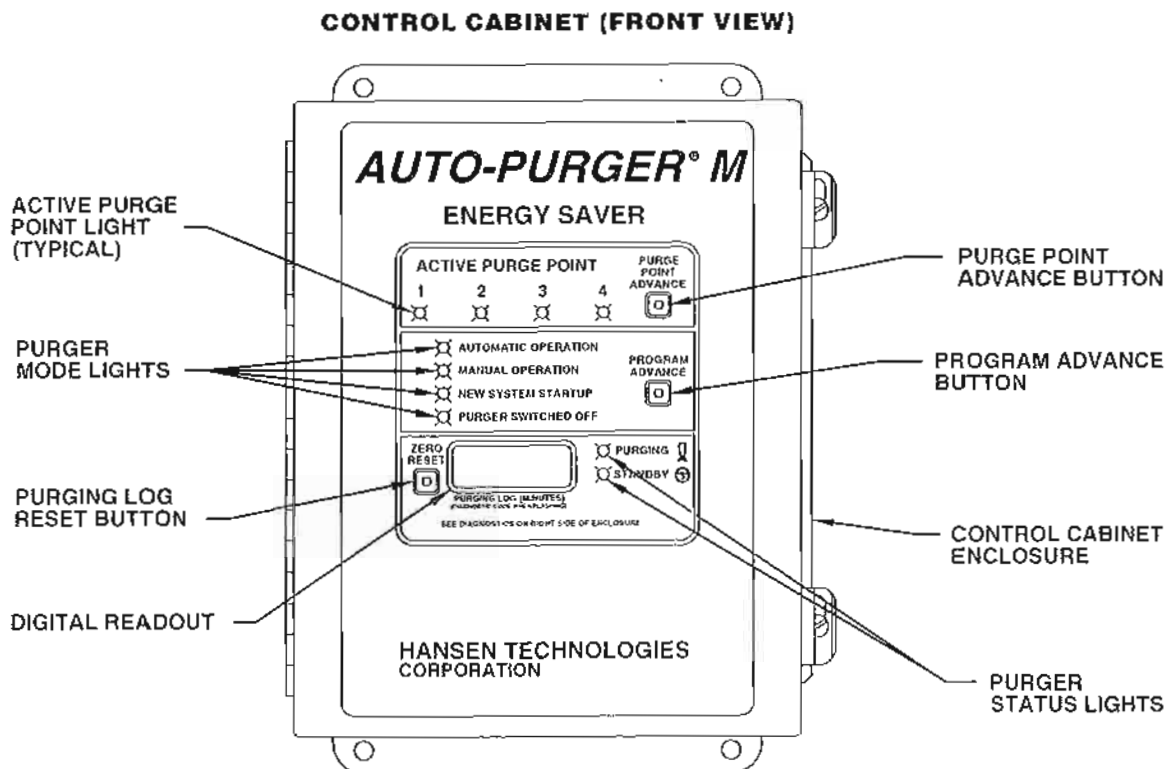


Figure 6.

### ACTIVE PURGE POINT

The front of the control cabinet has lights which indicate the active purge point. The active purge point can be manually advanced in any operational mode by pushing the purge point advance button.

### PURGER STATUS LIGHTS

There are two purger status lights on the front of the control cabinet next to the digital readout. These are the Purging status light and Standby status light which indicate when noncondensable gas (air) is being released from the purger (Purging), or when the purger is in a waiting mode (Standby).

### PURGING LOG

The purging log is displayed on the digital readout. It displays the number of minutes the purge gas solenoid valve (C) has been open to release noncondensibles into the water bubbler.

The purger log can be used to track the release of noncondensable gas. If a daily or weekly record is kept, then any abnormal increases in the amount of noncondensable gases can be noted, and corrective measures can be taken. Little or no activity compared to normal operation may indicate noncondensibles have been thoroughly removed or a problem with the purger. Frequent activity beyond normal could mean excessive new leakage of air into the system. To reset the purge log, push the zero reset button next to the digital readout on the front panel.

### DIAGNOSTIC FEATURES

Although the APM is very reliable, after an extended operation or under severe conditions, problems may occur or be suspected. Under these conditions, due to the importance of the purging functions, restoration to normal operation is desired as quick as possible. The APM features diagnostic codes which are displayed on the digital readout when abnormal operation of the refrigeration system or the APM is detected. These flashing numbers help to identify the problem area. Below is a quick reference to these diagnostic codes. The digital readout will display the diagnostic code related to the occurrence which first put the APM into this mode; exception, 6666 will override 7777. Also see the troubleshooting guide on page 10 for detailed explanation.

Flashing 2222 LOSS OF "FOUL GAS" PRESSURE.

Flashing 3333 PURGER TOO WARM.

Flashing 4444 PURGED OVER 60 MINUTE TIME LIMIT.

Flashing 5555 PURGER SHUT-OFF REMOTELY.

Flashing 6666 LEVEL CONTROL OUT OF RANGE.

Flashing 7777 LOSS OF HIGH-PRESSURE LIQUID.

### PURGE POINT ENABLE SWITCHES

These switches are located on the control board and are all factory-set to the ON position. They control whether or not a purge point can become active. If for example, only three purge points are being utilized, the number 4 purge point enable switch should be in the downward off position (see Figure 7). By doing this, the unused purge point is disabled and purger time is not wasted.

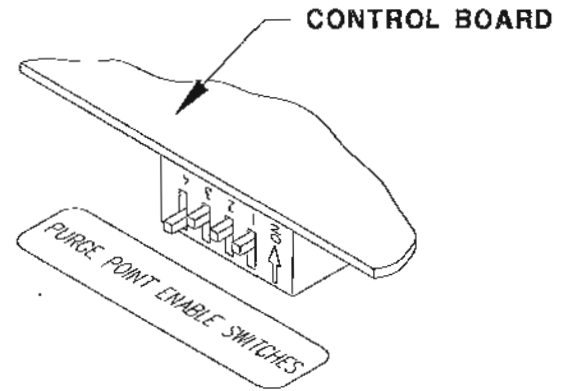


Figure 7.

### PUMP OUT PROCEDURE

Performing certain types of service on the APM may first require the purger to be pumped-out (drained of liquid refrigerant). To begin pump-out, shut off the foul gas and high-pressure liquid lines. Wait for all refrigerant to evaporate to suction; this usually takes several hours to complete. Using safe refrigeration practices, reduce the pressure to zero pounds. Check the pressure gauge to make sure it reads zero psi. In addition to following these procedures, check the lower portion of drainer and the APM piping for signs of frost. If there is no frost, pump-out is probably complete. If there is frost, this means excess refrigerant is still in the drainer. To drain, energize the drainer solenoid valve.

## SOLENOID VALVES

The APM is equipped with four solenoid valves. These are as follows: the liquid drainer solenoid valve (A); the liquid make-up solenoid valve (B); the purge gas solenoid valve (C); and the water solenoid valve (D). With the exception of the water solenoid valve, each is directly welded in-line and has a stainless steel removable seat/orifice (see Figure 8). The removable seat/orifice facilitates easy access to the orifice for inspection or replacement. If necessary, the water solenoid valve (D), whose brass body has threaded ends, can easily be replaced or parts thereof changed.

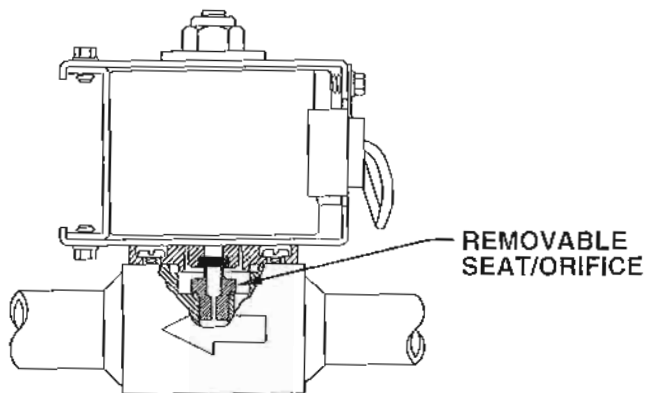


Figure 8.

In addition, separate remote point solenoid valves are required, one for each enabled purge point. These are not included with the APM. The Hansen type HS8 solenoid valve having a 1/2" (13mm) port and a stainless steel piston is recommended. Below is a typical purge point solenoid valve with close-coupled strainer (Figure 9).

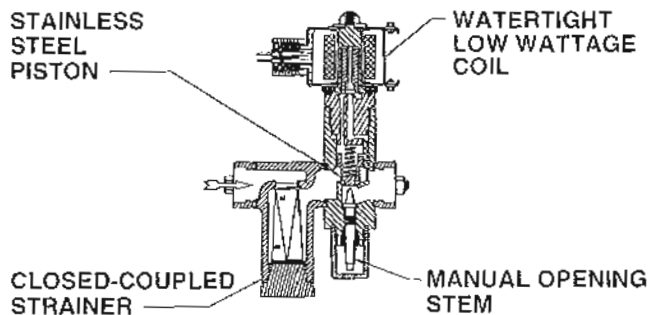


Figure 9.

## CHECK VALVES

There are three check valves on the purger. An 80 psig (5.5 bar) differential check valve is installed on the purge gas line to prevent any possibility of reverse flow of water into the purger. A 225 psig (15.5 bar) differential relief check valve leads from the condensing coil inlet to the suction line; this prevents excessive purger pressure. A third check valve is installed from the liquid drainer to the evaporator coil to prevent reverse flow with a temporary loss of "foul gas" pressure.

## LIQUID DRAINER

The liquid drainer removes any condensed liquid that trickles from the "foul gas" line into the purger. This enables the purger to always be condensing gas, rather than having liquid entering the condensing section of the purger and limiting proper operation. The drainer solenoid valve (A) will open to empty a reasonable amount of excess liquid directly to the flooded evaporator. However, if too much liquid comes down the "foul gas" line, due to improperly piped condensers, corrective action must be taken. See the "Foul gas" piping section on page 3.

## STRAINER/ORIFICE

The strainer/orifice meters condensed liquid refrigerant from the high-pressure side of the purger into its flooded evaporator. It features a dual filter arrangement to reduce potential orifice blockage. This dual filter (strainer) removes particles and houses the integral orifice (strainer/orifice screen assembly). See Figure 10.

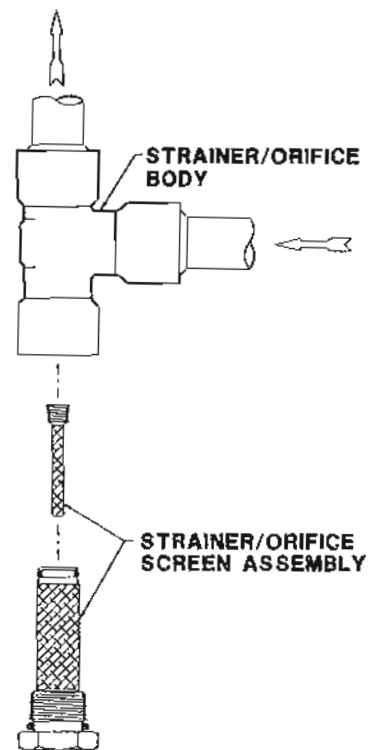


Figure 10.

## WATER BUBBLER

The APM is equipped with a water bubbler which eliminates any water bottle attention. Purge gas (noncondensibles) from the purger flows into the bottom of the water bubbler where residual ammonia can be absorbed into the water. The water with absorbed ammonia flows to a drain. The water solenoid valve (D) opens to automatically replenish water to the bubbler each time the purge gas solenoid valve (C) energizes. A 30-second delay keeps the water solenoid valve (D) open after the purge gas solenoid valve (C) de-energizes to refill water bubbler. Proper release of noncondensibles through the bubbler is usually indicated by small, 1/2" (13mm) diameter bubbles.

### SECTION III APM OPERATION

The APM is designed to automatically start-up and operate without the assistance of plant personnel. Beginning at start-up, the following is a description of the refrigerant flow through a purger. **Keep the control cabinet door closed at all times to prevent water damage and tampering.**

#### PURGER START-UP SEQUENCE

On start-up, liquid refrigerant fills and begins to cool the purger. The liquid line solenoid valve (B) energizes to feed refrigerant to the flooded evaporator. The low side level sensor, located on the side of the flooded evaporator, senses when liquid reaches the proper level. The display should show 3333.

At the same time the flooded evaporator is filling, "foul gas" enters the flooded evaporator condensing coil and the refrigerant gas contained therein changes state to a liquid. The liquid and noncondensable gas gradually fill the air separator chamber.

As the purger continues to cool down, a temperature sensor attached to the flooded evaporator senses temperature. At approximately 40F (4.4°C) evaporator temperature, the readout will no longer display 3333 and the purger will enter the mode selected.

"Foul gas" is continually processed as long as a remote purge point solenoid is energized. It is important that one, but only one, remote purge point solenoid valve is open at all times to prevent losing "foul gas" pressure to the purger. If "foul gas" pressure is lost (as sensed by pressure transducer), diagnostic code 2222 flashes on the APM digital readout. No purging of air will occur until "foul gas" pressure is restored.

#### OPERATION

The "foul gas" may carry a certain amount of condensed refrigerant which is captured by the liquid drainer before it enters the flooded evaporator coil of the purger. The drainer level sensor operates solenoid valve (A) to drain the liquid directly into the low-pressure flooded evaporator. This separation step enables the liquid refrigerant to bypass the purger's flooded evaporator condensing coil.

The liquid-free "foul gas" enters the condensing coil, which is submerged in the cold liquid refrigerant of the flooded evaporator. The refrigerant gas condenses while the noncondensable gas passes into the air separator chamber. The condensed liquid refrigerant is removed from the air separator chamber through the strainer with integral orifice, and passed into the low-pressure side of the flooded evaporator.

Meanwhile, the noncondensable gas collects in the air separator chamber. The collected noncondensable gas gradually depresses the liquid level causing the high side level sensor to open both the purge gas solenoid valve (C) and water solenoid valve (D). Inside the water bubbler, noncondensable gas and water mix so that residual amounts of ammonia can be absorbed. The waste water is flushed to the drain through the overflow tube.

The purger will cycle each enabled remote purge point solenoid valve in sequence, when the purger is on Automatic Operation or New System Start-up. The Purger will remain at the selected purge point when in Manual Operation.

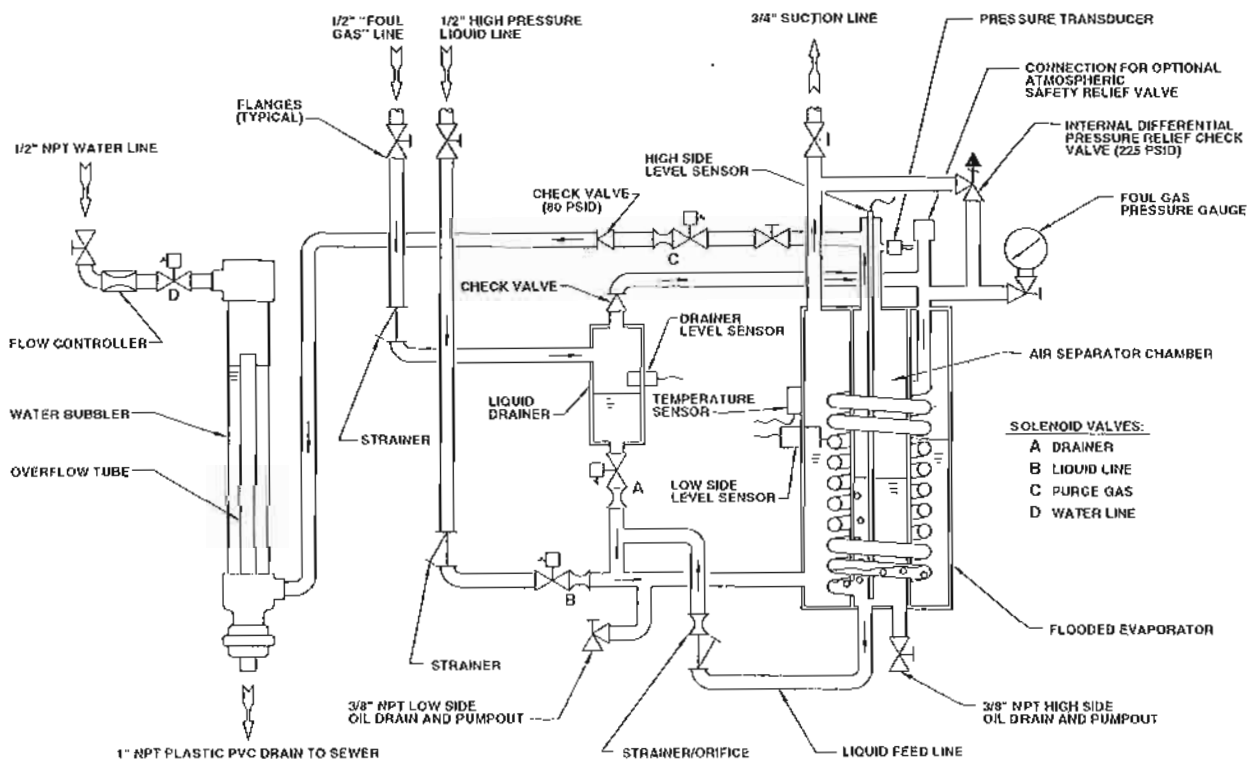


Figure 11.

## SECTION IV TROUBLE SHOOTING PURGER OPERATION

### Digital Readout Flashing 2222

**LOSS OF "FOUL GAS" PRESSURE.** This usually means the pressure in the air separator chamber is below 80 PSIG (5.5 bar). Pressure gauge on the purger reads near suction pressure. The purger will not allow noncondensable gases to be released from the purger. However, the purger will continue to operate normally in all other functions.

**Reason 1:** A burned-out purge point solenoid coil.  
**Check:** Check the remote purge point solenoid 3 amp fuse for continuity. Replace if necessary. Advance purge points one at a time with the purge point advance button, waiting approximately 2 minutes before advancing again. Wait until the fuse opens or the digital readout again flashes 2222. The faulty coil or wiring is now pinpointed.

**Action:** Replace the coil or repair the wire, and replace the 3 amp fuse (p/n 20-1698).

**Reason 2:** A remote purge point solenoid valve is jammed closed.

**Check:** Inspect the remote purge point solenoid valve which caused the diagnostic code to appear. Manually open the solenoid valve and recheck the pressure.

**Action:** If the coil is energized, clean and replace any solenoid valve parts as necessary. See also the Caution section on page 12.

**Reason 3:** "Foul gas" line restricted.

**Check:** Inspect the "Foul gas" line for a closed shut-off valve(s) or the plastic shipping cap still in "foul gas" line flange.

**Action:** Open shut-off valves and/or remove the shipping cap. See also Caution section, page 12.

**Reason 4:** Faulty pressure transducer.

**Check:** With the purger in any operational mode, check the pressure gauge reading. If it is above 80 psig, check pressure transducer plug-in connector terminals 27 & 30 for 10 volts DC. Then check terminals 28 & 29 for at least 13 mV.

**Action:** If terminals 27 & 30 do not have 10 volts DC, check for faulty wiring. If terminals 28 & 29 do not have at least 13 mV, replace the pressure transducer (p/n 20-1857) with the purger at zero pressure. See also the Caution section on page 12.

### Digital Readout Flashing 3333

**PURGER TOO WARM.** If the purger evaporator temperature is 40F (4.4°C) or warmer, the purger will not release noncondensable gas from the purger because excessive refrigerant would also escape. The purger will continue to operate normally in all other functions. This code is also displayed during initial start-up until the purger flooded evaporator is cooled down.

**Reason 1:** Suction temperature too high.

**Check:** Verify the pressure at the purger suction line connection.

**Action:** Connect to a lower-temperature suction.

**Reason 2:** Restriction in the suction line.

**Check:** Inspect the suction line and shut-off valves. These should be a minimum size of 3/4". On new installations, also make sure the plastic shipping cap in suction line flange is removed.

**Action:** Eliminate the restriction. See also the Caution section on page 12.

**Reason 3:** The flooded evaporator inside the purger is not filled with refrigerant.

**Check:** Look for a closed liquid line shut-off valve. Also, check that the liquid line solenoid valve (B) is energized.

**Action:** Open the liquid line shut-off valve. If not energized, check for voltage at the liquid line solenoid valve coil. Replace the coil if it is burned-out.

**Reason 4:** Faulty temperature sensor.

**Check:** With the temperature sensor plug-in connector disconnected from power board (see Figure 4), check the electrical resistance of the sensor across the wire leads.

**Action:** If the resistance is not between 30 K ohms and 486 K ohms, replace the temperature sensor (p/n 67-0052). See also Caution section on page 12.

### Digital Readout Flashing 4444

#### **PURGED OVER 60 MINUTE TIME LIMIT.**

If noncondensibles are released from the purger for 60 minutes continuously, a time delay will close the purge gas solenoid valve (C). This limits the possibility of a substantial amount of refrigerant inadvertently being released into the water bubbler in the unlikely event of purger malfunction.

**Reason 1:** A large volume of noncondensibles is continuously being removed from system.

**Action:** Reset the time delay by momentarily turning the APM to Purger Switched Off and back to the desired operation mode. Delay is now reset for up to another hour of continuous purging. Otherwise, put the purger in New System Start-up mode for continuous purging without the 60 minute time limit.

**Reason 2:** Purge gas solenoid valve (C) is not opening or the removable seat/orifice is blocked.

**Check:** Make sure purge gas solenoid valve (C) is energized. If not, check for voltage at solenoid coil.

**Action:** Replace the coil if it is burned-out, otherwise clean or replace the removable seat/orifice inside the solenoid valve body. See also the Caution section on page 12.

**Reason 3:** The shut-off valve located before the purge gas solenoid valve (C) is closed.

**Check:** Verify that purge gas is not being sent to the bubbler.

**Action:** Open the valve.

### Digital Readout Flashing 5555

**PURGER SHUT-OFF REMOTELY.** This code indicates that the optional interlock remote relay contacts are open. These contacts are connected to the purger via the power/interlock plug-in connector terminals 11 and 12.

**Reason 1:** The purger is temporarily shut-off due to the interlocked compressor (or other device) being shut down by temperature controls or safety devices.

**Check:** Wait until the interlocked compressor (or other device) begins to operate. If digital readout does not stop flashing diagnostic code 5555, then check the interlock relay for proper operation.

### **Digital Readout Flashing 6666**

**LEVEL CONTROL OUT OF RANGE.** This Flashing 6666 code will alternate with either a 6661, 6662, or 6663 code. The second code indicates which level sensor is out of the normal sensing range. This may indicate a mechanical or electrical problem with the drainer level sensor (6661), the low side level sensor (6662), or the high side level sensor (6663).

**Reason 1:** Discontinuity in the coaxial wire from the probe to the control board.

**Check:** Verify that the level sensor coaxial connectors at the control board are tight.

**Action:** If the connections appear proper, replace the suspected level sensor, with the purger isolated from the system and pressure at zero. See also the Caution section on page 12.

### **Digital Readout Flashing 7777**

**LOSS OF HIGH PRESSURE LIQUID.** If the liquid make-up solenoid valve remains energized for more than 30 minutes, it indicates there is insufficient high-pressure liquid available to maintain an adequate level in the flooded evaporator of the purger. The purger will not purge air until this is corrected.

**Reason 1:** Liquid line solenoid valve (B) is not opening or the removable seat/orifice is blocked.

**Check:** Make sure the liquid line solenoid valve (B) is energized. If not, check for voltage at the solenoid coil.

**Action:** Replace the coil if it is burned-out, otherwise clean or replace the removable seat/orifice inside the solenoid valve body. See also the Caution section on page 12.

**Reason 2:** Liquid line restricted.

**Check:** Look for closed shut-off valves in the liquid line, plugged strainers, or the plastic shipping cap still in the liquid line flange.

**Action:** Inspect piping for a closed shut-off valve. Open the shut-off valves, clean the strainer, or remove the shipping cap. See also the Caution section on page 12.

**Reason 3:** Flooded evaporator is full of oil.

**Check:** Look for oil at the drain valves.

**Action:** Drain the oil according to safe refrigeration practices.

### **Purger not operating and the Digital Readout blank**

**Reason 1:** One or both of the replaceable 3 amp fuses is blown. (APM's shipped before January 1997 have circuit breakers instead of fuses.)

**Check:** Check for a blown fuse.

**Action:** Replace the blown fuse.

**Reason 2:** Condensation inside the flexible electric conduit is causing a short in the DIN plug connector. Note: This only applies to APM purgers shipped before December 9, 1996.

**Check:** Remove the DIN plug connector from the solenoid valve and inspect for moisture or condensation.

**Action:** Replace the solenoid, flexible conduit, and (if necessary) the power board. Contact the factory for an upgrade kit including the solenoid and flexible conduit. The power board must be ordered sepa-

ately. Refer to drawing 2001-80 for power board replacement procedures.

**Reason 3:** A short or open on the low voltage side of the power board.

**Check:** With power to the APM use a voltmeter to check for approximately 10V DC across terminals 27 and 30.

**Action:** If there is no voltage across the terminals, replace the power board. Refer to drawing 2001-80 for power board replacement procedures.

### **Noncondensibles are not being released.**

*(See also page 10; Digital Readout Flashing 3333)*

**Reason 1:** Noncondensibles not present in system.

**Check:** Compare the refrigerant liquid temperature from condenser exit with the condensing pressure. The pressure/temperature relationship should be within 2 or 3 PSIG (0.14 to 0.21 bar).

**Action:** None at this time.

**Reason 2:** Strainer/orifice plugged.

**Symptom:** The purger appears to be operating properly, however, the liquid feed line is not frosted.

**Check:** Look for a restriction in the strainer/orifice.

**Reason 3:** "Foul gas" line is flooded with liquid.

**Symptom:** The line from the bottom of the liquid drainer solenoid valve (A) to the inlet of the purger evaporator often remains frosted.

**Check:** Inspect condenser and "foul gas" piping. In many cases, the problem is liquid refrigerant being drawn from the purge point. To prevent this from happening, select purge point locations above liquid surfaces and make sure purge point lines are installed so that only vapor, and not liquid, can be drawn in. Refer to Piping Instructions in Section I of this bulletin.

**Action:** Correct condenser and "foul gas" piping.

### **Ammonia instead of noncondensibles released from purger.**

*(See also page 10; Digital Readout Flashing 3333)*

**Reason 1:** Purge gas solenoid valve (C) leaking at seat.

**Symptom:** A slow leak of noncondensibles to the bubbler when the Purging status light is off.

**Check:** Look for dirt or a worn seat in the purge gas solenoid valve (C).

**Action:** Remove, clean, or replace the seat/orifice and solenoid tube plunger. See also the Caution section on page 12.

**Reason 2:** Oil in purger.

**Symptom:** No frost around the low side oil drain valve.

**Action:** Remove oil through both the low side and high side drain valves (See Figure 1) per safe refrigeration procedures and suggested oil removal instructions describe in the Oil Drain section, page 4.

### **Water bubbler develops excessive mineral coating.**

**Reason 1:** Hard water.

**Action:** Add vinegar to the bubbler water. Then, clean with the supplied brush. Use a water conditioning housing and cartridge in the water supply line to the purger.

## OPTIONAL VALVE PACKAGE (VPM)

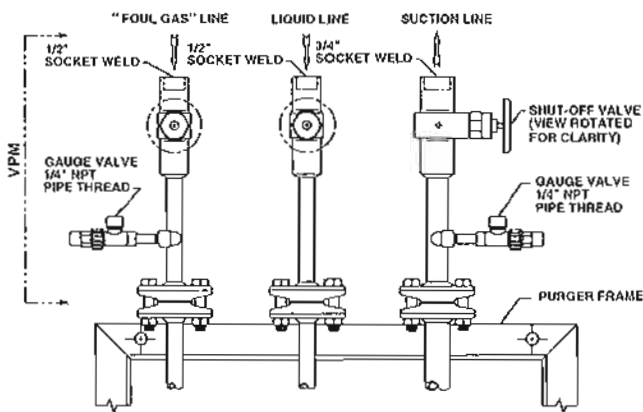


Figure 12.

## DEFINITIONS

**Noncondensibles:** Mostly air, this gas causes higher than necessary head pressure. Typically air enters a refrigeration system through vacuum leaks, break down of oil and refrigerant, and during service repairs.

**"Foul gas":** A mixture of noncondensibles and refrigerant gas.

**P-trap:** A piping arrangement, typically in condenser drain lines, to prevent passage of gas while enabling liquid to proceed.

**High-pressure liquid:** Refrigerant liquid source from condenser or receiver.

**Purge gas:** The noncondensable result of the separation of refrigerant gas from the "foul gas" by the purger.

**Purge point:** Represents a location on the refrigeration system from which "foul gas" is removed.

**Enabled purge points:** Purge points connected to purger and selected by the purge point enable switches, see page 7.

**Active purge point:** Purge point from which the purger is currently removing "foul gas".

**Remote purge point solenoid valve:** A solenoid valve controlled by the purger located at a purge point.

**Water bubbler:** A system by which the purge gas is cleaned of residual ammonia.

## CAUTION

Hansen purgers are only for refrigeration systems. These instructions and related safety precautions must be read completely and understood before selecting, using, or servicing these purgers. Only knowledgeable, trained refrigeration technicians should install, operate, or service these purgers. Stated temperature and pressure limits should not be exceeded. Purger components should not be removed from the purger unless the system has been evacuated to zero pressure. See also the Safety Precautions in current the List Price Bulletin and the Safety Precautions Sheet supplied with the product. Escaping refrigerant may cause personal injury, particularly to the eyes and lungs.

## PARTS LIST

### ELECTRICAL

Control board .....	20-1836
Power board .....	20-1845
3 amp fuse (5mm x 20mm) Fast-Acting, for Power board .....	20-1698
Cable, control board .....	20-1837
Pressure transducer .....	20-1857
Temperature sensor .....	67-0052
High side level sensor .....	77-0534
Drainer and low side level sensor .....	77-0535
Solenoid coil kit, 230V with DIN plug .....	70-1055
Solenoid coil kit, 115V with DIN plug .....	70-1054

### MECHANICAL

Solenoid tube/plunger kit .....	70-1059
Water solenoid valve (D), less coil .....	HS2B(10)
APM bubbler .....	20-1959
Strainer/orifice screen assembly kit includes strainer/orifice screen assembly and necessary O-rings .....	20-2177
Water flow controller .....	20-1985
Removable seat/orifice kits For solenoid valve (B) or (C) .....	70-1068
For solenoid valve (A) .....	70-1069
80 psid check valve .....	20-1949
Foul gas/liquid line strainer kits include strainer basket and O-ring .....	78-1010

## WARRANTY

Hansen electrical and electronic parts are guaranteed against defective materials and workmanship for 90 days F.O.B. our plant. All other components are guaranteed for one year F.O.B. our plant. No consequential damages or field labor is included.

## HANSEN TECHNOLOGIES CORPORATION

6827 High Grove Boulevard  
Burr Ridge, Illinois 60521 U.S.A.  
Telephone: (630) 325-1565  
Toll-free: 1-800-426-7368  
FAX: (630) 325-1572