



Sealed Motor Valve Model HMMV with VPIF

Specifications, Applications, Service Instructions & Parts

SEALED MOTOR VALVE & CONTROLLERS

**7/32" thru 4"
(5 mm thru 100 mm)
Motor Operated Valve**

US Patent 6,460,567 B1



INTRODUCTION

The Hansen Sealed Motor Valve is a truly unique motor operated valve which eliminates the most common concern of other motor operated valves—valve stem seal leakage. The Sealed Motor Valve has no valve stem seal because the non-electric rotor is enclosed in a stainless steel can which contains the fluid pressure. The electric stator is outside the stainless steel can, and is isolated from the fluid in the valve.

APPLICATIONS

- Liquid Make-up to Accumulator
- Liquid Injection to Compressors
- DX Evaporators
- Temperature or Pressure Control
- Low or High Side Level Control
- Slow Opening and Closing: Suction Stop Valve
- No Pressure Drop: Gravity Drain
- 4-20 mA or Floating Point Control

ADDITIONAL FEATURES

- Relay input or 4-20mA for direct connection to plant PLC or computer.
- All moving parts are sealed so that frost will not affect operation.
- Tight closing Teflon seat.
- Canned rotor eliminates valve stem seal leakage.
- Controlled opening and closing minimizes liquid velocity shock, "water hammer."
- Valve is more compact and light weight than other motor operated valves.
- Same flanges and spacing as Hansen HA4A/HS4A pressure regulators and solenoid valves.
- Suitable for use with ammonia, R22, R134a, CO2 (up to 400 psi only) glycol, water, brines, and other approved refrigerants.
- Available with optional Power-Close feature.
- Valve or remote mounted VPIF Valve Position Indicator included for 4-20mA controlled valves.

KEY FEATURES

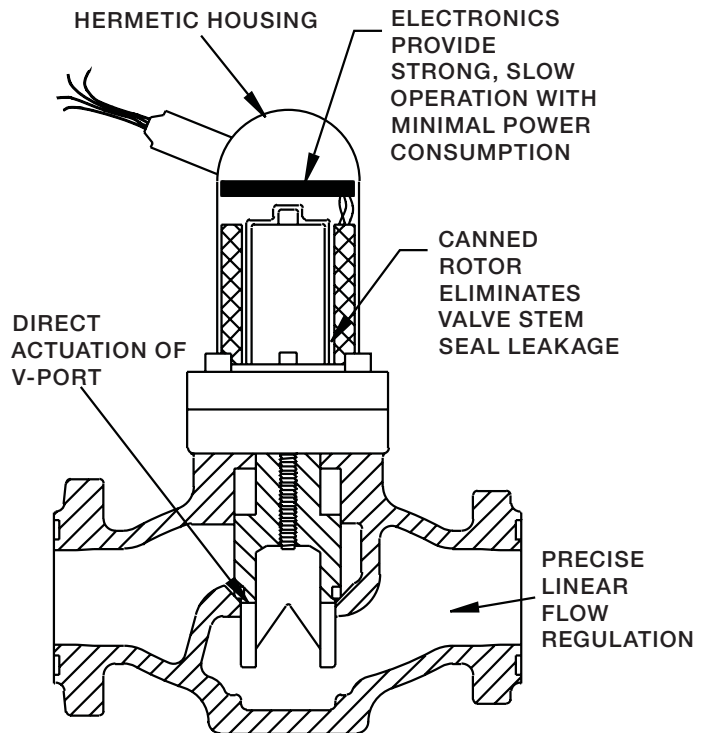


TABLE OF CONTENTS

Introduction/Specifications.....	1-2
Applications.....	3-5
Capacity Tables.....	6-14
Operation & Electrical.....	15
Wiring Diagrams.....	16-17
Installation Dimensions.....	18-19
Calibration.....	20
Service & Maintenance.....	21-13
Parts.....	24-25
Piping Recommendations.....	26-27
Valve Controllers.....	28-30
Troubleshooting.....	32-35
Order Information.....	36

MATERIAL SPECIFICATIONS

Mechanical

Body: ductile iron, ASTM A536
 Bonnet Plate: steel, zinc plated with yellow chromate
 V-port Seat: Teflon
 Rotor Can: stainless steel
 Rotor Can O-ring: neoprene
 Stator Housing: stainless steel
 Safe Working Pressure: 400 psig (27 bar)
 Operating Temperature: -60°F to +240°F (-50°C to +115°C)
 Corrosion Protection: Zinc plating is standard up to 1¼". Acrylic enamel paint on larger sizes.

Electrical: HMMV, HMMVC, HMMR, HMMRC, HMXV, HMXVC

Power: 24 VAC, 90 W peak, 10 W average running
 Enclosure: watertight, NEMA 4X (IP65)
 Cable: 7 wire, 18 AWG, with liquid tight connectors
 mA loop impedance: 350 ohm

Electrical: HMSV, HMSVC

Power: 24 VAC, 90 W peak, 10 W average running
 Enclosure: watertight, NEMA 4X (IP65)
 Cable: 4 wire, 18 AWG, length 10 feet (3 m)

APPLICATIONS

The patented Hansen Sealed Motor Valve is ideal for applications where external leakage is intolerable. The valve is suitable for use with a variety of fluids, including those that are incompatible with copper, such as ammonia, because the copper windings of the motor stator are isolated from the fluid in the valve. Typical uses include slow opening solenoid valve, temperature controlled evaporator regulator, liquid injection to screw compressors, pressure control, liquid level control of pump accumulators, high side receivers or low side flooded chillers, or as a gravity drain valve.

The full ported **HMMV** valve series is best suited for computer controlled operations using 4-20 mA signals. The HMMV is ideal for precise temperature and pressure control, hot gas defrost, and other applications where accurate process control is required.

Model **HMMR** valve with expansion plug is for high pressure drop applications such as liquid makeup and liquid injection. The HMMR valve series is also suitable for suction line, liquid line and hot gas line where reduced capacities more closely match the expected operating conditions.

The **HMXV** valve series is suitable for liquid injection of screw compressors or direct expansion evaporators.

The full ported **HMSV** valve series is best suited for applications requiring open/close operation only. (Floating Point Control)

Refer to pages 3-5 for typical applications.

ADVANTAGES

No pressure drop is required to operate, unlike most pressure regulators and solenoid valves which require a minimum 2 psi pressure drop to keep the valve fully open. The Sealed Motor Valve can be used for applications which require a very low pressure drop (e.g. suction lines), or no pressure drop (e.g. equalizing or drain lines).

Valves are drop-in replacement for Hansen and other select solenoid and pressure regulating valves.

The Sealed Motor Valve does not require stem shaft heaters like other open motorized valves.

The Sealed Motor Valve is slow opening and closing (about 15 to 45) seconds depending on valve size, which minimizes the potential for liquid velocity shock or "water hammer" often experienced with quick opening and closing solenoid valves.

POWER-CLOSE FEATURE

The Sealed Motor Valve is available with an optional Power-Close feature, an integral capacitor storage to close the valve in the event of either 24 VAC power failure or 4-20mA control signal failure. Power-Close motors are installed on HMMVC, HMMRC, HMXVC and HMSVC.

VALVE SIZING

Proper valve sizing is important for smooth operation and long, trouble-free life of the valve. Therefore, capacity at both the maximum and minimum flow and Pressure Drop should be analyzed. Pressure drop across the valve dramatically increases the capacity of the valve. A valve with 8 psi pressure drop has twice the capacity of a valve with a 2 psi pressure drop. Ideally, valves should operate between 15% and 85% open for optimum trouble-free control. Refer to the capacity tables on pages 6-14.

LIQUID MAKE-UP APPLICATIONS

For applications with a large pressure drop across the Sealed Motor Valve, attention must be paid to proper outlet line sizing to accommodate flash gas. It is recommended that dual Sealed Motor Valves in parallel be used when the low load (weekend load) is less than 15% of the full load capacity properly sized for the application. Also, for applications requiring a valve size over 2" port size, it is strongly recommended that two liquid make-up valves in parallel be used. This valve arrangement could be two Sealed Motor Valves or one solenoid valve with hand expansion valve and one Sealed Motor Valve to be used as a "trim" valve under low load conditions.

LIQUID LINE SIZING


Liquid lines should be adequately sized for the capacity of the valve. Listed below are the recommended capacities for liquid lines.

Line Size	Maximum Capacity Ammonia		Maximum Capacity R22	
1/2"	32 Tons	112 kW	3.0 Tons	11 kW
3/4"	58 Tons	208 kW	5.0 Tons	18 kW
1"	97 Tons	340 kW	9.0 Tons	32 kW
1-1/4"	179 Tons	625 kW	20 Tons	70 kW
1-1/2"	254 Tons	890 kW	31 Tons	110 kW
2"	496 Tons	1740 kW	72 Tons	250 kW
2-1/2"	729 Tons	2550 kW	114 Tons	400 kW
3"	1160 Tons	4060 kW	200 Tons	400 kW
4"	2040 Tons	7140 kW	360 Tons	1260 kW
5"	3300 Tons	11606 kW	580 Tons	2042 kW
6"	4890 Tons	17198 kW	860 Tons	3024 kW

NH3 capacities are based on IAR Refrigeration Piping Handbook tables. R22 capacities based on 3 ft/s liquid velocity.

TYPICAL APPLICATIONS - SEALED MOTOR VALVE


LIQUID MAKE-UP TO ACCUMULATOR

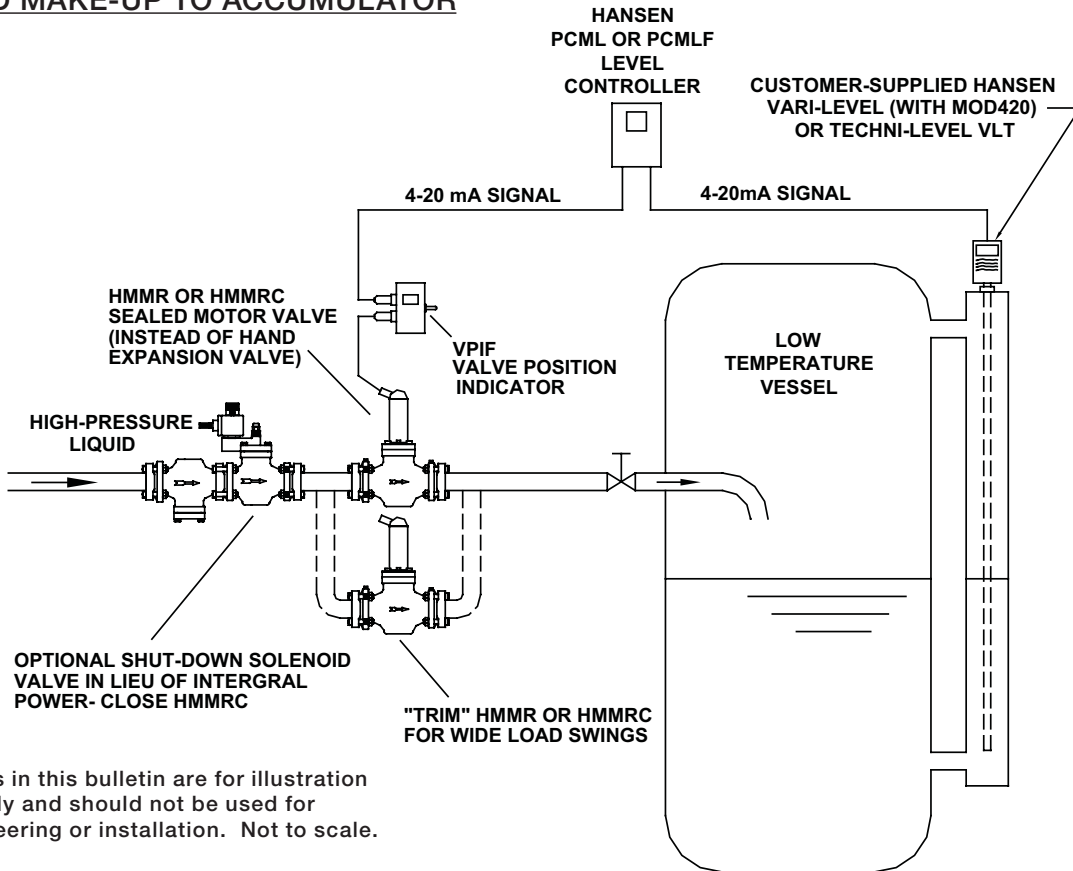

The drawings in this bulletin are for illustration purposes only and should not be used for actual engineering or installation. Not to scale.


ROOM TEMPERATURE OR EVAPORATOR PRESSURE CONTROL

(Shown with Pressure Transducer)

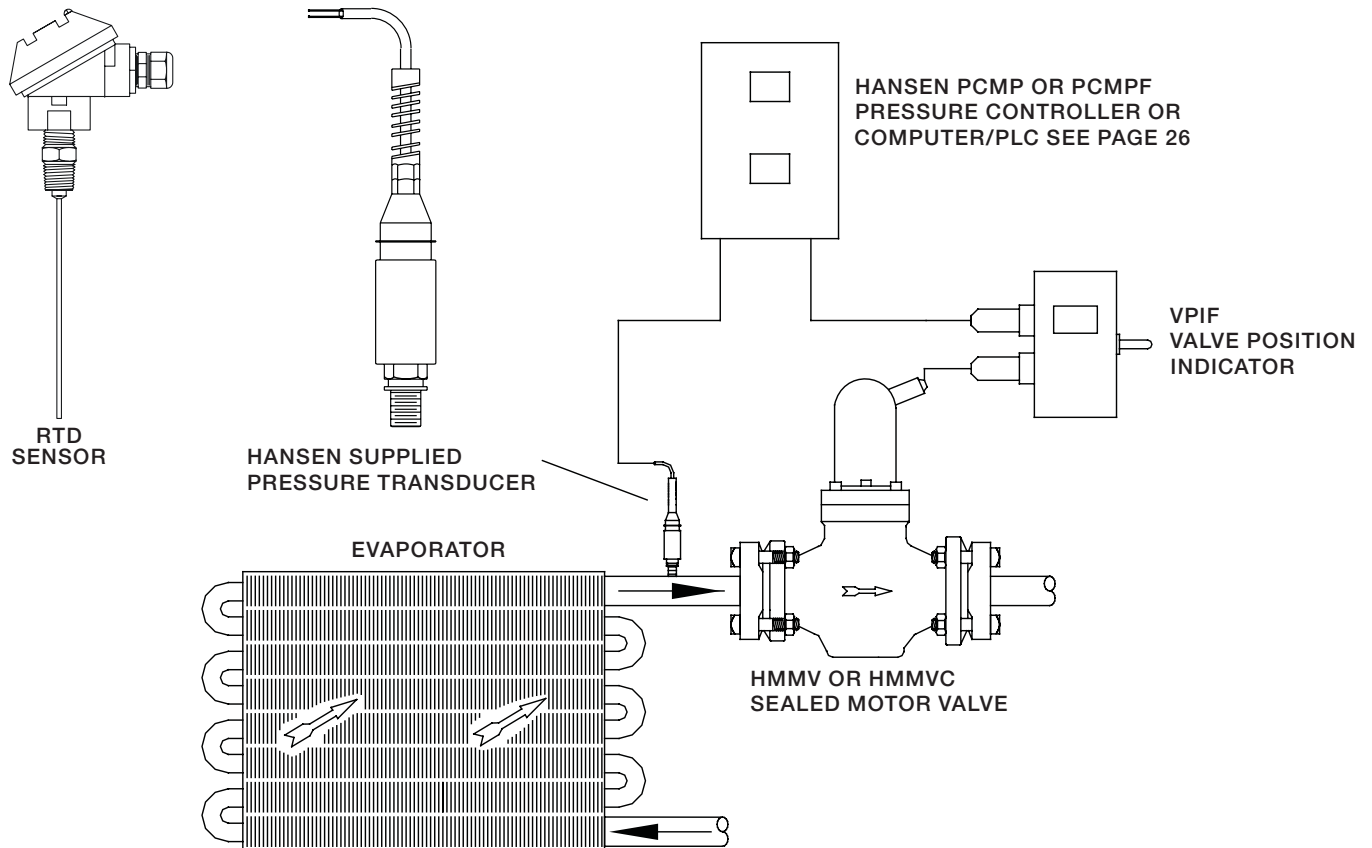


TYPICAL APPLICATIONS - SEALED MOTOR VALVE

TYPICAL CHILLER APPLICATIONS

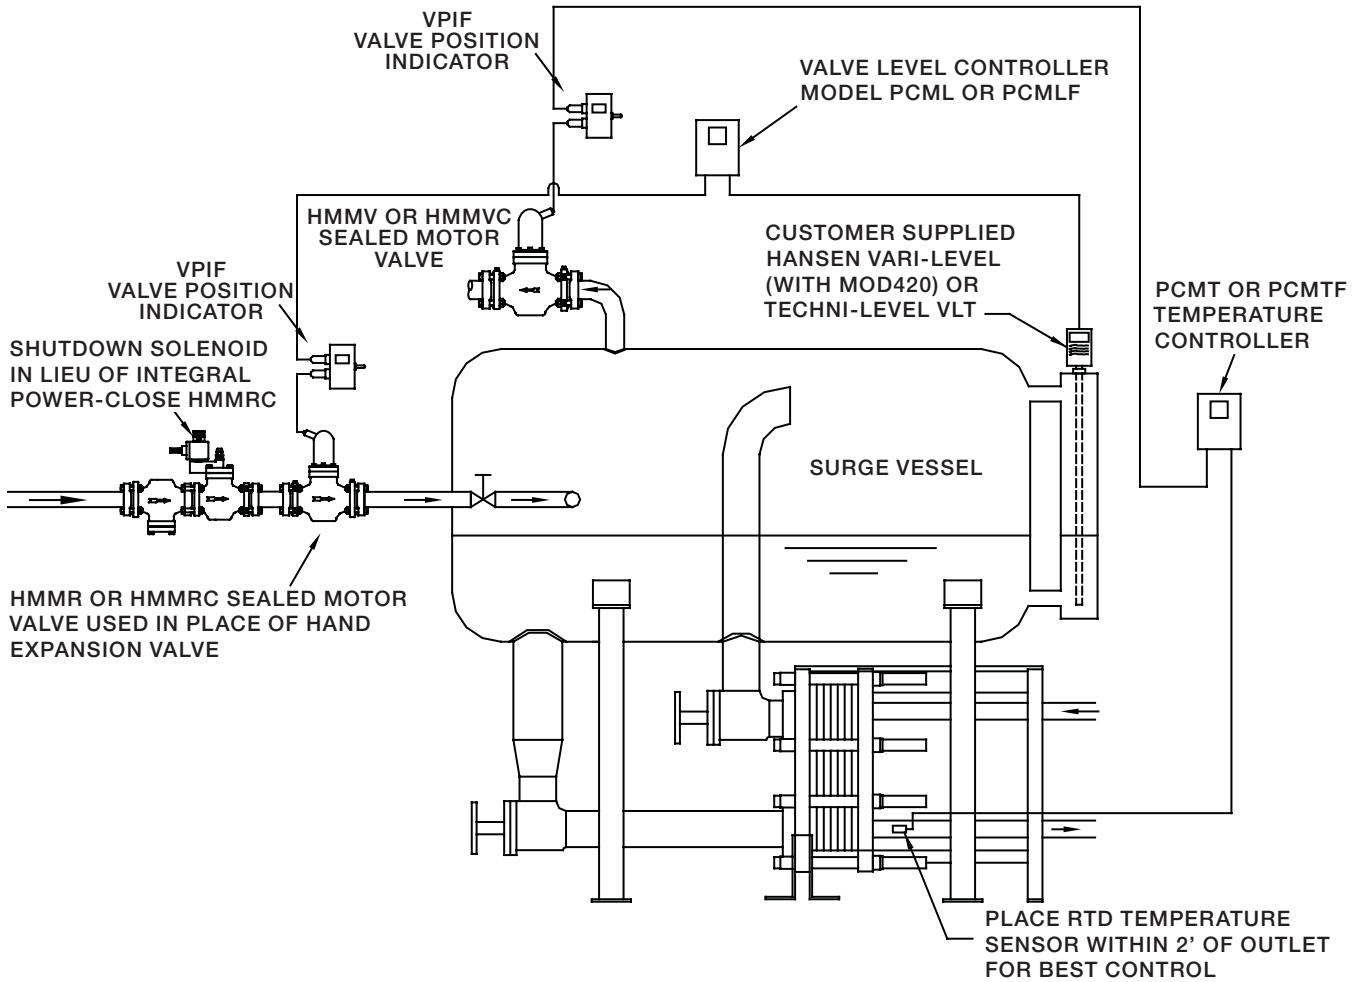


TYPICAL LIQUID INJECTION COOLING FOR SCREW COMPRESSOR APPLICATION

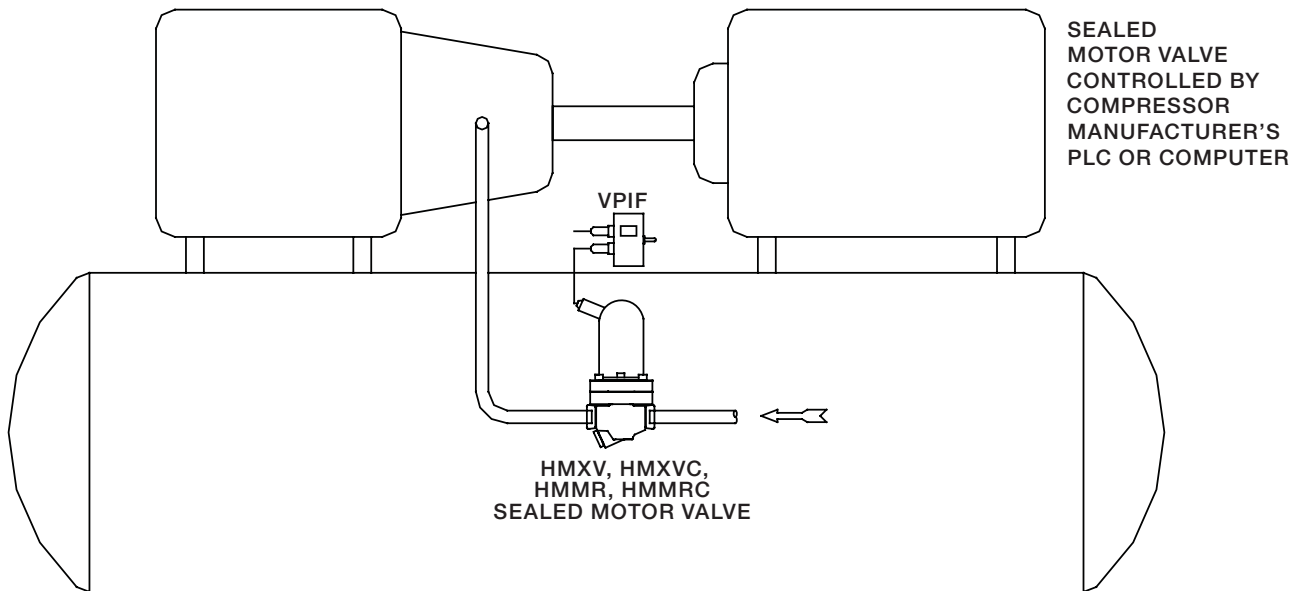


TYPICAL APPLICATIONS - HMSV, HMSVC SEALED MOTOR VALVE
SLOW OPENING AND CLOSING VALVE

SLOW OPENING AND CLOSING: SUCTION STOP VALVE

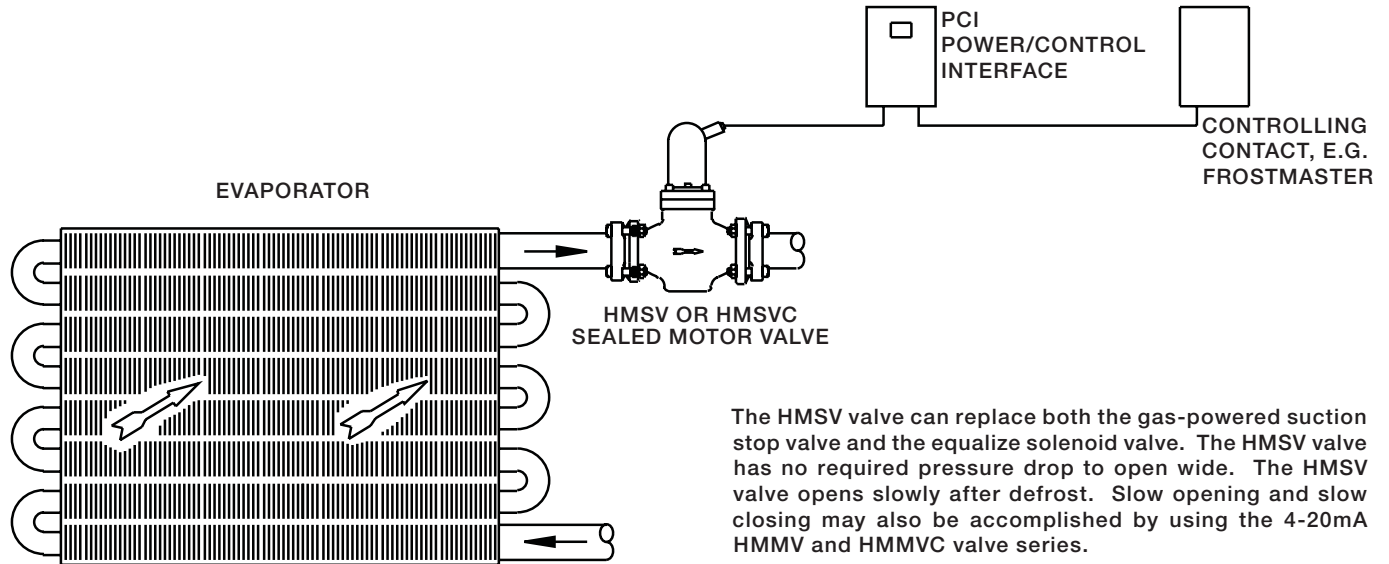

The HMSV valve can replace both the gas-powered suction stop valve and the equalize solenoid valve. The HMSV valve has no required pressure drop to open wide. The HMSV valve opens slowly after defrost. Slow opening and slow closing may also be accomplished by using the 4-20mA HMMV and HMMVC valve series.

NO PRESSURE DROP: GRAVITY DRAIN

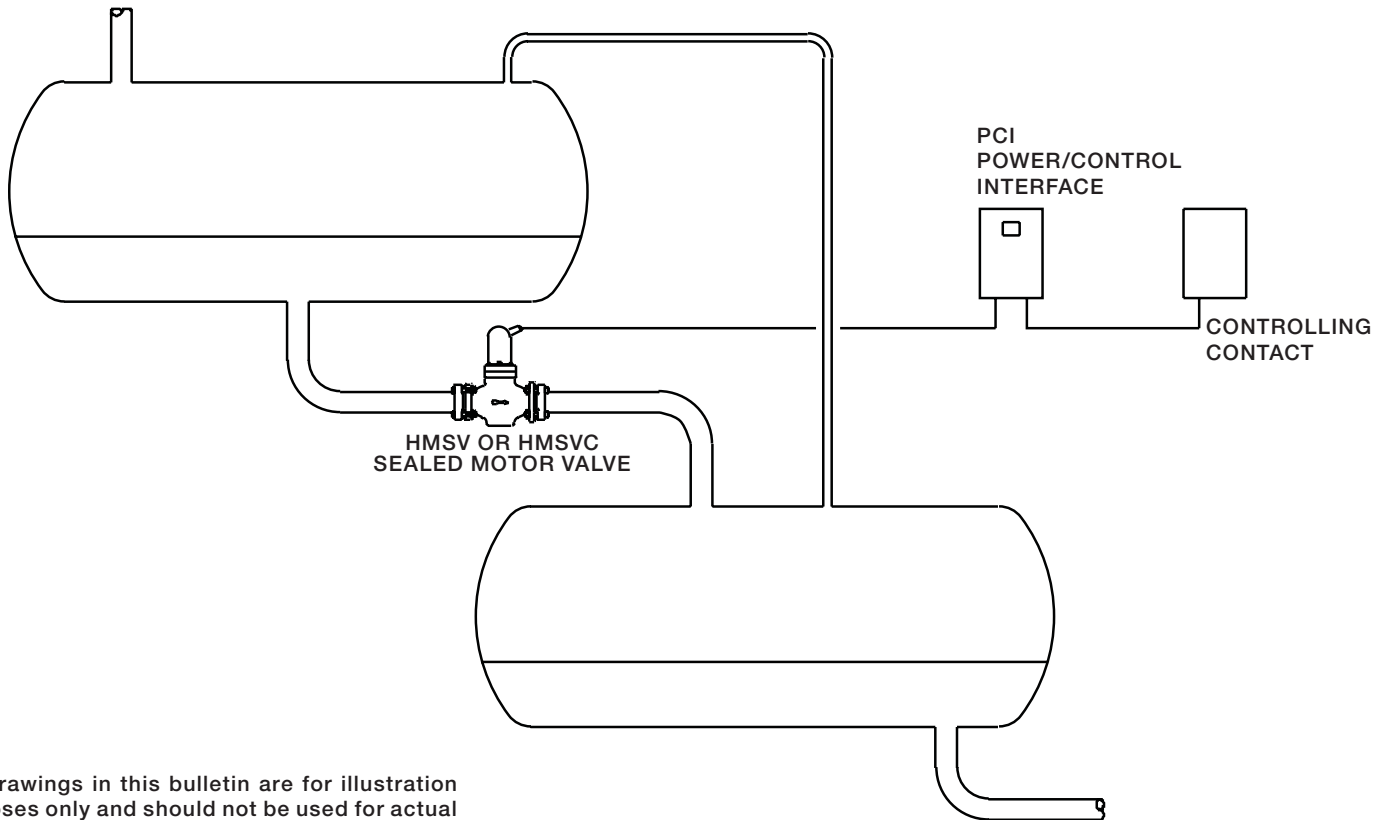

The drawings in this bulletin are for illustration purposes only and should not be used for actual engineering or installation. Not to scale.

Applications shown use Hansen supplied controllers, however, the Hansen HMMV, HMMR, HMXV, HMSV valve series can be integrated into most customer control systems.

HMMV/HMMVC AND HMSV/HMSVC SUCTION VAPOR CAPACITIES

AMMONIA SUCTION VAPOR CAPACITIES, TONS

Evap. Temp.	Pressure Drop	3/4"		1"		1-1/4"		1-1/2"		2"		3"			4"		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
40	.25	1.5	4.2	2.7	8.0	3.7	11	8.2	24	11	32	24	45	71	37	75	113
	.50	2.1	6.0	3.7	11	5.4	16	12	34	15	45	34	63	100	53	106	160
	1.00	2.9	8.5	5.3	16	7.4	22	16	48	22	64	47	89	141	75	150	226
	2.00	4.1	12.0	7.3	22	10	31	23	67	31	90	67	126	199	105	210	317
	5	6.5	19	12	35	16	49	36	106	48	142	106	200	315	166	332	501
	10	9.2	27	16	49	23	69	51	150	69	201	150	282	445	235	470	709
	15	11.3	33	20	60	28	85	63	183	84	246	183	346	545	288	575	868
20	13.0	38	23	70	33	98	73	212	97	285	212	399	629	332	664	1002	
0	.25	1.0	2.8	1.7	5.1	2.4	7.1	5.1	15	6.8	20	15	29	45	24	48	72
	.50	1.3	3.9	2.4	7.1	3.4	10	7.2	21	9.9	29	21	40	63	33	67	101
	1.00	1.9	5.5	3.3	10	4.7	14	10	30	14	40	30	56	89	47	94	142
	2.00	2.6	7.6	4.7	14	6.7	20	14	42	19	56	42	79	124	65	131	197
	5	4.1	12	7.4	22	11	32	23	66	30	89	66	124	196	103	206	311
	10	5.8	17	10	31	15	45	32	94	43	125	93	176	277	146	292	441
	15	7.2	21	13	38	18	55	39	115	52	153	114	216	340	179	358	540
20	8.3	24	15	44	21	63	46	133	60	177	132	249	392	206	413	623	
-40	.25	0.7	1.9	1.1	3.4	1.6	4.7	3.4	10	4.8	14	10	19	30	16	32	48
	.50	0.9	2.6	1.6	4.7	2.2	6.6	4.8	14	6.5	19	14	27	42	22	44	67
	1.00	1.2	3.6	2.2	6.5	3.1	9.2	6.9	20	8.9	26	20	37	58	31	62	93
	2.00	1.7	4.8	2.9	8.8	4.0	12	8.9	26	12	36	27	50	79	41	83	125
	5	2.6	7.6	4.6	14	6.4	19	14	41	19	57	42	79	125	65	131	198
	10	3.7	11	6.6	20	9.0	27	20	58	27	80	59	112	177	93	185	280
	15	4.5	13	8.0	24	11	33	24	71	34	99	73	137	216	113	227	342
20	5.2	15	9.3	28	13	38	28	82	39	114	84	159	250	131	262	395	
Cv		2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166

AMMONIA SUCTION VAPOR CAPACITIES, KILOWATTS

Evap. Temp.	Pressure Drop	20		25		32		45		50		80			100		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
5	.02	5.4	16	10	30	14	42	30	90	41	123	91	183	271	143	275	433
	.04	7.6	23	14	42	20	59	43	128	58	175	129	258	383	203	388	613
	.08	11	33	20	60	28	84	60	180	82	247	183	365	542	287	549	867
	.15	15	45	27	82	39	115	82	247	112	338	250	500	742	393	752	1187
	.4	24	73	44	134	63	188	134	403	184	552	408	817	1212	642	1229	1938
	.6	29	90	54	164	77	230	165	494	225	676	500	1000	1484	786	1505	2374
	1.0	38	116	70	212	100	297	213	638	290	873	646	1292	1916	1014	1942	3065
1.4	45	137	83	251	118	351	252	755	343	1033	764	1528	2267	1200	2298	3626	
-20	.02	3.1	9.5	5.8	18	8.2	24	18	53	23	70	53	105	156	82	158	249
	.04	4.4	13	8.2	25	12	35	25	74	33	99	75	149	221	117	223	352
	.08	6.2	19	12	35	16	49	35	105	47	140	105	211	313	165	316	498
	.15	8.5	26	16	48	22	67	48	144	64	192	144	289	428	226	432	682
	.4	13.9	42	26	78	37	109	78	235	104	314	236	471	699	369	706	1114
	.6	17.0	52	32	96	45	134	96	288	128	384	289	577	856	451	865	1364
	1	22.0	67	41	124	58	173	124	372	165	496	373	745	1105	583	1116	1761
1.4	26.0	79	48	147	69	205	147	440	195	587	441	882	1308	690	1321	2084	
-40	.02	2.2	7	3.9	12	5.5	16	11	34	16	47	35	71	105	56	106	168
	.04	3.0	9	5.5	17	8	23	16	49	22	67	50	100	149	79	151	238
	.08	4.3	13	8	23	11	33	23	69	32	95	71	142	210	111	213	336
	.15	5.9	18	11	32	15	45	31	94	43	130	97	194	288	152	292	460
.4	10	29	17	52	25	73	51	154	71	212	159	317	470	249	476	751	
Kv		1.8	5.5	3.3	10	4.7	14	10	30	13.3	40	30	60	89	47	90	142

Reduced Capacity V-Ports shown in gray.

For best control and modulation, size the SMV valve for both the full load capacity and the minimum load capacity (weekend load). The minimum load capacity should be at least 15% of the full load capacity. The capacity tables are conservative, so it is not necessary to add a safety factor for capacity.

Ammonia, R-22 and R-134a capacities assume 86°F (30°C) condensing, except -40°F (-40°C) assumes +20°F (-7°C) liquid (e.g. two stage). R-404 and R-507 assume 95°F (35°C) condensing. For overfeed evaporator suction, add 20% to the evaporator load or use next larger size valve to accommodate liquid volume.

HMMV/HMMVC AND HMSV/HMSVC SUCTION VAPOR CAPACITIES

R-22 SUCTION VAPOR CAPACITIES, TONS

Evap. Temp.	Pressure Drop	3/4"		1"		1-1/4"		1-1/2"		2"		3"			4"		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
40	.25	0.5	1.6	1.0	2.9	1.4	4.2	3.0	8.8	4.0	12	8.7	16	26	14	27	41
	.50	0.8	2.3	1.4	4.1	2.0	6.0	4.3	13	5.6	17	12	23	37	19	39	59
	1.00	1.1	3.2	1.9	5.8	2.8	8.5	6.1	18	7.9	23	17	33	52	27	55	83
	2.00	1.5	4.5	2.7	8.2	4.0	12	8.6	25	11	33	25	46	73	39	78	117
	5	2.4	7.1	4.3	13	6.4	19	14	40	18	52	39	73	115	61	123	185
	10	3.5	10	6.1	18	9.0	27	19	56	25	74	55	104	163	87	173	262
	15	4.2	12	7.5	22	11	33	23	68	31	90	67	127	200	106	212	320
20	4.9	14	8.6	26	13	38	27	79	36	104	78	146	231	123	245	370	
0	.25	0.3	1.0	0.6	1.8	0.9	2.6	1.8	5.3	2.5	7.4	5.5	10	16	8.6	17	26
	.50	0.5	1.4	0.9	2.6	1.2	3.7	2.6	7.5	3.6	11	7.7	15	23	12	24	37
	1.00	0.7	2.0	1.2	3.7	1.7	5.2	3.6	11	5.1	15	11	21	33	17	34	52
	2.00	1.0	2.8	1.7	5.2	2.4	7.3	5.1	15	7.1	21	15	29	46	24	48	73
	5	1.5	4.4	2.7	8.2	3.9	12	8.1	24	11	33	24	46	73	38	76	115
	10	2.2	6.3	3.9	12	5.5	16	11	34	16	47	35	65	103	54	108	163
	15	2.6	7.7	4.7	14	6.7	20	14	41	20	58	42	80	126	66	132	200
20	3.0	8.9	5.5	16	7.7	23	16	47	23	66	49	92	145	76	153	231	
-40	.25	0.3	0.8	0.5	1.4	0.7	2.0	1.5	4.2	1.9	5.7	4	8	12	7	13	20
	.50	0.4	1.1	0.7	2.0	0.9	2.8	2.1	6.0	2.7	8.0	6	11	18	9	19	29
	1.00	0.5	1.6	0.9	2.8	1.3	4.0	2.9	8.5	3.9	11	8	16	25	13	27	40
	2.00	0.8	2.2	1.3	4.0	1.9	5.6	4.1	12	5.4	16	12	22	35	19	38	57
	5	1.2	3.5	2.1	6.3	3.0	8.9	6.5	19	8.6	25	19	35	55	30	60	90
	10	1.7	4.9	3.0	8.9	4.2	13	9.2	27	12	36	26	50	78	42	84	127
	15	2.1	6.0	3.7	11	5.1	15	11	33	15	44	32	61	96	52	103	156
20	2.4	7.0	4.2	13	5.9	18	13	38	17	51	37	70	111	60	119	180	
Cv		2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166

US

R-22 SUCTION VAPOR CAPACITIES, KILOWATTS

Evap. Temp.	Pressure Drop	20		25		32		45		50		80			100		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
5	.02	2.2	7	4	12	6	17	11	34	16	49	36	72	107	57	109	171
	.04	3.0	9	6	17	8	24	16	48	23	69	51	102	151	80	154	242
	.08	4	13	8	24	11	34	22	67	33	98	72	144	214	113	217	343
	.15	6	18	11	33	15	46	31	92	45	134	99	198	293	155	297	469
	.4	10	29	18	54	25	75	50	150	73	219	161	323	478	253	485	766
	.6	12	36	22	66	31	92	61	184	89	268	198	395	586	310	595	938
	1.0	15	46	28	85	40	119	79	238	115	346	255	510	757	401	768	1211
1.4	18	55	33	101	47	141	94	281	136	409	302	603	895	474	908	1433	
-20	.02	1.3	4.0	2.3	7	3.3	10	7	21	10	29	22	43	64	34	65	102
	.04	1.9	6	3.2	10	5	14	10	30	14	41	30	61	90	48	92	145
	.08	2.6	8	5	14	7	20	14	42	19	58	43	86	128	68	130	204
	.15	3.6	11	6	19	9	27	19	58	27	80	59	118	175	93	177	280
	.4	5.9	18	10	31	15	44	32	95	43	131	96	193	286	151	290	457
	.6	7.2	22	13	38	18	54	39	116	53	160	118	236	350	185	355	560
	1	9.3	28	16	49	23	70	50	150	69	207	152	305	452	239	458	723
1.4	11.0	34	19	58	28	82	59	177	81	244	180	360	535	283	542	855	
-40	.02	1.0	3	1.8	5	2.6	8	5	16	7	22	16	33	49	26	49	78
	.04	1.4	4	2.6	8	4	11	8	23	10	32	23	46	69	36	70	110
	.08	1.9	6	4	11	5	15	11	32	15	45	33	65	97	51	99	156
	.15	2.6	8	5	15	7	21	15	44	20	61	45	90	133	71	135	213
.4	6	18	10	31	15	44	32	95	43	131	96	193	286	151	290	457	
Kv		1.8	5.5	3.3	10	4.7	14	10	30	13.3	40	30	60	89	47	90	142

METRIC

Reduced Capacity V-Ports shown in gray.

For best control and modulation, size the SMV valve for both the full load capacity and the minimum load capacity (weekend load). The minimum load capacity should be at least 15% of the full load capacity. The capacity tables are conservative, so it is not necessary to add a safety factor for capacity.

Ammonia, R-22 and R-134a capacities assume 86°F (30°C) condensing, except -40°F (-40°C) assumes +20°F (-7°C) liquid (e.g. two stage). R-404 and R-507 assume 95°F (35°C) condensing. For overfeed evaporator suction, add 20% to the evaporator load or use next larger size valve to accommodate liquid volume.

HMMV/HMMVC AND HMSV/HMSVC SUCTION VAPOR CAPACITIES

R-134a SUCTION VAPOR CAPACITIES, TONS

Evap. Temp.	Pressure Drop	3/4"		1"		1-1/4"		1-1/2"		2"		3"			4"		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
40	.25	0.4	1.3	0.8	2.3	1.1	3.2	2.3	6.7	3.1	9.2	6.9	13	21	11	22	33
	.50	0.6	1.8	1.1	3.3	1.5	4.6	3.3	10	4.4	13	10	18	29	15	30	46
	1.00	0.9	2.5	1.5	4.6	2.2	6.4	4.6	13	6.3	18	14	26	41	22	43	65
	2.00	1.2	3.6	2.2	6.5	3.1	9.1	6.5	19	8.9	26	20	37	58	30	61	92
	5	2.0	5.7	3.4	10	4.8	14	10	30	14	41	31	58	92	48	96	145
	10	2.8	8.0	4.8	15	6.8	20	15	42	20	58	44	82	130	68	136	206
	15	3.4	10	5.9	18	8.4	25	18	52	24	71	53	101	159	83	167	252
20	3.9	11	6.9	21	10	29	21	60	28	82	62	116	183	96	193	291	
0	.25	0.3	0.7	0.4	1.3	0.6	1.9	1.3	3.9	1.8	5.3	4.0	7.6	12	6.3	13	19
	.50	0.4	1.1	0.6	1.9	0.9	2.7	1.9	5.5	2.6	7.5	5.7	11	17	8.9	18	27
	1.00	0.5	1.5	0.9	2.7	1.3	3.7	2.7	7.8	3.6	11	8.1	15	24	13	25	38
	2.00	0.7	2.1	1.3	3.8	1.8	5.3	3.8	11	5.1	15	11	22	34	18	36	54
	5	1.1	3.3	2.0	6.0	2.8	8.4	6.0	17	8.1	24	18	34	54	28	57	85
	10	1.6	4.7	2.8	8.5	4.0	12	8.4	25	11	34	26	48	76	40	80	121
	15	2.0	5.8	3.5	10	4.9	15	10	30	14	41	31	59	93	49	98	148
20	2.3	6.6	4.0	12	5.6	17	12	35	16	47	36	68	108	57	113	171	
-40	.25	0.1	0.4	0.2	0.7	0.3	0.9	0.7	2.0	0.9	2.7	2.0	3.8	6.0	3.2	6.3	10
	.50	0.2	0.5	0.3	1.0	0.4	1.3	1.0	2.9	1.3	3.8	2.9	5.4	8.5	4.5	8.9	14
	1.00	0.2	0.7	0.4	1.3	0.6	1.8	1.4	4.0	1.8	5.4	4.0	7.6	12	6.3	13	19
	2.00	0.3	1.0	0.6	1.9	0.9	2.6	2.0	5.7	2.6	7.6	5.7	11	17	8.9	18	27
	5	0.5	1.6	1.0	3.0	1.4	4.1	3.1	9.0	4.1	12	9.0	17	27	14	28	43
	10	0.8	2.2	1.4	4.2	1.9	5.8	4.4	13	5.8	17	13	24	38	20	40	60
	15	0.9	2.7	1.7	5.2	2.4	7.1	5.4	16	7.1	21	16	30	47	24	49	74
20	1.1	3.2	2.0	6.0	2.8	8.2	6.2	18	8.2	24	18	34	54	28	57	85	
Cv		2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166

R-134a SUCTION VAPOR CAPACITIES, KILOWATTS

Evap. Temp.	Pressure Drop	20		25		32		45		50		80			100		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
5	.02	1.7	5	3	9	4	13	9	27	13	38	28	56	83	44	84	132
	.04	2.4	7	4	13	6	18	13	39	18	53	39	79	117	62	118	187
	.08	3	10	6	18	9	26	18	55	25	75	56	111	165	88	168	264
	.15	5	14	8	25	12	35	25	75	34	103	76	152	226	120	229	362
	.4	7	23	13	41	19	57	41	122	56	168	124	249	369	196	375	591
	.6	9	28	17	50	24	70	50	150	68	206	152	305	452	240	459	724
	1.0	12	36	21	65	30	90	65	194	88	266	197	393	584	309	592	935
	1.4	14	43	25	76	36	107	76	229	105	315	233	465	690	366	701	1106
-20	.02	0.9	2.7	1.7	5	2.3	7	5	15	7	20	15	30	45	24	45	71
	.04	1.3	4	2.4	7	3	10	7	21	10	29	21	42	63	33	64	101
	.08	1.8	5	3	10	5	14	10	30	14	41	30	60	89	47	90	142
	.15	2.5	7.5	5	14	6	19	14	41	19	56	41	82	122	65	124	195
	.4	4.0	12	8	23	10	31	22	67	30	91	67	134	199	105	202	318
	.6	4.9	15	9	28	13	38	27	82	37	112	82	164	244	129	247	390
	1	6.3	19	12	36	16	49	35	106	48	145	106	212	315	167	319	503
	1.4	7.5	23	14	43	19	58	42	125	57	171	126	251	373	197	378	596
-40	.02	0.5	1	0.8	3	1.2	4	3	8	4	11	8	16	24	13	24	38
	.04	0.7	2	1.2	4	2	5	4	11	5	15	11	23	34	18	34	54
	.08	1.0	3	2	5	2	7	5	16	7	22	16	32	47	25	48	76
	.15	1.3	4	2	7	3	10	7	22	10	30	22	44	65	34	66	104
	.4	2	7	4	11	5	16	12	36	16	49	36	72	106	56	108	170
Kv		1.8	5.5	3.3	10	4.7	14	10	30	13.3	40	30	60	89	47	90	142

Reduced Capacity V-Ports shown in gray.

For best control and modulation, size the SMV valve for both the full load capacity and the minimum load capacity (weekend load). The minimum load capacity should be at least 15% of the full load capacity. The capacity tables are conservative, so it is not necessary to add a safety factor for capacity.

Ammonia, R-22 and R-134a capacities assume 86°F (30°C) condensing, except -40°F (-40°C) assumes +20°F (-7°C) liquid (e.g. two stage). R-404 and R-507 assume 95°F (35°C) condensing. For overfeed evaporator suction, add 20% to the evaporator load or use next larger size valve to accommodate liquid volume.

HMMV/HMMVC AND HMSV/HMSVC SUCTION VAPOR CAPACITIES

R-404 SUCTION VAPOR CAPACITIES, TONS

Evap. Temp.	Pressure Drop	3/4"		1"		1-1/4"		1-1/2"		2"		3"			4"		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
°F	(psi)																
40	.25	0.5	1.4	0.8	2.5	1.2	3.5	2.5	7.4	3.4	9.9	7.5	14	22	12	23	35
	.50	0.7	2.0	1.2	3.6	1.7	5.0	3.6	11	4.8	14	11	20	32	17	33	50
	1.00	0.9	2.8	1.7	5.0	2.4	7.1	5.1	15	6.7	20	15	28	45	23	47	71
	2.00	1.3	3.9	2.4	7.1	3.4	10	7.2	21	9.5	28	21	40	63	33	66	100
	5	2.1	6.2	3.7	11	5.3	16	11	33	15	44	34	63	100	52	105	158
	10	3.0	8.7	5.3	16	7.5	22	16	47	21	63	47	89	141	74	148	224
	15	3.7	11	6.5	19	9.2	27	20	58	26	77	58	109	173	91	181	274
20	4.2	12	7.5	22	11	32	23	66	30	89	67	126	199	105	210	316	
0	.25	0.3	0.8	0.5	1.4	0.7	2.1	1.5	4.2	2.0	6.0	4.4	8.3	13	6.9	14	21
	.50	0.4	1.2	0.7	2.1	1.0	2.9	2.1	6.0	2.9	8.5	6.2	12	19	9.8	20	30
	1.00	0.6	1.6	1.0	2.9	1.4	4.1	2.9	8.5	4.1	12	8.8	17	26	14	28	42
	2.00	0.8	2.3	1.4	4.1	1.9	5.8	4.1	12	5.8	17	12	23	37	20	39	59
	5	1.3	3.6	2.2	6.5	3.1	9.2	6.5	19	9.2	27	20	37	59	31	62	93
	10	1.8	5.1	3.1	9.2	4.3	13	9.2	27	13	38	28	53	83	44	87	132
	15	2.2	6.3	3.7	11	5.3	16	11	33	16	47	34	64	101	54	107	162
20	2.5	7.3	4.3	13	6.2	18	13	38	18	54	39	74	117	62	124	187	
-40	.25	0.1	0.4	0.3	0.8	0.4	1.1	0.8	2.3	1.1	3.1	2.4	4.5	7.1	3.6	7.3	11
	.50	0.2	0.6	0.4	1.1	0.5	1.6	1.1	3.3	1.5	4.5	3.4	6.3	10	5.1	10	16
	1.00	0.3	0.8	0.5	1.6	0.7	2.2	1.6	4.7	2.1	6.3	4.8	9.0	14	7.3	15	22
	2.00	0.4	1.2	0.7	2.2	1.0	3.1	2.3	6.6	3.0	8.9	6.7	13	20	10	21	31
	5	0.7	1.9	1.2	3.5	1.6	4.9	3.6	10	4.8	14	11	20	32	16	32	49
	10	0.9	2.7	1.6	4.9	2.3	6.9	5.1	15	6.8	20	15	28	45	23	46	69
	15	1.1	3.3	2.0	6.0	2.8	8.5	6.2	18	8.3	24	18	35	55	28	56	85
20	1.3	3.8	2.3	7.0	3.3	9.8	7.2	21	9.6	28	21	40	63	32	65	98	
Cv		2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166

US

R-404 SUCTION VAPOR CAPACITIES, KILOWATTS

Evap. Temp.	Pressure Drop	20		25		32		45		50		80			100		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
°C	(bar)																
5	.02	1.8	5.5	3.4	10	4.8	14	10	31	14	42	31	62	92	48	93	146
	.04	2.5	7.7	4.8	14	6.8	20	14	43	20	59	44	87	130	69	131	207
	.08	3.6	11	6.7	20	9.6	28	20	61	28	83	62	124	183	97	186	293
	.15	4.9	15	9.2	28	13	39	28	84	38	114	85	169	251	133	254	401
	.4	8.0	24	15	46	21	64	46	137	62	186	138	276	410	217	415	655
	.6	9.8	30	18	56	26	78	56	168	76	228	169	338	502	265	508	802
	1.0	13	39	24	72	34	101	72	217	98	294	218	437	648	343	656	1035
1.4	15	46	28	86	40	119	86	257	116	348	258	517	767	405	776	1225	
-20	.02	1.0	3.1	1.8	5.5	2.6	7.7	5.6	17	7.6	23	17	34	50	27	51	81
	.04	1.4	4.3	2.6	7.7	3.6	11	7.9	24	11	33	24	48	71	38	72	114
	.08	2.0	6.1	3.6	11	5.1	15	11	34	15	46	34	68	101	53	102	161
	.15	2.7	8.4	5.0	15	7.1	21	15	46	21	63	47	93	138	73	140	221
	.4	4.5	14	8.1	24	12	34	25	75	34	103	76	152	225	119	229	361
	.6	5.5	17	10	30	14	42	31	92	42	126	93	186	276	146	280	442
	1	7.1	22	13	39	18	54	40	119	54	163	120	240	356	189	362	571
1.4	8.4	26	15	46	22	64	47	141	64	192	142	284	422	223	428	675	
-40	.02	0.6	1.8	1.0	3.2	1.5	4.4	3.2	9.5	4.4	13	9.6	19	28	15	29	45.6
	.04	0.8	2.5	1.5	4.5	2.1	6.2	4.5	13	6.2	19	14	27	40	21	41	64.5
	.08	1.1	3.5	2	6.4	2.9	8.8	6.3	19	8.7	26	19	38	57	30	58	91.3
	.15	1.6	4.8	3	8.7	4.0	12	8.7	26	12	36	26	53	78	41	79	125
.4	3	8	5	14	7	20	14	42	20	59	43	86	127	68	129	204	
Kv		1.8	5.5	3.3	10	4.7	14	10	30	13.3	40	30	60	89	47	90	142

METRIC

Reduced Capacity V-Ports shown in gray.

For best control and modulation, size the SMV valve for both the full load capacity and the minimum load capacity (weekend load). The minimum load capacity should be at least 15% of the full load capacity. The capacity tables are conservative, so it is not necessary to add a safety factor for capacity.

Ammonia, R-22 and R-134a capacities assume 86°F (30°C) condensing, except -40°F (-40°C) assumes +20°F (-7°C) liquid (e.g. two stage). R-404 and R-507 assume 95°F (35°C) condensing. For overfeed evaporator suction, add 20% to the evaporator load or use next larger size valve to accommodate liquid volume.

HMMV/HMMVC AND HMSV/HMSVC SUCTION VAPOR CAPACITIES

R-507 SUCTION VAPOR CAPACITIES, TONS

Evap. Temp.	Pressure Drop	3/4"		1"		1-1/4"		1-1/2"		2"		3"			4"		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
°F	(psi)																
40	.25	0.5	1.4	0.9	2.6	1.2	3.5	2.7	7.8	3.5	10	7.7	15	23	12	24	37
	.50	0.7	2.0	1.2	3.7	1.7	5.0	3.8	11	4.9	15	11	21	33	17	34	52
	1.00	1.0	2.8	1.7	5.2	2.4	7.1	5.3	16	7.0	21	15	29	46	24	49	74
	2.00	1.4	4.0	2.4	7.3	3.4	10	7.5	22	9.9	29	22	41	65	34	69	104
	5	2.2	6.3	3.8	12	5.3	16	12	35	16	46	35	65	103	54	109	164
	10	3.1	8.9	5.4	16	7.5	22	17	49	22	65	49	92	145	77	154	233
	15	3.8	11	6.7	20	9.2	27	21	60	27	79	60	113	178	94	189	285
	20	4.3	13	7.7	23	11	32	24	70	31	92	69	130	206	109	218	329
0	.25	0.3	0.8	0.5	1.6	0.7	2.2	1.6	4.6	2.2	6.4	4.6	8.8	14	7.3	15	22
	.50	0.4	1.2	0.7	2.2	1.0	3.1	2.2	6.5	3.1	9.0	6.6	12	20	10	21	31
	1.00	0.6	1.7	1.0	3.1	1.4	4.3	3.2	9.2	4.3	13	9.3	18	28	15	29	44
	2.00	0.8	2.4	1.5	4.4	2.0	6.1	4.5	13	6.1	18	13	25	39	21	41	62
	5	1.3	3.8	2.3	7.0	3.2	9.6	7.0	21	9.7	28	21	39	62	32	65	98
	10	1.8	5.4	3.3	9.8	4.6	14	10	29	14	40	29	55	87	46	92	139
	15	2.3	6.6	4.0	12	5.6	17	12	36	17	49	36	68	107	56	113	170
	20	2.6	7.6	4.6	14	6.5	19	14	41	19	57	42	78	123	65	130	196
-40	.25	0.2	0.5	0.3	0.8	0.4	1.2	0.9	2.5	1.1	3.4	2.5	4.7	7.4	3.9	7.7	12
	.50	0.2	0.7	0.4	1.2	0.6	1.7	1.2	3.6	1.6	4.8	3.5	6.7	11	5.5	11	17
	1.00	0.3	0.9	0.6	1.7	0.8	2.3	1.7	5.0	2.3	6.7	5.0	9.4	15	7.7	15	23
	2.00	0.4	1.3	0.8	2.4	1.1	3.3	2.4	7.1	3.2	9.5	7.1	13	21	11	22	33
	5	0.7	2.1	1.3	3.8	1.7	5.2	3.8	11	5.1	15	11	21	33	17	35	52
	10	1.0	2.9	1.8	5.4	2.5	7.4	5.4	16	7.2	21	16	30	47	24	49	74
	15	1.2	3.6	2.2	6.6	3.0	9.0	6.7	19	8.9	26	19	36	58	30	60	90
	20	1.4	4.1	2.5	7.6	3.5	10	7.7	22	10	30	22	42	66	35	69	104
Cv		2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166

R-507 SUCTION VAPOR CAPACITIES, KILOWATTS

Evap. Temp.	Pressure Drop	20		25		32		45		50		80			100		
		HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVB	HMMV	HMMR	HMMVB	HMMV
°C	(bar)																
5	.02	1.9	5.8	3.5	11	4.9	15	11	32	14	43	32	64	95	50	96	152
	.04	2.7	8.3	4.9	15	6.9	21	15	45	20	61	45	91	134	71	136	215
	.08	3.8	12	7.0	21	9.8	29	21	64	29	87	64	128	190	101	193	304
	.15	5.2	16	9.6	29	13	40	29	87	40	119	88	175	260	138	264	416
	.4	8.6	26	16	47	22	65	47	142	65	194	143	286	425	225	431	679
	.6	10	32	19	58	27	80	58	174	79	238	175	351	520	275	527	832
	1.0	14	41	25	75	35	103	75	225	102	307	226	453	671	356	681	1074
	1.4	16	49	29	89	41	122	89	266	121	364	268	535	794	421	806	1271
-20	.02	1.1	3.2	1.9	5.8	2.8	8.4	6.0	18	8.0	24	18	36	53	28	54	85
	.04	1.5	4.6	2.7	8.3	4.0	12	8.4	25	11	34	25	51	75	40	76	120
	.08	2.1	6.5	3.9	12	5.6	17	12	36	16	48	36	72	107	56	108	170
	.15	2.9	8.9	5.3	16	7.7	23	16	49	22	66	49	98	146	77	148	233
	.4	4.8	15	8.6	26	13	38	27	80	36	108	80	161	238	126	241	380
	.6	5.8	18	11	32	15	46	33	98	44	132	98	197	292	154	295	466
	1	7.5	23	14	41	20	59	42	127	57	170	127	254	377	199	381	602
	1.4	8.9	27	16	49	24	70	50	150	67	202	150	301	446	236	451	712
-40	.02	0.6	1.9	1.1	3.4	1.6	4.7	3.4	10	4.6	14	10	21	31	16	31	49
	.04	0.9	2.6	1.6	4.8	2.3	6.7	4.8	14	6.5	20	15	29	43	23	44	69
	.08	1.2	3.7	2.2	6.8	3.2	9.5	6.8	20	9.2	28	21	41	61	32	62	98
	.15	1.7	5.1	3.1	9.3	4.4	13	9.3	28	13	38	28	57	84	44	85	134
	.4	2.7	8	5.0	15	7	21	15	46	21	62	46	92	137	72	139	219
Kv		1.8	5.5	3.3	10	4.7	14	10	30	13.3	40	30	60	89	47	90	142

Reduced Capacity V-Ports shown in gray.

For best control and modulation, size the SMV valve for both the full load capacity and the minimum load capacity (weekend load). The minimum load capacity should be at least 15% of the full load capacity. The capacity tables are conservative, so it is not necessary to add a safety factor for capacity.

Ammonia, R-22 and R-134a capacities assume 86°F (30°C) condensing, except -40°F (-40°C) assumes +20°F (-7°C) liquid (e.g. two stage). R-404 and R-507 assume 95°F (35°C) condensing. For overfeed evaporator suction, add 20% to the evaporator load or use next larger size valve to accommodate liquid volume.

HMMR/HMMRC AND HMXV/HMXVC LIQUID MAKE-UP CAPACITIES

US TONS

Port Size (Inches)	Model Number	Recommended Minimum Line Size		Cv	Capacity Range, Tons									
		Ammonia	Halocarbon		Ammonia		R-22		R-134a		R-404		R-507	
					High to Intermediate	Intermediate to Low	High to Intermediate	Intermediate to Low	High to Intermediate	Intermediate to Low	High to Intermediate	Intermediate to Low	High to Intermediate	Intermediate to Low
3/16"	HMXV/A	3/4"	1"	.6	45	30	9	8	8	5	6	5	8	6
7/32", 1/4"	HMXV/B	1"	1-1/4"	1.1	83	55	17	15	15	10	12	10	15	11
3/4"	HMMR	1-1/4"	1-1/2"	2.2	166	110	35	30	30	20	25	20	30	22
1"	HMMR	1-1/2"	2"	3.9	294	190	60	50	50	40	45	40	50	40
1-1/4"	HMMR	2"	2"	5.5	415	270	85	70	70	50	60	50	75	55
1-1/2" R	HMMRB	2"	2-1/2"	6.0	455	290	95	75	80	55	68	55	83	60
1-1/2"	HMMR	3"	3"	12	910	580	190	150	160	110	135	110	165	120
2"	HMMR	3"	3"	16	1210	780	250	200	210	150	180	150	220	160
3" R	HMMRA	2-1/2"	3"	10	750	488	156	125	131	94	113	94	138	100
3" R	HMMRB	3"	3"	16	1210	780	250	200	210	150	180	150	220	160
3"	HMMR	5"	5"	35	2640	1700	540	430	460	320	395	330	480	356
4" R	HMMRA	4"	4"	16	1210	780	250	200	210	150	180	150	220	160
4" R	HMMRB	4"	5"	27	2037	1311	417	329	358	250	304	255	371	275
4"	HMMR	6"	6"	55	4150	2670	850	670	730	510	620	520	755	560

US

METRIC KILOWATTS

Port Size (mm)	Model Number	Recommended Minimum Line Size		Kv	Capacity Range, Tons									
		Ammonia	Halocarbon		Ammonia		R-22		R-134a		R-404		R-507	
					High to Intermediate	Intermediate to Low	High to Intermediate	Intermediate to Low	High to Intermediate	Intermediate to Low	High to Intermediate	Intermediate to Low	High to Intermediate	Intermediate to Low
5	HMXV/A	20	25	0.5	157	101	32	25	27	19	24	20	28	20
7	HMXV/B	25	32	0.9	290	188	60	47	50	35	44	37	52	37
20	HMMR	32	40	1.8	584	377	120	95	100	70	88	74	105	75
25	HMMR	40	50	3.3	1035	665	210	165	185	125	155	130	185	140
32	HMMR	50	50	4.7	1460	940	300	235	256	180	220	185	265	195
40R	HMMRB	50	65	5.0	1595	1025	328	258	325	195	238	200	290	215
40	HMMR	80	80	10.0	3190	2050	655	515	650	390	475	400	580	430
50	HMMR	80	80	13.3	4250	2740	875	685	750	520	640	530	770	575
80 R	HMMRA	65	80	8.5	2632	1697	541	425	462	322	394	329	479	357
80 R	HMMRB	80	80	14.0	4335	2795	891	700	761	530	649	541	789	588
80	HMMR	125	125	30.0	9290	5990	1910	1500	1630	1135	1390	1160	1690	1260
100 R	HMMRA	100	100	14.0	4349	2800	894	703	763	530	649	542	792	584
100 R	HMMRB	100	125	23.0	7145	4600	1468	1155	1253	871	1067	891	1302	959
100	HMMR	150	150	47.0	14600	9400	3000	2360	2560	1780	2180	1820	2660	1960

METRIC

Ammonia line size capacities are based on IIR Refrigeration Piping Handbook tables. Halocarbon line size capacities are based on a nominal 3 ft/sec liquid velocity.

For applications with a large pressure drop across the Sealed Motor Valve, attention must be paid to proper outlet line sizing to accommodate flash gas.

Ammonia, R-22 and R134a capacities are based on +86°F (+30°C) saturated liquid and +20°F (-10°C) evaporating temperature, and intermediate to low capacity based on +20°F (-10°C) saturation temperature and -40°F (-40°C) evaporating temperature. R404 and R507 capacities based on +95° F (+35°C) condensing temperature.

HMMV/HMMVC AND HMSV/HMSVC HIGH PRESSURE LIQUID LINE CAPACITIES

AMMONIA HIGH PRESSURE LIQUID LINE CAPACITIES, TONS

Pressure Drop psi	Nominal Size (mm)															
	3/4"		1"		1-1/4"		1- 1/2"		2"		3"			4"		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
1	34	98	60	180	85	254	185	539	246	723	539	1016	1601	847	1693	2555
2	48	139	85	255	120	359	261	762	348	1023	762	1437	2264	1197	2395	3614
Cv	2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166

AMMONIA HIGH PRESSURE LIQUID LINE CAPACITIES, KILOWATTS

Pressure Drop psi	Nominal Size (mm)															
	20		25		32		40		50		80			100		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
0.10	139	425	255	773	363	1082	773	2318	1053	3168	2344	5156	6953	3682	7051	11125
0.20	197	601	361	1093	514	1530	1093	3278	1490	4480	3314	7292	9833	5207	9972	15733
Kv	1.80	5.50	3.30	10.00	4.70	14.00	10.00	30.00	13.30	40.00	30.00	66	89.00	47.00	90.00	142.00

R-22 HIGH PRESSURE LIQUID LINE CAPACITIES, TONS

Pressure Drop psi	Valve Capacity (Tons)															
	3/4"		1"		1-1/4"		1-1/2"		2"		3"			4"		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
1	7	21	12	37	85	254	185	539	246	723	539	1016	1601	847	1693	2555
2	10	29	18	53	120	359	261	762	348	1023	762	1437	2264	1197	2395	3614
Cv	2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166

R-22 HIGH PRESSURE LIQUID LINE CAPACITIES, KILOWATTS

Pressure Drop psi	Nominal Size (mm)															
	20		25		32		40		50		80			100		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
0.10	30	91	54	164	77	230	164	493	218	657	493	1084	1462	772	1478	2332
0.20	42	128	77	232	109	325	232	697	309	929	697	1533	2067	1092	2090	3298
Kv	1.80	5.50	3.30	10.00	4.70	14.00	10.00	30.00	13.30	40.00	30.00	66	89.00	47.00	90.00	142.00

Ammonia, R-22, and R-134a capacities based on +86°F(30°C) saturated liquid, and +20°F (-10°C) evaporator, and no flashing through the valve. R-404 and R-507 based on 95°F(35°C) saturated liquid temperatures.

Refer to page 2 for Liquid Line Sizing. Liquid line based on IAR Pipe Handbook Line Size Capacities.

HMMV/HMMVC AND HMSV/HMSVC HIGH PRESSURE LIQUID LINE CAPACITIES

R-134a HIGH PRESSURE LIQUID LINE CAPACITIES, TONS

Pressure Drop psi	Nominal Size (mm)															
	3/4"		1"		1-1/4"		1-1/2"		2"		3"			4"		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
1	7	19	12	35	16	49	36	104	47	139	104	196	309	163	327	493
2	9	27	16	49	23	69	50	147	67	197	147	277	437	231	462	697
Cv	2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166

R-134a HIGH PRESSURE LIQUID LINE CAPACITIES, KILOWATTS

Pressure Drop psi	Nominal Size (mm)															
	20		25		32		40		50		80			100		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
0.10	27	83	50	152	71	213	152	456	202	607	456	1003	1352	714	1367	2157
0.20	39	118	71	215	101	301	215	645	286	859	644	1418	1912	1010	1934	3051
Kv	1.80	5.50	3.30	10.00	4.70	14.00	10.00	30.00	13.30	40.00	30.00	66	89.00	47.00	90.00	142.00

R-404 HIGH PRESSURE LIQUID LINE CAPACITIES, TONS

Pressure Drop psi	Nominal Size (mm)															
	3/4"		1"		1-1/4"		1-1/2"		2"		3"			4"		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
1	4	13	8	23	11	33	24	69	32	93	69	130	204	108	216	326
2	6	18	11	33	15	46	33	97	45	131	97	183	289	153	305	461
Cv	2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166

R-404 HIGH PRESSURE LIQUID LINE CAPACITIES, KILOWATTS

Pressure Drop psi	Nominal Size (mm)															
	20		25		32		40		50		80			100		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
0.10	19	57	34	103	48	144	103	310	141	423	313	688	928	492	942	1486
0.20	26	80	48	146	68	204	146	438	199	598	443	974	1313	695	1332	2101
Kv	1.80	5.50	3.30	10.00	4.70	14.00	10.00	30.00	13.30	40.00	30.00	66	89.00	47.00	90.00	142.00

R-507 HIGH PRESSURE LIQUID LINE CAPACITIES, TONS

Pressure Drop psi	Nominal Size (inches)															
	3/4"		1"		1-1/4"		1-1/2"		2"		3"			4"		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
1	4	13	8	23	11	33	24	69	32	93	69	130	205	108	216	327
2	6	18	11	33	15	46	33	97	45	131	98	184	290	153	306	462
Cv	2.2	6.4	3.9	11.7	5.5	16.4	12	35	16	47	35	66	104	55	110	166.00

R-507 HIGH PRESSURE LIQUID LINE CAPACITIES, KILOWATTS

Pressure Drop psi	Nominal Size (mm)															
	20		25		32		40		50		80			100		
	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMV	HMMR	HMMVA	HMMV	HMMR	HMMVA	HMMV
0.10	19	57	34	104	49	145	104	311	142	426	315	693	934	495	947	1494
0.20	27	81	49	147	69	205	147	440	200	602	445	980	1321	699	1339	2113
Kv	1.80	5.50	3.30	10.00	4.70	14.00	10.00	30.00	13.30	40.00	30.00	66	89.00	47.00	90.00	142.00

Ammonia, R-22, and R-134a capacities based on +86°F(30°C) saturated liquid, and +20°F (-10°C) evaporator, and no flashing through the valve. R-404 and R-507 based on 95°F(35°C) saturated liquid temperatures.

Refer to page 2 for Liquid Line Sizing. Liquid line based on IIAR Pipe Handbook Line Size Capacities.

**HMMV/HMMVC AND HMSV/HMSVC HOT GAS SOLENOID DEFROST CAPACITIES
EVAPORATOR SIZE IN TONS (kW)**

Refrigerant	Nominal Size (mm)				
	3/4" (20)	1" (25)	1 1/4" (32)	1 1/2" (40)	2" (50)
Ammonia	9-15 (32-53)	15-28 (53-99)	28-39 (99-137)	39-73 (137-256)	73-106 (256-373)
R-22	6-8 (21-28)	8-15 (28-53)	15-20 (53-70)	20-32 (70-113)	32-47 (113-165)
R-134a	1-4 (4-14)	4-8 (14-28)	8-12 (28-42)	12-20 (42-70)	20-38 (70-134)
R-404	3-6 (11-22)	6-10 (22-35)	10-18 (35-63)	18-30 (63-106)	30-44 (106-155)
R-507	1-4 (4-14)	4-8 (14-28)	8-12 (28-42)	12-20 (42-70)	20-38 (70-134)

Evaporator tons at 10°F temperature differential, valve capacities are conservative.

OPERATION: HMMV AND HMMR

The motor shaft is coupled to a threaded stem which directly drives the valve V-port open or closed. The valve is driven by motor windings and electronics placed outside of a hermetic can and hermetically sealed in a liquid tight housing. Inside the can is a motor rotor which drives the motor shaft.

Please note that Sealed Motor Valves 2" and smaller will operate and seal with flow in either direction. 3" and 4" pressure assisted Sealed Motor Valves will only operate and seal with inlet equal to or greater than outlet pressure. Where pressure reversals are expected, a check valve at the outlet of the 3" and 4" SMV is recommended.

The HMMV and HMMR valve are electronically operated by 7 wires. Two wires provide 24 VAC to power the motor. Two wires provide a 4-20 mA input to control the opening and closing of the valve. Two additional wires provide 4-20 mA feedback of actual valve V-port position. The feedback does not have to be connected to operate the valve. The 7th wire is a ground wire.

A 4-20 mA control signal must always be maintained to keep the V-port in position. Loss of 4-20mA signal will drive the valve closed. When driven fully closed or fully open the motor will shut off. Likewise, the motor will shut off when the V-port has reached the position indicated by the 4-20mA input signal. If loss of 24 VAC power occurs, the valve remains in its current position, unless the valve is equipped with Power-Close.

The valve is programmed to close when the signal is less than 4.8 mA (Less than 5% flow). This is to minimize seat erosion during low load conditions.

POWER-CLOSE OPTIONS

Models HMMVC, HMMRC, HMXVC, and HMSVC have an integral capacitor storage to power the valve closed in the event of loss of 24 VAC power.

VPIF VALVE POSITION INDICATOR



The Valve Position Indicator, model VPIF is a digital monitoring module added to the standard Sealed Motor Valve (SMV) product line. The VPIF monitors the valve position during normal operation and is used to recalibrate the valve after service work is performed.

The large LED display allows for viewing of the valve position (in percent) during normal operation. The VPIF contains an internal independent 4 mA and 20 mA current source, which is switch selectable for recalibration at the valve 0% 4 mA (closed) position and 100% 20 mA (full open) position.

The VPIF can be mounted on or near the valve for ease of use and visibility of the display. Often, valves are mounted high in the air or in obstructive areas where the technician cannot easily reach. The VPIF can be mounted up to 10 feet (3 meters) in any direction from the valve. VPIEC Extension Cables are available where more length is required.

ADVANTAGES OF VPIF WITH SMV

In the normal operating mode the VPIF passes the 4 to 20 mA current loop signals and 24V AC to and from the SMV without signal degradation. When used for recalibration, the VPIF will output either 4 mA (fully closed) or 20 mA (fully open). A waterproof 3-position switch on the outside of the VPIF enclosure is used for recalibration of the SMV. The switch in the up position produces 20 mA; the switch in the down position produces a 4 mA signal to the valve. The calibration key must be attached to the designated location on the side of the SMV motor in order for the valve to recalibrate. After recalibration, return the switch to the middle

position (automatic) and remove calibration key.

The VPIF valve position feedback can alert operators to valves controlled by an unstable control scheme. This feature is very important to the proper operation of the refrigeration system and the life of the Sealed Motor Valve. The VPIF is compact and reliable at very low temperatures. Waterproof quick disconnect connectors allow for easy removal of the SMV power head for service.

See Bulletin VPIF for complete details on the Valve Position Indicator.

OPERATION: HMSV

The HMSV motor operates on 24 VAC. (Valves built before January 1, 2005 use 28 VDC power supply.) Electronics inside the stator housing pulse power to the motor to provide strong, slow opening and closing operation with minimal wattage.

The HMSV valve is electrically operated by three wires plus ground. Two wires provide 24 VAC input, and a third is signal, which commands the valve to either open or close. Electrically connecting the signal wire (3) to 24 VAC input wire (1) will drive the valve open. Electrically connecting the signal wire (3) to 24 VAC input wire (2) will drive the valve closed. If the signal wire (3) is not connected to either 24 VAC signal wires, the valve will remain in its last position. (Also, on loss of power the valve will remain at its last position.) If Power-Close is required, specify model HMSVC.

The locked rotor amperage is not significantly higher than the running amperage; therefore, continuing to supply power to the motor after it has fully opened or closed (stalled) is acceptable and typical for the HMSV valve. The power supply and wiring must be sized for a 90 W peak pulsed load. However, average power consumed is 10 W. Since the motor consumes minimal wattage, electrical costs and overheating are not concerns.

HMMV/HMMVC, HMXV/HMXVC, AND HMMR/HMMRC WIRING DIAGRAM


CUSTOMER SUPPLIED POWER SUPPLY AND CONTROLLER

(Modulating Control with Position Feedback)


The valve is supplied with 10 feet of cable with 18 gage wires. For greater distance between valve and controller use wire size as shown in Table 1: 24VAC Power Wiring. Do not run Sealed Motor Valve wiring with or near high voltage power wiring or VFD Controls (Variable Frequency Drives). Do not earth or ground 24 VAC wiring.

Table 1: 24VAC POWER WIRING


24VAC POWER WIRING (WIRES NO. 1 AND 2) (90VA PER VALVE REQUIRED)	AWG WIRE GAUGE (mm ²) NUMBER OF VALVES POWERED			
	1	2	3	4
CABLE LENGTH, ft(m)				
50 (15)	18 (1,0)	16 (1,5)	14 (2,5)	12 (4,0)
100 (30)	16 (1,5)	12 (4,0)	10 (6,0)	10 (6,0)
150 (46)	12 (2,5)	10 (6,0)	8 (10,0)	8 (10,0)
200 (61)	12 (4,0)	10 (6,0)	8 (10,0)	
300 (91)	10 (6,0)	8 (10,0)		

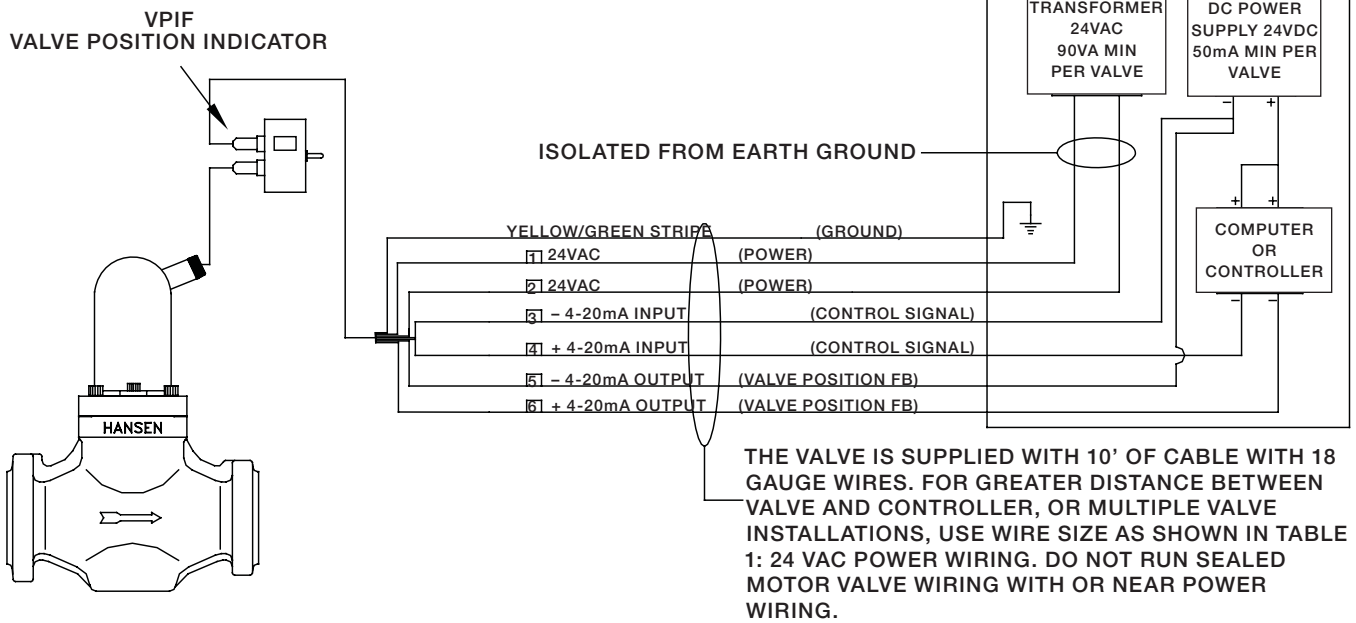

APPLICATION EXAMPLE: CORRECT 4 VALVES POWERED BY ONE TRANSFORMER

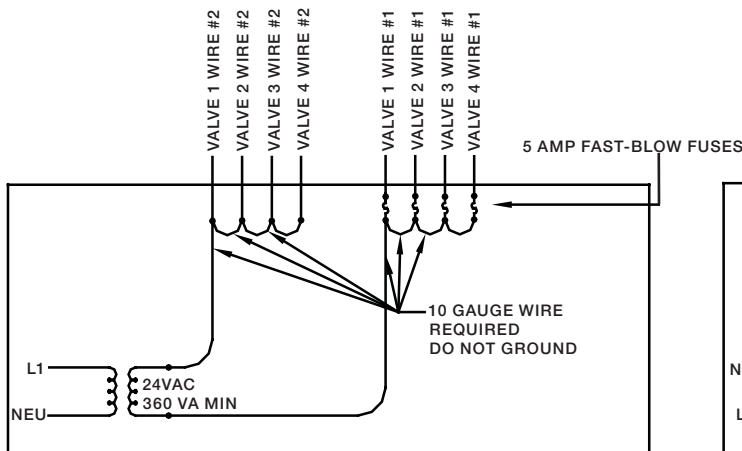

APPLICATION EXAMPLE: INCORRECT 4 VALVES POWERED BY ONE TRANSFORMER

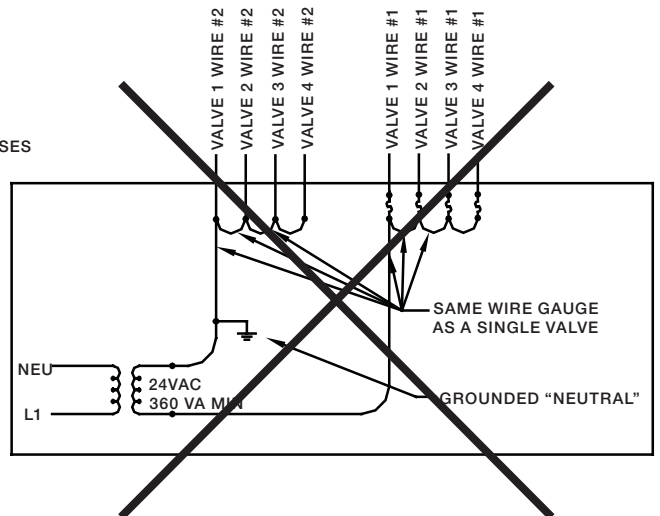

HMSV AND HMSVC WIRING DIAGRAM

CUSTOMER SUPPLIED POWER SUPPLY AND CONTROLLER


(Slow Opening and Closing Applications)

See page 32 for PCI Controllers

TYPICAL APPLICATIONS

IDEAL FOR REPLACEMENT OF:

1. BOTH HOT GAS SOLENOID VALVE AND SOFT GAS SOLENOID VALVE WITH A SINGLE HANSEN SEALED MOTOR VALVE.
2. BOTH SUCTION SOLENOID VALVE AND EQUALIZE SOLENOID VALVE WITH A SINGLE HANSEN SEALED MOTOR VALVE.
3. ANY OPEN/CLOSED APPLICATION REQUIRING SLOW OPERATION TO MINIMIZE LIQUID VELOCITY SHOCK AND/OR REQUIRING NO PRESSURE DROP TO OPERATE. (VENT OR GRAVITY DRAIN)
4. MOST MOTORIZED BALL VALVE AND BUTTERFLY VALVE APPLICATIONS THEREBY ELIMINATING SHAFT SEAL LEAKAGE.

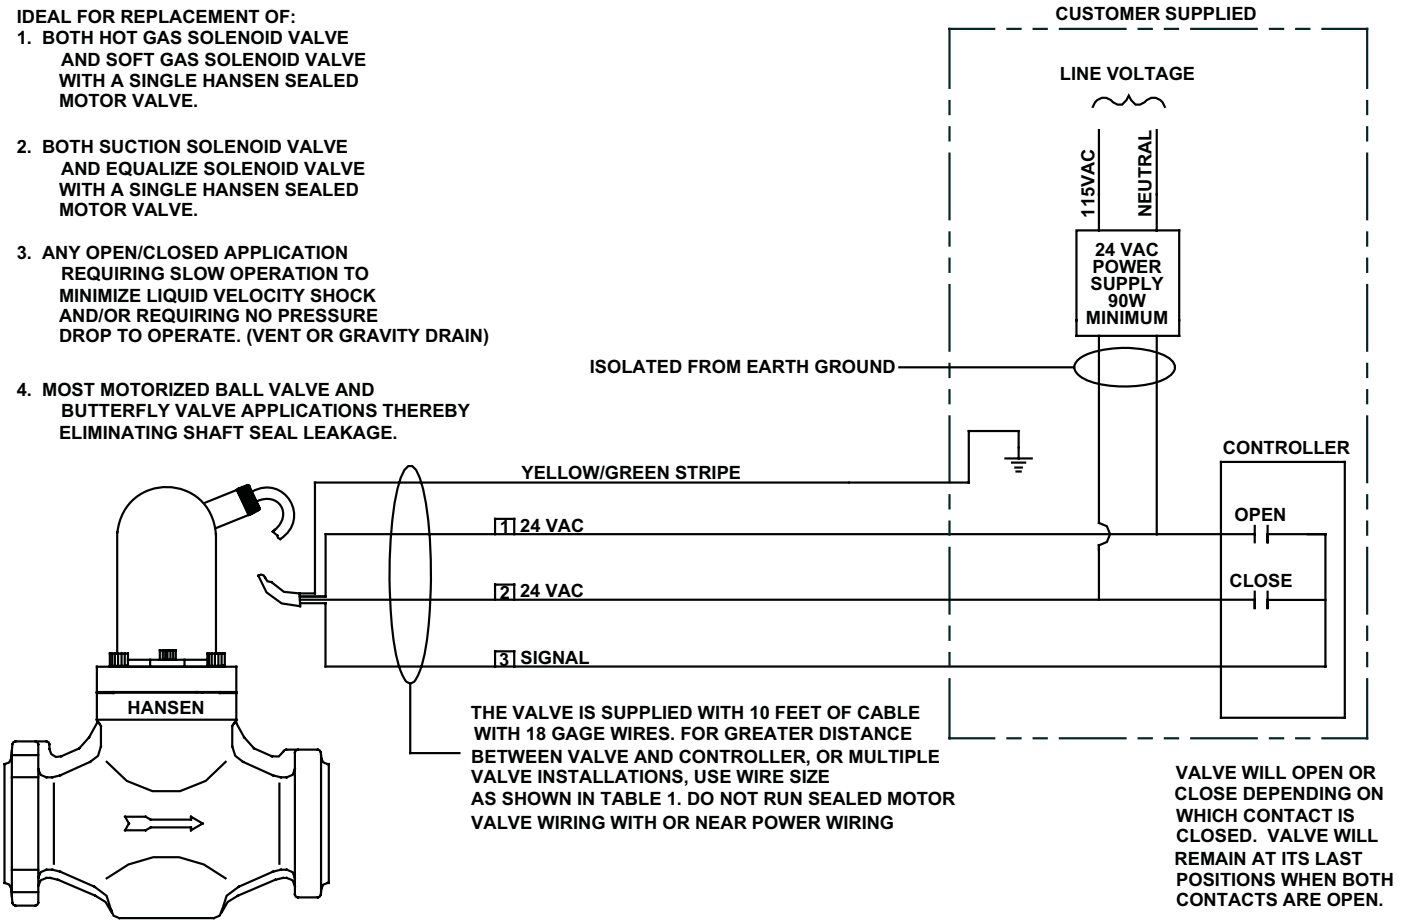


HANSEN SEALED MOTOR VALVE
HMSV/HMSVC

Table 1: 24VAC POWER WIRING


24VAC POWER WIRING (WIRES NO. 1 AND 2) (90VA PER VALVE REQUIRED)	AWG WIRE GAUGE (mm ²) NUMBER OF VALVES POWERED			
	1	2	3	4
CABLE LENGTH, ft(m)				
50 (15)	18 (1,0)	16 (1,5)	14 (2,5)	12 (4,0)
100 (30)	16 (1,5)	12 (4,0)	10 (6,0)	10 (6,0)
150 (46)	12 (2,5)	10 (6,0)	8 (10,0)	8 (10,0)
200 (61)	12 (4,0)	10 (6,0)	8 (10,0)	
300 (91)	10 (6,0)	8 (10,0)		

INSTALLATION DIMENSIONS, INCHES (MM)

3/4" (20mm) THRU 1-1/4" (32mm) SMV

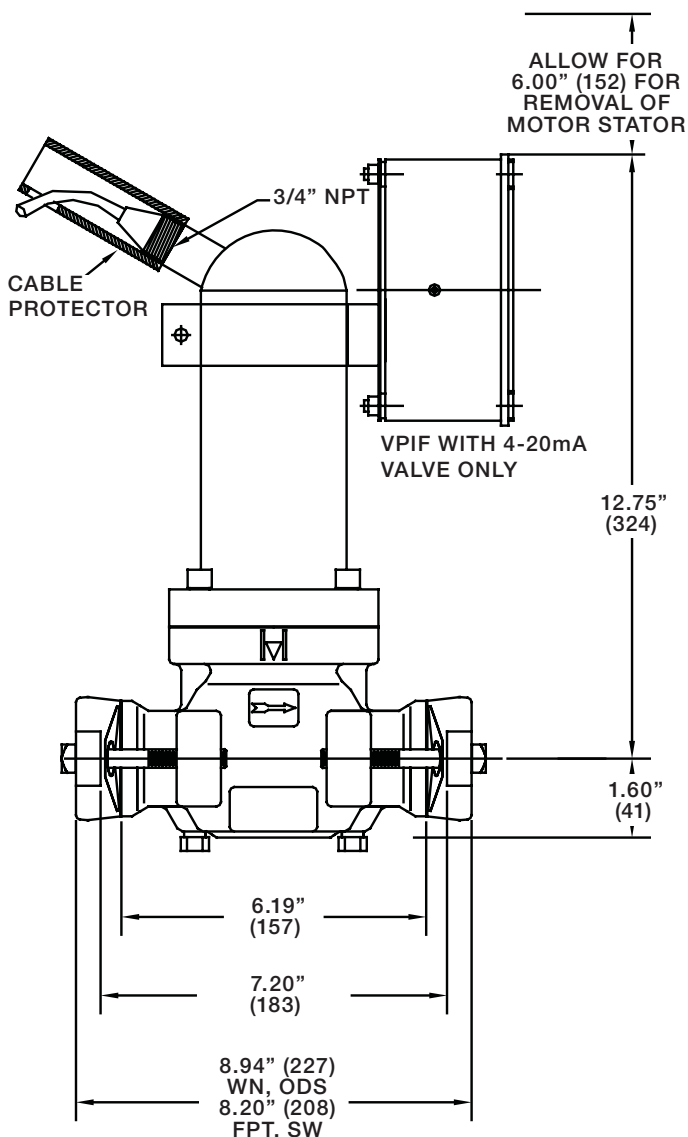

HMXV, HMXVC MOTORIZED EXPANSION VALVE

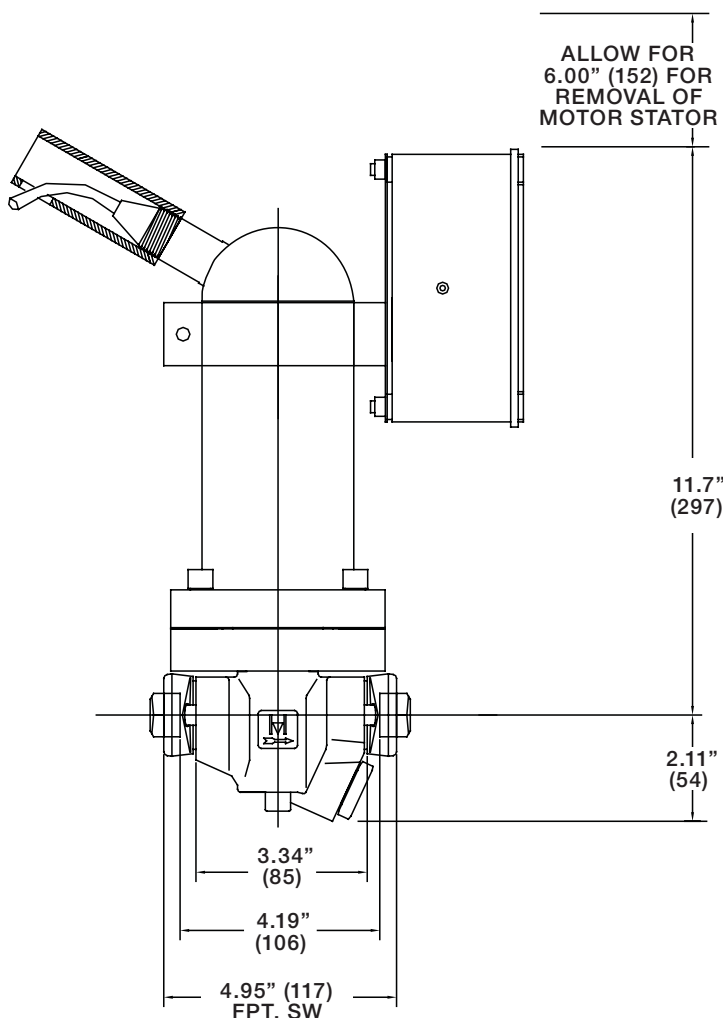

INSTALLATION

Protect the interior of valve from dirt and moisture during storage and installation. Valve should be installed so that the arrow on the valve body is in direction of normal refrigerant flow.

Please note: Valve will not backflow if in closed position. *Do not install check valves upstream of the Sealed Motor Valve without hydrostatic pressure relief.* Do not close the hand valve on inlet or outlet without making sure valve is in the open position. System should be free from dirt, weld slag and rust particles. A 60 mesh, close-coupled strainer is available for installation at inlet of valve for 3/4", 1" and 1 1/4". *Do not close-couple strainers to 1 1/2" through 4" Sealed Motor Valves.*

1/4" NPT Gauge/Purge port connections are provided on the inlet and outlet of the 3/4" thru 4" valves.


Please note: Sealed Motor Valves 2" and smaller will operate and seal with flow in either direction. 3" and 4" pressure assisted Sealed Motor Valves will only operate and seal with inlet equal to or greater than outlet pressure. Where pressure reversals are expected, a check valve at the outlet of the 3" and 4" SMV is recommended.

Pipe sizing, valve placement, rating, anchoring, and similar prudent precautions should be taken to ensure "liquid hammer" will not occur when valves open or close.

For proper flange gasket sealing, care must be taken when threading or welding to assure flanges are parallel to each other and perpendicular to pipe. Also, gaskets should be lightly oiled and all bolts must be tightened evenly.


Protect cable during installation.

Do **not** mount the valve with the motor in the down position. The valve will **only** operate properly if the motor is mounted in a horizontal or upright position. Refer to diagrams below. Horizontal mounting of motor is satisfactory if oil and dirt are controlled.

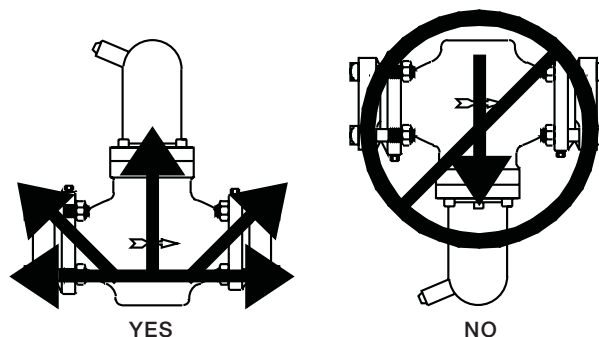

INSTALLATION DIMENSIONS, INCHES (MM)

1-1/2" (40mm) THRU 4" (100mm) SEALED MOTOR VALVE

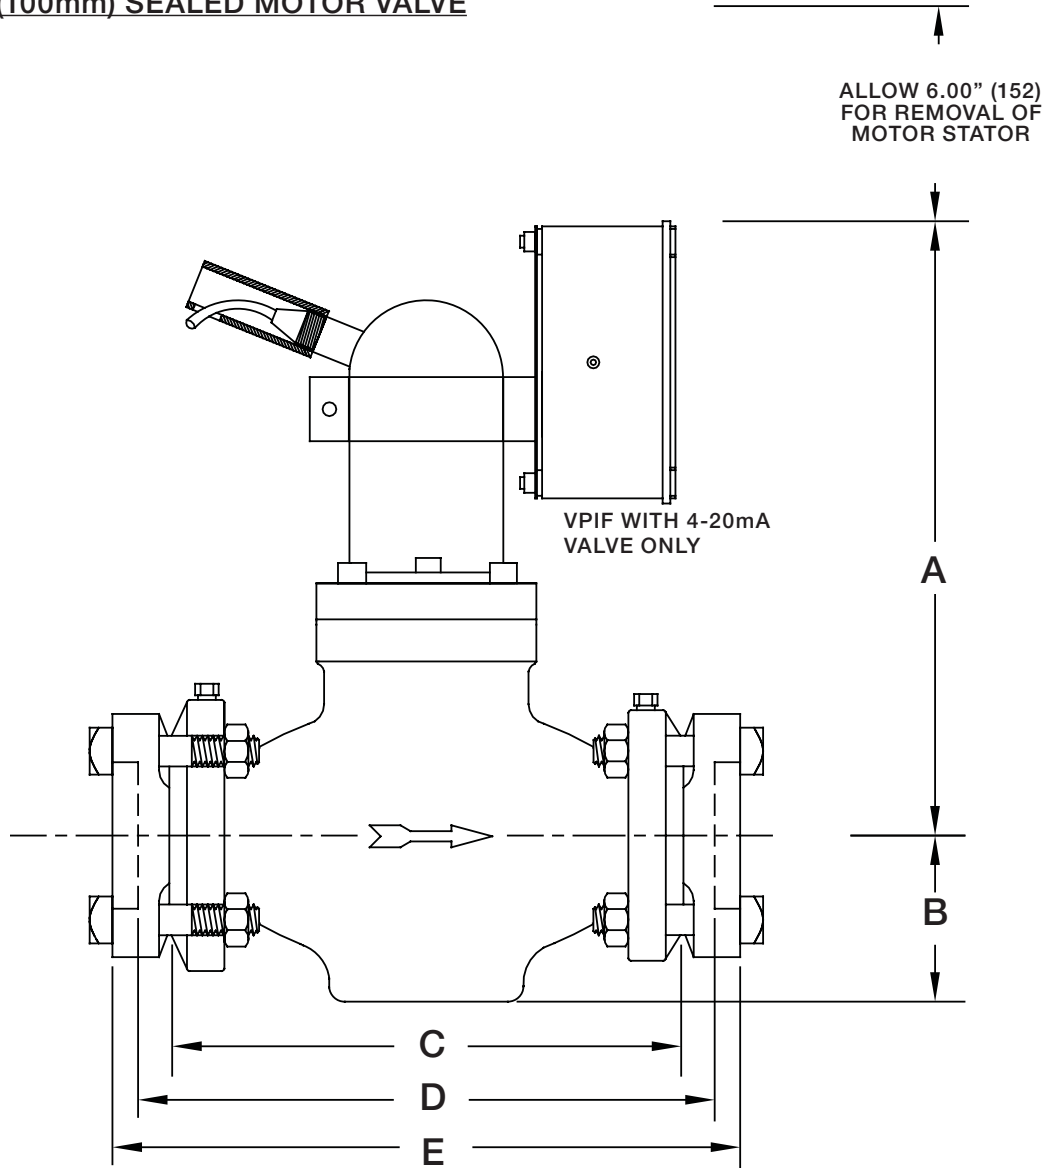

SIZE (mm)		1 1/2" (40)	2" (50)	3" (80)	4" (100)
A	HMMV HMMR HMSV	12.00 (305)	12.00 (305)	13.38 (340)	14.00 (356)
	HMMVC HMMRC	14.00 (356)	14.00 (356)	15.38 (391)	16.00 (406)
B		3.00 (76)	3.00 (76)	4.00 (102)	4.75 (121)
C		9.88 (251)	9.88 (251)	12.25 (311)	14.12 (359)
D		10.89 (277)	10.89 (277)	13.38 (340)	15.01 (381)
E FPT, SW		12.39 (315)	12.39 (315)	15.38 (391)	17.01 (432)
E WN, ODS		13.39 (340)	13.39 (340)	16.40 (417)	20.51 (521)
MAX WIDTH		4.58 (117)	4.58 (117)	6.50 (166)	8.06 (205)

RE-CALIBRATION INSTRUCTIONS FOR HMMV, HMMR, HMXV, HMMVC, HMMRC, AND HMXVC*

Hansen Sealed Motor Valves are factory calibrated, and hold their calibration during shipment, power outages, etc. Valve disassembly or manual opening with the MOVT (Manual Operation Valve Tool) does require subsequent recalibration, therefore after removing or replacing the 4-20 mA motor of a Sealed Motor Valve, recalibrate the valve. Recalibration synchronizes the control input with the valve position; that means, for example, a 12 mA input (50%) would result in the valve moving to the half-open position.

Recalibration requires the ability to control the 4-20 mA control input to the motor between four and twenty milliamps, and requires the ability to allow the valve to stroke fully open and closed. For valves shipped after July 4, 2006, or retrofitted valves with VPIF, the 4 mA and 20 mA signal to calibrate the valve is part of the function of the VPIF. If the valve is not equipped with a VPIF, then the 4 mA and 20 mA to calibrate must come from the computer or separate signal generator. Only qualified refrigeration service personnel should perform this procedure, and proper precautions taken to prevent a hazardous or undesirable occurrence resulting from operating the valve from open and closed.

1. Secure the refrigeration system to allow the valve to open and close fully without causing undesirable system problems to occur.
2. Mount and secure the motor on the sealed motor valve. Connect electrical wiring in accordance to the valve and controller manufacturers specifications.
3. Install "Calibration Key" over 'X' on side of motor and secure with strap.
4. Increase the control input to 20 mA or slightly greater. Move VPIF switch to up position. Maintain at least 20 mA for at least two minutes. This will give the valve time to move to the wide open position and calibrate its position. Note: some computer control systems have lag times before the control input is sent to the valve. (Using "System Feedback Mode").
5. Decrease the control input to 4 mA or less. Move VPIF switch to down position. Maintain 4 mA or less for at least two minutes. This will give the valve time to move to the completely closed position and calibrate its zero point.
6. Again increase the control input to at least 20 mA. Move VPIF switch to up position. Maintain at least 20 mA for at least two minutes. This will give the valve time to move to the wide open position and set its span.
7. The valve should now be calibrated and in the wide open position.
8. Remove "Calibration Key" and store. The valve will operate satisfactorily if the "Calibration Key" remains over the "X", but the valve will recalibrate each time the control input is at 4 mA or 20 mA for more than the two minutes.
9. Return control system to automatic operation. Place VPIF switch in middle position.

ELECTRICAL MAINTENANCE

Check calibration and Power-Close function on a routine basis. Check controller and controller wiring for corrosion. Check controller function.

MANUAL OPERATION VALVE TOOL

Use of the MOVT requires the removal of the power head. Do not remove the bonnet. Use extreme caution when loosening the power head screws, as the motor may contain refrigerant under pressure if a breach of the motor can has occurred (even after system evacuation). Wear protective gear and look/listen for escaping refrigerant while carefully loosening housing screws, and breaking the pressure seal.

Remove housing and place MOVT over can. Manually operate the valve open or closed by turning the MOVT in the directions indicated on the top of the tool. Refer to *Table 2: Number of Turns to Actuate Valve* for number of turns to fully actuate valve. Upon re-installing the power head, recalibrate according to instructions.

***The HMSV series do not require recalibration.**


NOTE:

Powerhead must be sealed and torqued to 15 foot lbs to prevent moisture from damaging electronics. Care must be taken not to damage or dent the can. This will make the motor inoperative.

Table 2: Number of Turns to Actuate Valve

NOMINAL SIZE INCH (mm)	# OF TURNS
7/32" (5)	6
9/32" (7)	6
3/4" thru 1-1/4" (20) thru (32)	7
1-1/2" & 2" (40) & (50)	12
3" (80)	18
4" (100)	20

HMXV SEALED MOTOR VALVE

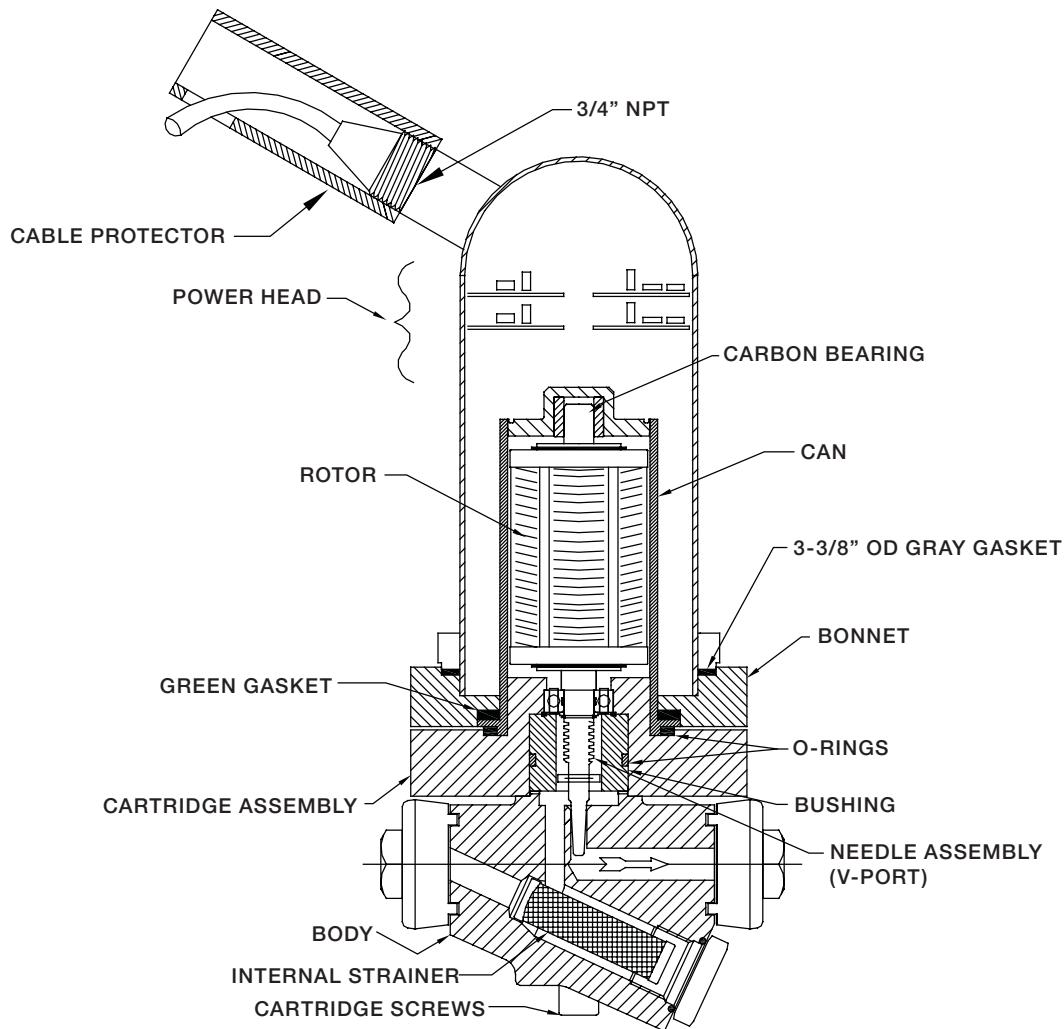

HMXV DISASSEMBLY


1. Isolate the valve from the refrigerant pressure and evacuate the refrigerant.
2. During normal circumstances the Power Head (1) is isolated from the refrigerant pressure. If abnormal conditions cause a breach in the isolating Can (5), refrigerant pressure will enter and be contained by the power head, possibly even after the valve has been isolated and evacuated of refrigerant. Always use caution when loosening the Power Head (1). Carefully loosen but do not remove the small power head screws and break the pressure seal. Observe for signs of internal pressure. After confirming no internal pressure is present, remove the bolts and the housing.
3. Carefully loosen the larger bonnet bolts, break gasket seal, and if no pressure is present remove the bolts and bonnet. To prevent damage to the can, reinstall Power Head (or MOVT).
4. Remove the isolating can (5).
5. Remove the two cartridge screws on underside of body. Lift off cartridge assembly from body.
6. Remove needle assembly by rotating rotor counterclockwise.

HMXV REASSEMBLY

1. Install needle assembly by aligning with rotor and turning rotor clockwise. Align pin of needle assembly with grooves in keyway bushing.
2. Replace gasket into groove in cartridge.
3. Replace cartridge assembly with care not to mar the body seat with end of needle. Replace two cartridge screws and torque to 35 ft-lbf (47 N-m).
4. Install o-ring onto face groove of cartridge. Check carbon bearing inside can and install can over rotor. Place green gasket over can (Important that o-ring is below can flange and seated properly in groove, and green gasket is above can flange to seal between can and bonnet).
5. Install bonnet over can. Before torquing large bonnet bolts, install 3 3/8" OD gray gasket, loosely install motor housing to prevent wrenching damage to can. Install large bonnet bolts and torque evenly to 35 ft-lbf (47 N-m). Install small motor housing screws and torque evenly to 15 ft-lbf (20 N-m).
6. Failure to seal Power Head may result in motor failure due to moisture damage.

SERVICE AND MAINTENANCE

3/4" (20mm) THRU 2" (50mm) SEALED MOTOR VALVE

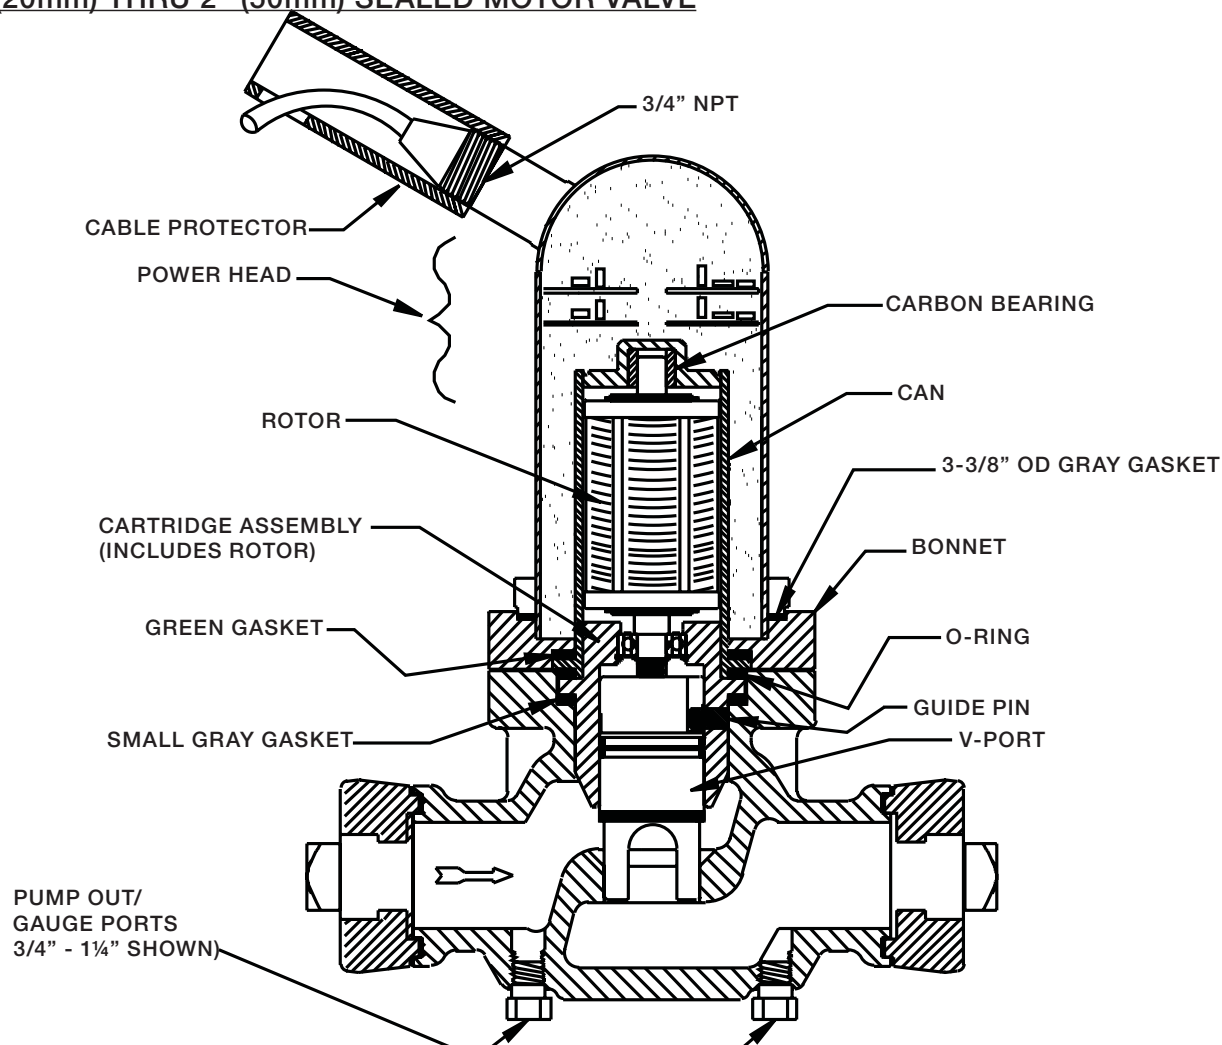

VALVE DISASSEMBLY 3/4" THRU 2"


1. Isolate the valve from the refrigerant pressure and evacuate the refrigerant.
2. During normal circumstances the Power Head (1) is isolated from the refrigerant pressure. If abnormal conditions cause a breach in the isolating Can (5), refrigerant pressure will enter and be contained by the power head, possibly even after the valve has been isolated and evacuated of refrigerant. Always use caution when loosening the Power Head (1). Carefully loosen but do not remove the small power head screws and break the pressure seal. Observe for signs of internal pressure. After confirming no internal pressure is present, remove the bolts and the housing.
3. Carefully loosen the larger bonnet bolts, break gasket seal, and if no pressure is present remove the bolts and bonnet. To prevent damage to the can, reinstall Power Head (or MOVt).
4. Remove the isolating Can (5).
5. Grasp the Rotor Magnets (3) and while lifting out squarely, remove the cartridge assembly, taking care not to bend the rotor shaft. If cartridge removal is difficult, remove by screwing the rotor counterclockwise and the cartridge will press out. **WARNING:** Don't bend shaft.
6. Remove the V-port (2) from the cartridge assembly by unscrewing the rotor counterclockwise.

VALVE REASSEMBLY 3/4" THRU 2"

1. Inspect all V-port seals for damage. Install V-port into cartridge fully supporting the v-port and cartridge while carefully aligning the threaded shaft of cartridge with the low friction nut of V-port. Carefully thread together 6-8 turns, and align the anti-rotation slot on the V-port with the anti-rotation pin of the cartridge. Fully thread the V-port into the cartridge, screwing the V-port fully into the cartridge by turning the rotor clockwise.
2. Place smaller gray gasket, then cartridge into the body. Install o-ring onto face groove of cartridge. Check carbon bearing inside can and install can over rotor. Place green gasket over can (Important that o-ring is below can flange and seated properly in groove, and green gasket is above can flange to seal between can and bonnet).
3. Install bonnet over can. Before torquing large bonnet bolts, install 3 3/8" OD gray gasket, loosely install motor housing (or MOVt) to prevent wrenching damage to can. Install large bonnet bolts and torque evenly to 35 ft-lbf (47 N-m). Install small motor housing screws and torque evenly to 15 ft-lbf (20 N-m).
4. Failure to seal Power Head may result in motor failure due to moisture damage.

SERVICE AND MAINTENANCE

3" (80mm) & 4" (100mm) SHOCK RESISTANT SEALED MOTOR VALVE*

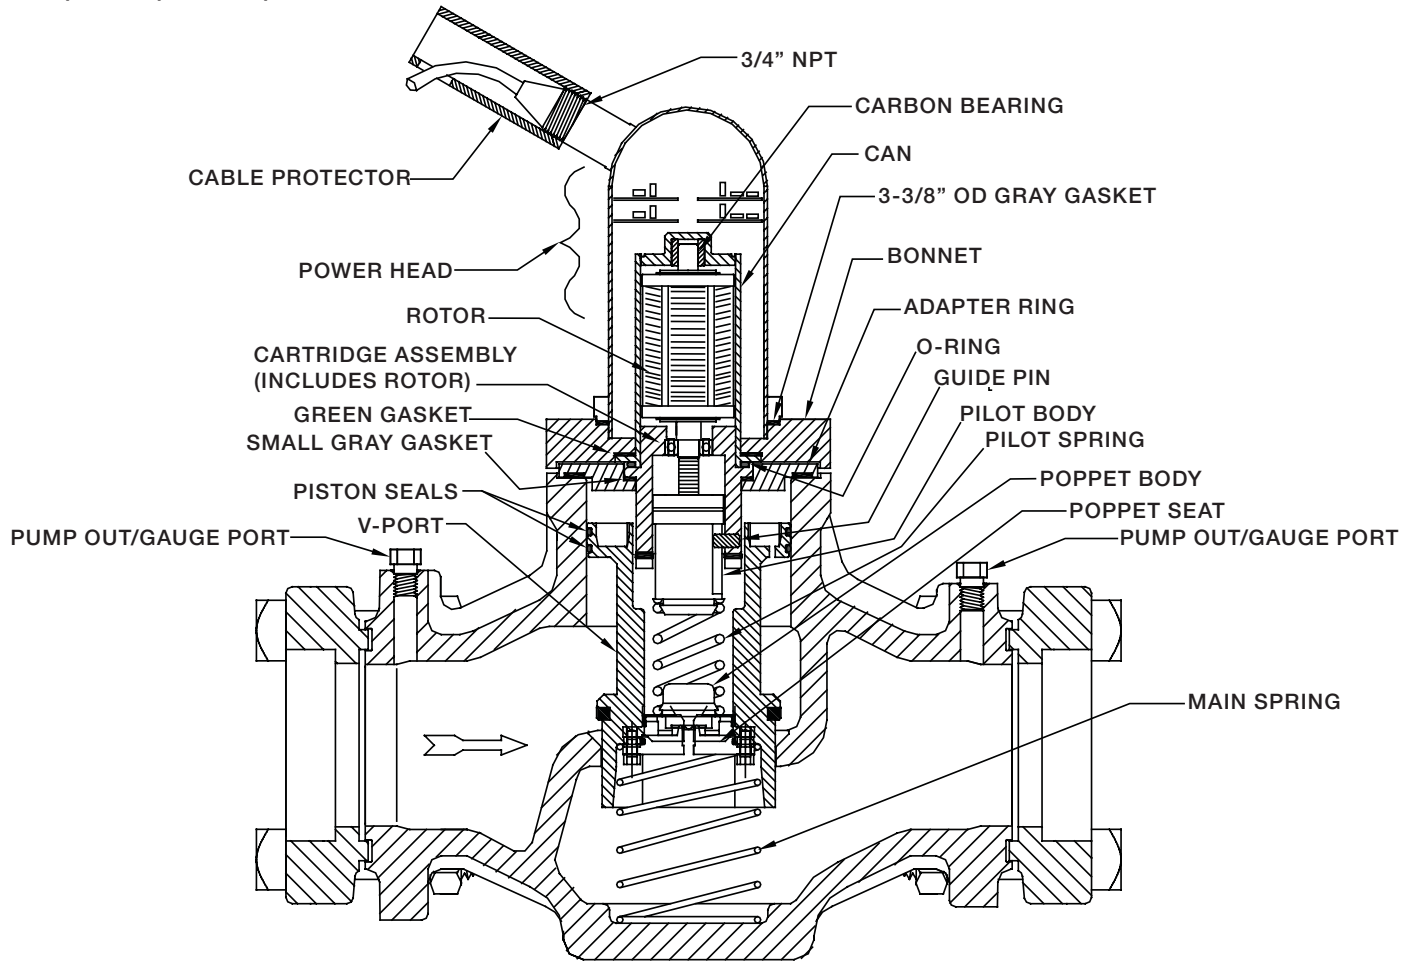

VALVE DISASSEMBLY 3" THRU 4"

1. Isolate the valve from the refrigerant pressure and evacuate the refrigerant.
2. During normal circumstances the power head (1) is isolated from the refrigerant pressure. If abnormal conditions cause a breach in the isolating Can (5), refrigerant pressure will enter and be contained by the Power Head, possibly even after the valve has been isolated and evacuated of refrigerant. Always use caution when loosening the Power Head (1). Carefully loosen but do not remove the small power head screws and break the pressure seal. Observe for signs of internal pressure. After confirming no internal pressure is present, remove the bolts and the power head.
3. Carefully loosen the larger bonnet bolts, break gasket seal, and if no pressure is present remove the bolts and bonnet. To prevent damage to the can, reinstall Power Head (or MOVT).
4. Remove the isolating Can (5).
5. Grasp the Rotor Magnets (3) and remove the cartridge assembly by lifting the cartridge assembly from the valve. Unscrewing the rotor counter-clockwise will aid removal if removal is difficult.
6. Remove the adapter plate. Plate can be pried off with slip joint pliers or wrench inserted into center hole.
7. Remove the V-port (2) from the body. The bonnet bolts can be screwed into the top of the V-port to aid V-port removal or installation.
8. Remove main spring from body.

VALVE REASSEMBLY 3" THRU 4"


1. Install main spring into body.
2. Inspect all V-port seals for damage. Install V-port assembly into body using care not to damage piston seals. Main spring fits over pilot seat flange on bottom face of V-port. Place large gasket, then adapter plate onto body. Push down and hold adapter plate in position.
3. Place smaller gray gasket into counterbore of adapter plate. Install cartridge into body atop the adapter plate.
4. Install o-ring onto face groove of cartridge. Check carbon bearing inside can and install can over rotor. Place green gasket over can (Important that o-ring is below can flange and seated properly in groove, and green gasket is above can flange to seal between can and bonnet).
5. Install bonnet over can. Before torquing large bonnet bolts, install 3-3/8" OD gray gasket, loosely install motor housing (or MOVT) to prevent wrenching damage to can. Install large bonnet bolts and torque evenly to 175 ft-lbf (237 N-m). Install small motor housing screws and torque evenly to 15 ft-lbf (20 N-m).

*NOTE: Models identified as HMMV/7A and HMMV/8A.


For servicing 3" and 4" Non-Shock Resistant Sealed Motor Valves (model numbers HMMV/7, HMMV/8, HMMR/7, HMMR/8, HMSV/7 and HMSV/8) refer to Bulletin R629b.

SEALED MOTOR VALVE PARTS LIST

3/4" (20mm) THRU 2" (50mm) SEALED MOTOR VALVE

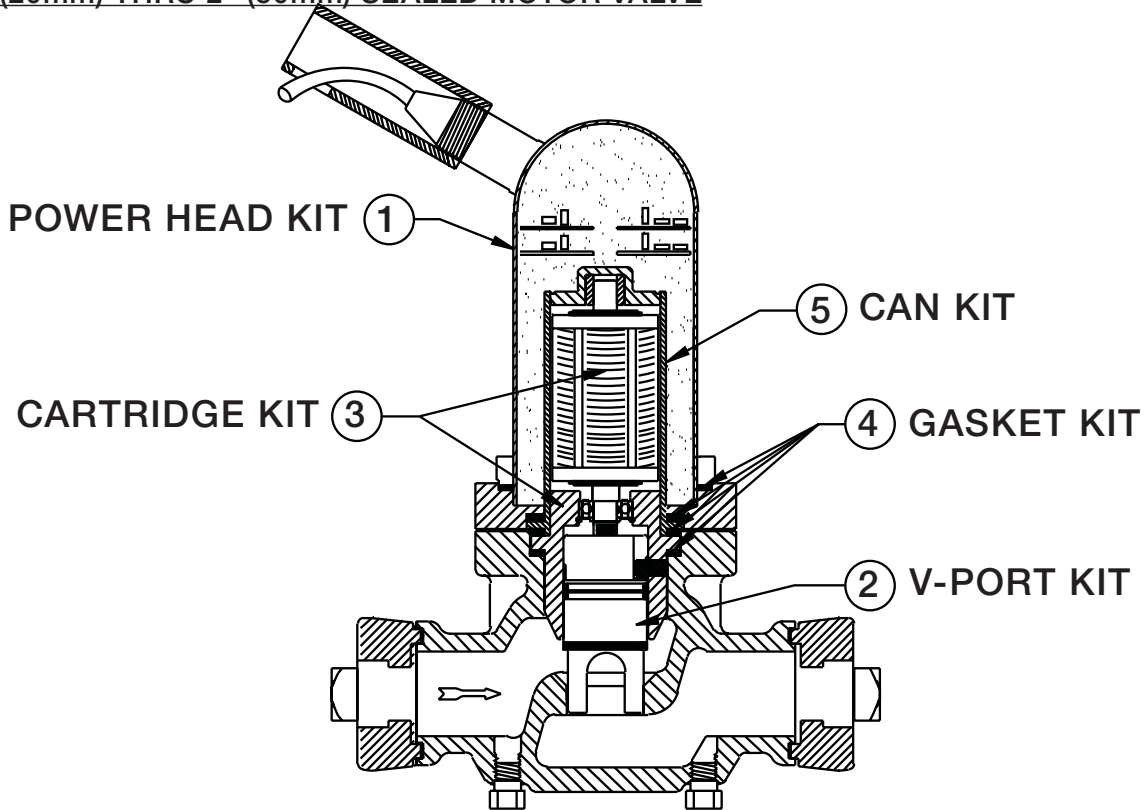


3" (80mm) & 4" (100mm) SHOCK RESISTANT SEALED MOTOR VALVE*

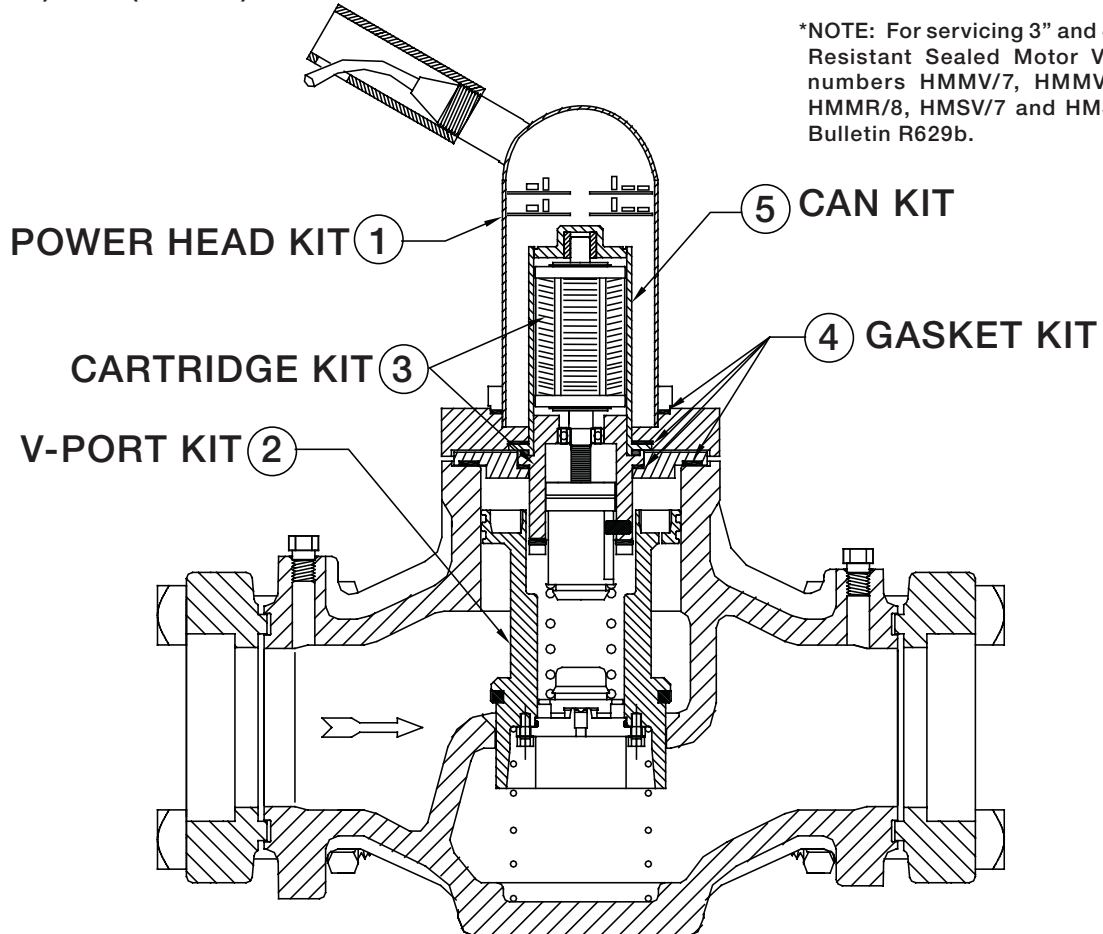

*NOTE: For servicing 3" and 4" Non-Shock Resistant Sealed Motor Valves (model numbers HMMV/7, HMMV/8, HMMR/7, HMMR/8, HMSV/7 and HMSV/8) refer to Bulletin R629b.

SEALED MOTOR VALVE PARTS LIST

HMXV SEALED MOTOR VALVE

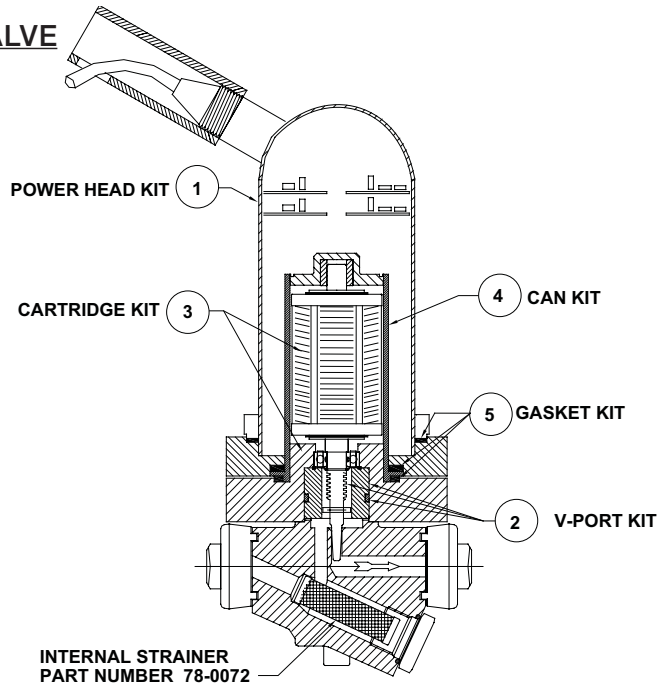

Valve Type	Nominal Size Inch (mm)	1		2	3	4	5
		Power Head Kit		V-Port* Assembly Kit	Cartridge* Assembly Kit	Can Kit*	Gasket Kit
		STD	POWER-CLOSE				
HMXV	7/32" (5)	For valves with VPIF order:	For valves with VPIF order:	HMXV/A 75-1176	75-1178	75-1177	75-1180
	9/32" (7)			HMXV/B 75-1179			
HMMV	3/4" (20)	75-1209 Power Head with 2' cable and connector	75-1212 Power Head with 2' cable and connector	75-1154	75-1167	75-2922	75-1148
	1" (25)			75-1155			
	1 1/4" (32)			75-1156	75-1168		75-1150
	1 1/2" (40)			75-1157			
	2" (50)			75-1166	75-1200		75-1151
	3" (80)			75-1197			
4" (100)	75-1199	75-1201	75-1152				
HMMR	3/4" (20)	For valves without VPIF order: 75-1171 Power Head with 10' cable	For valves without VPIF order: 75-1183 Power-Close Power Head with 10' cable	75-1160	75-1167	75-2922	75-1148
	1" (25)			75-1161			
	1 1/4" (32)			75-1154	75-1168		75-1150
	1 1/2" (40)			75-1162			
	2" (50)			75-1163	75-1200		75-1151
	3" (80)			75-1196			
4" (100)	75-1198	75-1201	75-1152				
HMSV	3/4" (20)	75-1187	75-1184	75-1154	75-1167	75-2922	75-1148
	1" (25)			75-1155			
	1 1/4" (32)			75-1156	75-1168		75-1150
	1 1/2" (40)			75-1157			
	2" (50)			75-1166	75-1200		75-1151
	3" (80)			75-1197			
4" (100)	75-1199	75-1201	75-1152				



* CARTRIDGE ASSEMBLY KIT AND CAN KIT INCLUDE GASKET KIT (Column 5)

NOTE: For 3" (80mm) and 4" (100mm) with model numbers HMMV/7, HMMR/7, HMMV/8, HMMR/8 both V-Port Cartridge Kit and Cartridge Kit must be replaced together with Shock Resistant components listed above.

Standard	75-1209 Kit	75-0956 Gasket	75-1171 Kit	75-0956 Gasket	75-1208 Kit	75-0956 Gasket	75-1215 Kit for conduit	75-0956 Gasket
		75-0961 Screws		75-0961 Screws		75-0961 Screws		75-0961 Screws
		75-3018 Powerhead		75-3017 Powerhead		75-3017 Powerhead		75-3017 Powerhead
				75-3104 8" Cable		75-3110 VPIF Assy		75-3120 Powerhead
Power-Close	75-1212 Kit	75-0956 Gasket	75-1183 Kit	75-0956 Gasket	75-1213 Kit	75-0956 Gasket	-	
		75-0961 Screws		75-0961 Screws		75-0961 Screws		75-0961 Screws
		75-3031 Powerhead		75-3031 Powerhead		75-3031 Powerhead		75-3031 Powerhead
				75-3104 8" Cable		75-3110 VPIF Assy		75-3110 VPIF Assy
VPIF	75-3103 Bracket Assembly	75-1210 No Solder Retro Kit	75-1211 Kit, Solder Retro Kit	75-3104 VPIEC 8" Cable				



SEALED MOTOR VALVE RECOMMENDED PIPING

FIGURE 1: LIQUID FEED VALVE FROM INTERMEDIATE TO LOW TEMPERATURE VESSEL

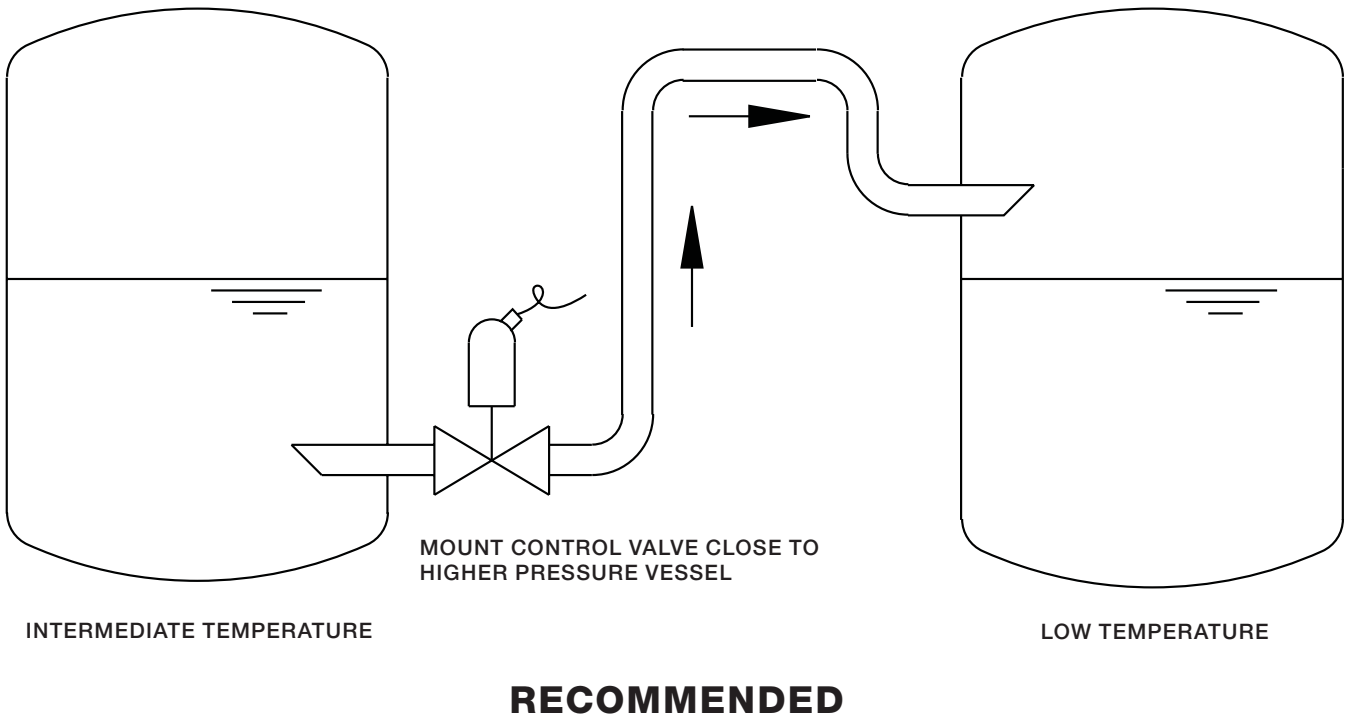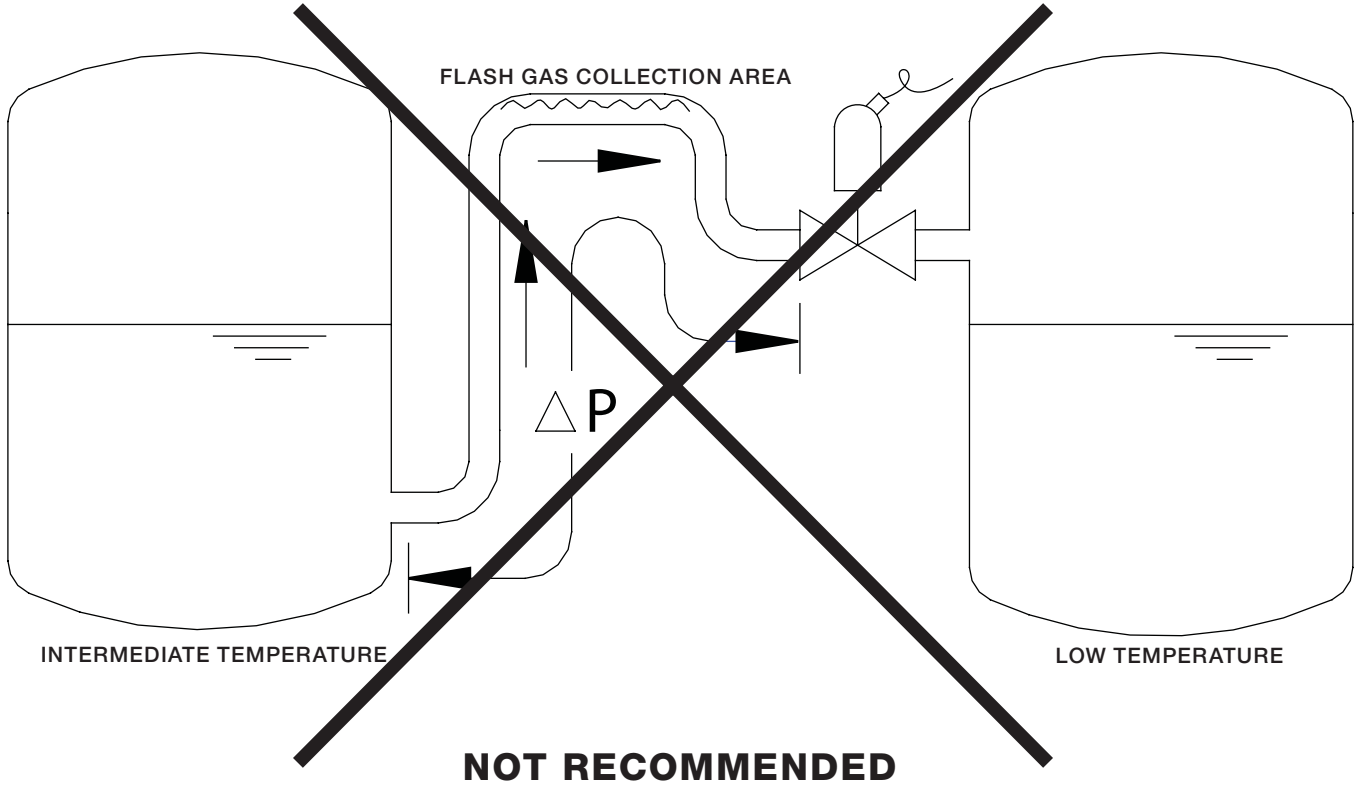

SEALED MOTOR VALVE RECOMMENDED PIPING


FIGURE 2: PIPING RECOMMENDATIONS

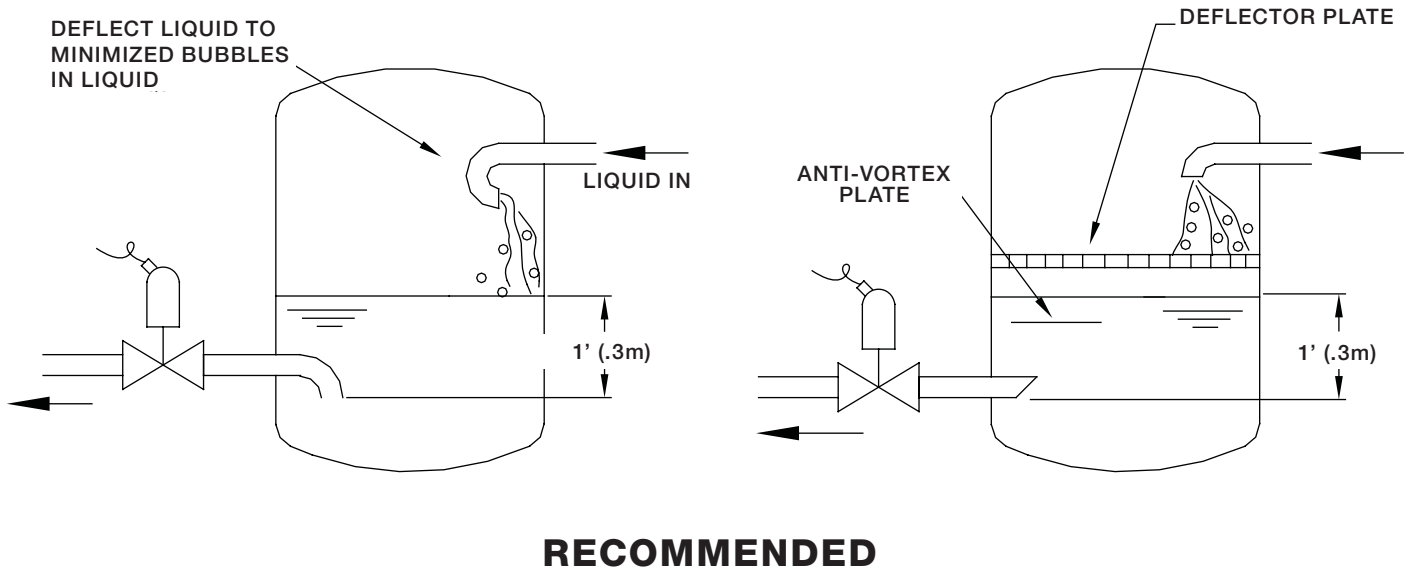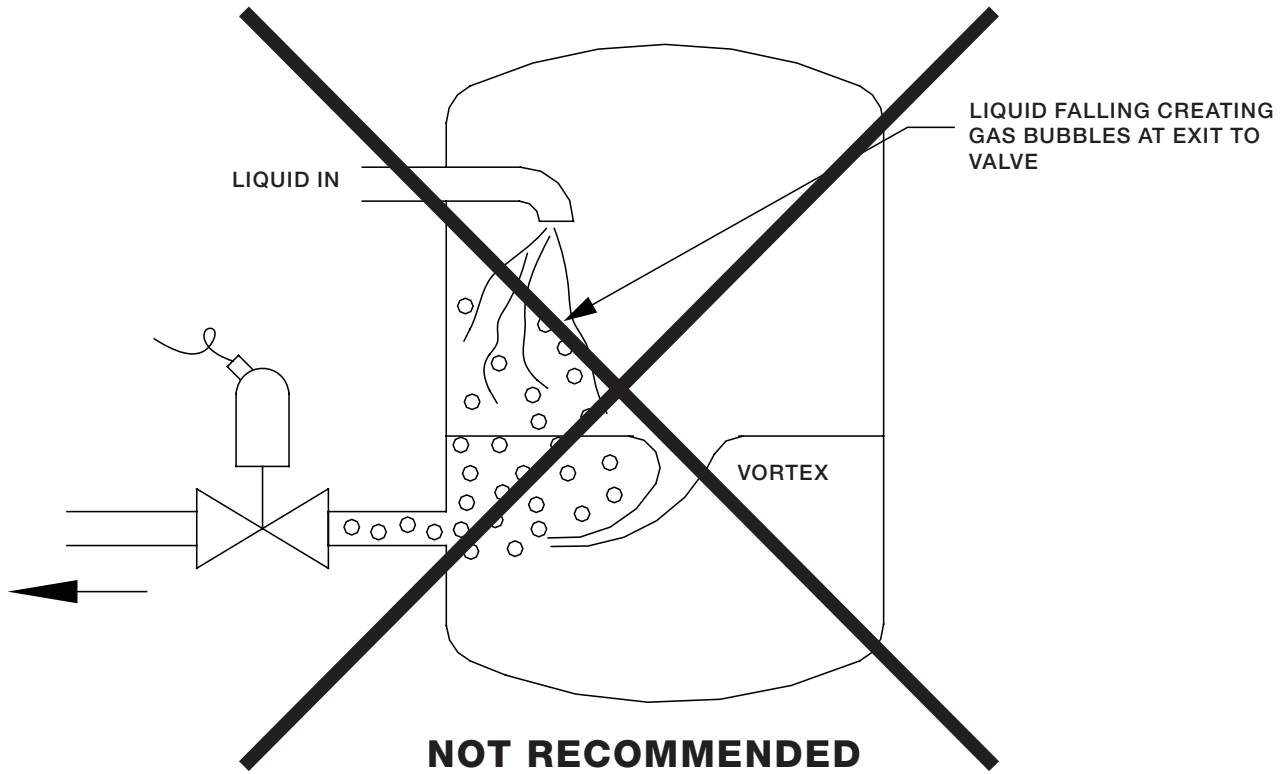




HANSEN CONTROLLERS

PCML, PCMLF

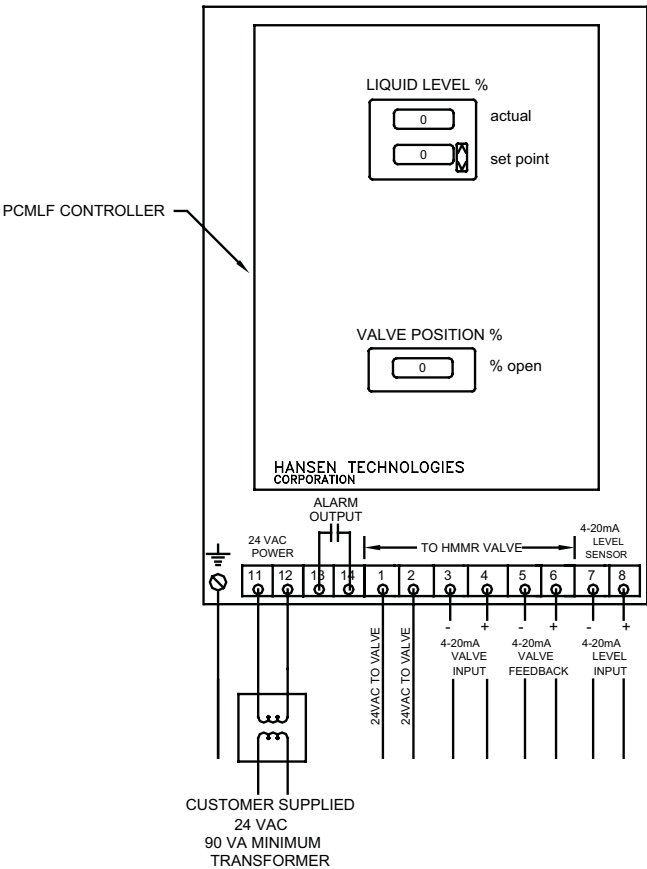Hansen stand-alone liquid level controllers are suitable for applications where computer control is either not desired or not available. Both controllers have built-in 24v DC power supply for the 4-20 mA valve position feedback loop and the 4-20 mA level control loop. Refer to application examples on page 3. **No external 24V DC power supplies are required.**



SETTING THE CONTROLLER

- In automatic mode, the actual liquid level is displayed in the upper most display, of the controller, with the liquid level setpoint just below it. For controllers with valve position feedback, the valve position is shown on the bottom display.
- The liquid level setpoint can be adjusted by depressing the up or down arrow keys   of the controller.
- MANUAL OPERATION of the Sealed Motor Valve may be performed at the controller by depressing the AUTO/MAN key. When in manual, the set point display will show valve position setpoint. The valve will remain at the position setpoint until the setpoint is altered, or returned to automatic operation. To return to automatic operation, depress the AUTO/MAN key again. 


CONTROLLER SPECIFICATIONS

Input: 24 VAC, 90VA minimum
 Enclosure: watertight, NEMA 4x
 Alarm: Normally open
 Alarm Relay: 2 Amps


CAUTION

The Hansen PCML/PCMLF has built-in multiple control capabilities for other industries. Hansen has programmed the controller for the particular use described in this bulletin. Do not attempt to penetrate barriers to other programming.

ENCLOSURE FOR CONTROLLER

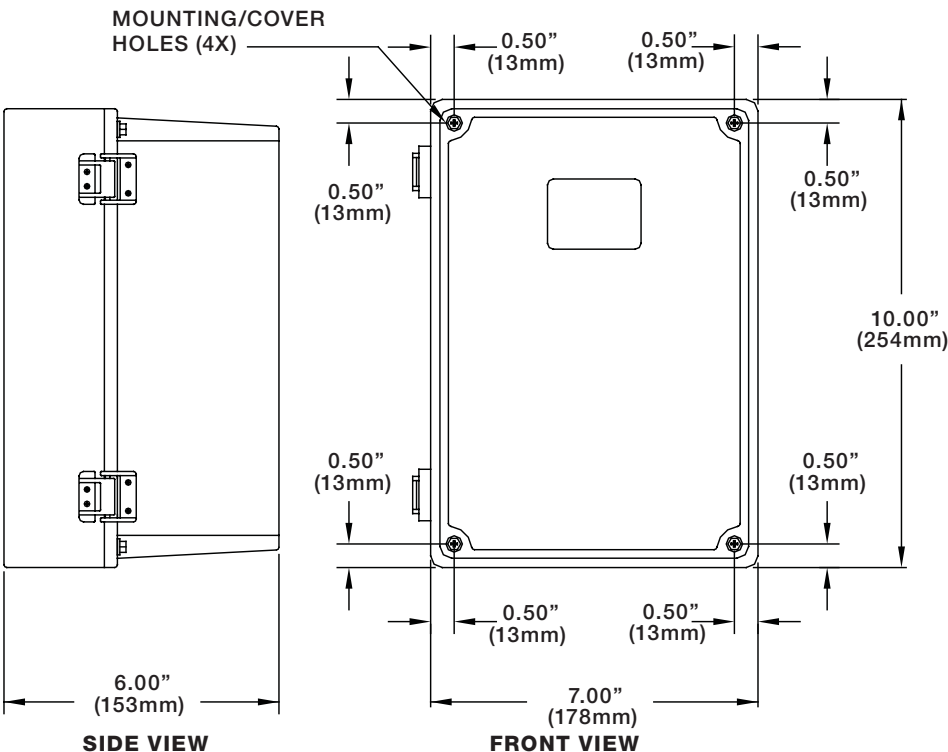


CONTROLLER FACEPLATE

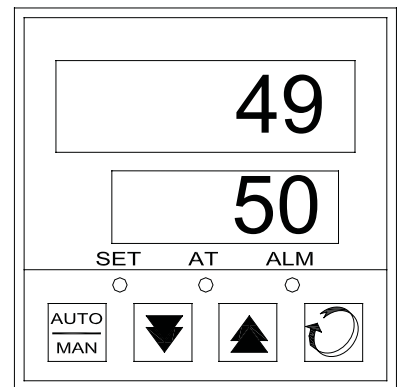


HANSEN CONTROLLERS

PCMT, PCMTF



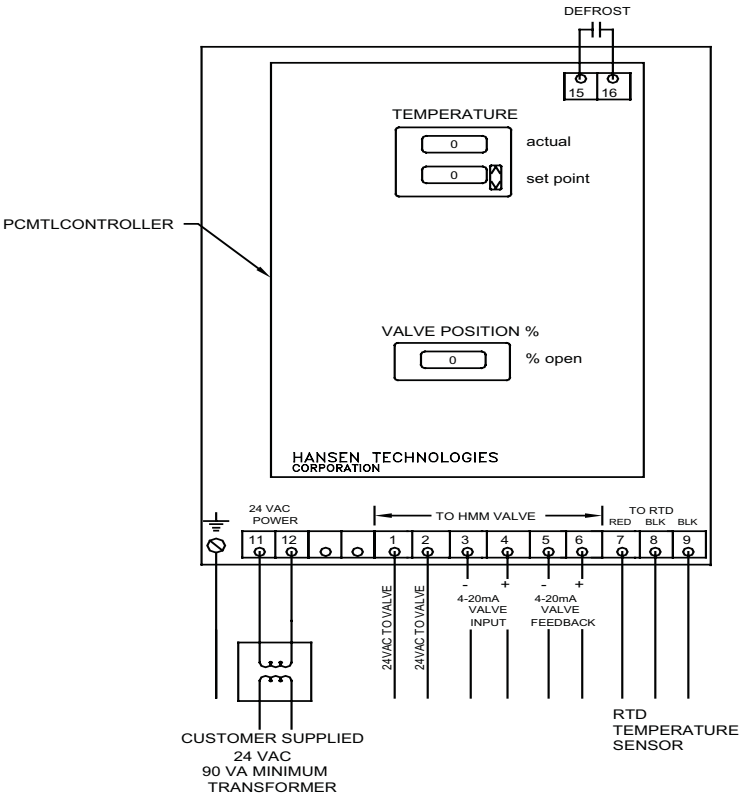

Hansen stand-alone temperature controllers are suitable for applications where computer control is either not desired or not available. Both controllers have built-in 24v DC power supply for the 4-20 mA valve position feedback loop. PCMT and PCMTF controllers include RTD temperature sensor. Refer to application examples on page 4. **No external 24V DC power supplies are required.**

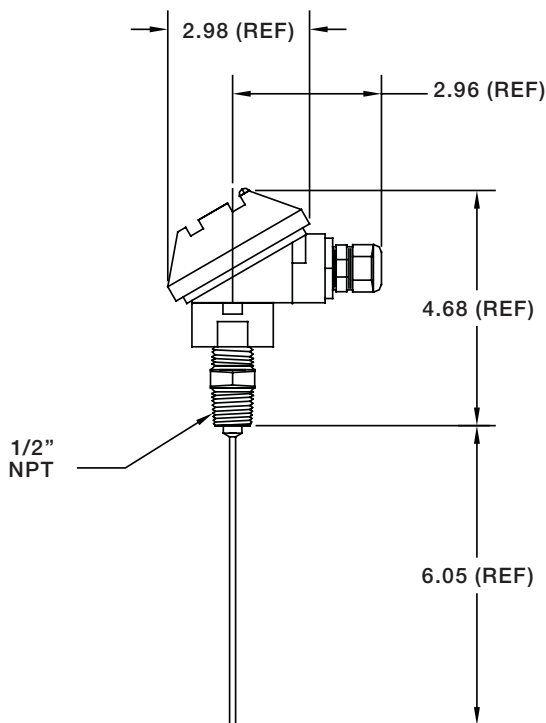

RTD TEMPERATURE SENSOR



SETTING THE CONTROLLER

1. In automatic mode, the actual temperature is displayed in the uppermost display, of the controller, with the active setpoint (setpoint one or setpoint two) just below it.
2. The active setpoint can be adjusted by depressing the up or down arrow keys of the controller. The active and secondary setpoint may be viewed or adjusted by depressing the scroll key.  
3. The secondary setpoint may be used to close the HMMV valve during defrost. **NOTE: A separate defrost relief regulator is required.** Set the secondary temperature setpoint at a high enough value to keep the valve closed during defrost. Connecting the defrost terminals (located at the top of the controller package) to the appropriate defrost control contacts to enable activation of the secondary setpoint during defrost. A closed contact between terminals 15 and 16 will activate the secondary setpoint.
4. **MANUAL OPERATION** of the Sealed Motor Valve may be performed at the controller by depressing the AUTO/MAN key. When in manual, the setpoint display will show valve position setpoint command. The manual setpoint may be changed using the up and down arrow keys. PCMTF controllers will see the valve position change on the bottom display. The valve will remain at the position setpoint until the setpoint is altered, or returned to automatic operation. To return to automatic operation, depress the AUTO/MAN key again.  

CONTROLLER SPECIFICATIONS

Input: 24 VAC, 90VA minimum

Enclosure: watertight, NEMA 4X


CAUTION

The Hansen PCMT/PCMTF has built-in multiple control capabilities for other industries. Hansen has programmed the controller for the particular use described in this bulletin. Do not attempt to penetrate barriers to other programming.




HANSEN CONTROLLERS

PCMP, PCMPF

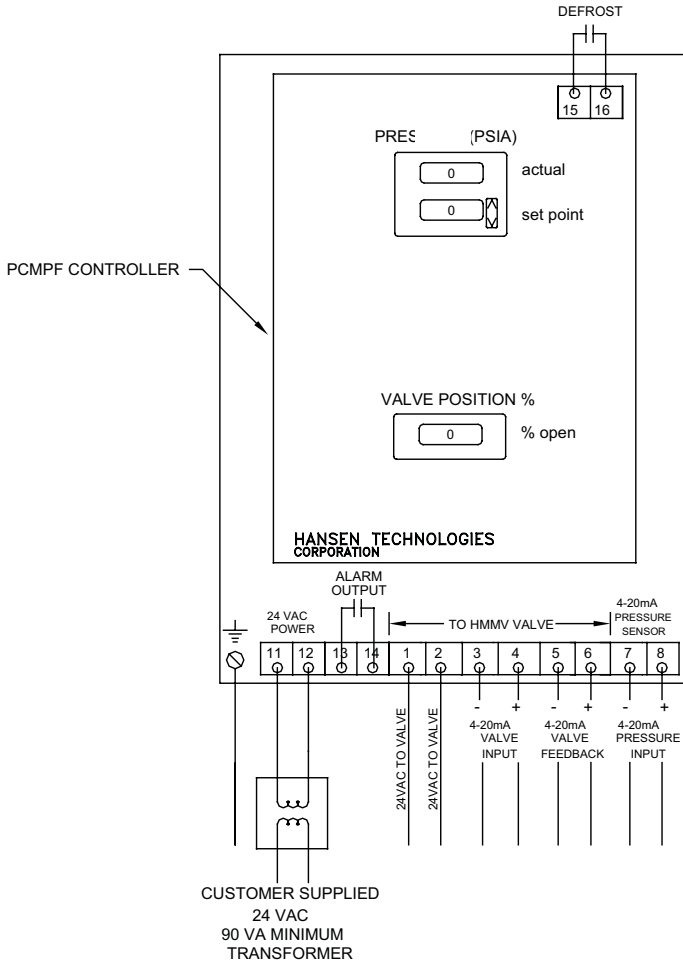Hansen stand-alone pressure controllers are suitable for applications where computer control is either not desired or not available. Both controllers have built-in 24v DC power supply for the 4-20 mA valve position feedback loop. PCMP and PCMPF controllers include pressure transducer. Refer to application examples on page 3. **No external 24V DC power supplies are required.**



SETTING THE CONTROLLER

1. In automatic mode, the actual pressure is displayed in the uppermost display, of the controller, with the active setpoint (setpoint one or setpoint two) just below it.
2. The active setpoint can be adjusted by depressing the up or down arrow keys of the controller. The active and secondary setpoint may be viewed or adjusted by depressing the scroll key.  
3. The secondary setpoint may be used to close the HMMV valve during defrost. **NOTE: A separate defrost relief regulator is required.** Set the secondary pressure setpoint at a high enough value to keep the valve closed during defrost. Connecting the defrost terminals (located at the top of the controller package) to the appropriate defrost control contacts to enable activation of the secondary setpoint during defrost. A closed contact between terminals 15 and 16 will activate the secondary setpoint.
4. MANUAL OPERATION of the Sealed Motor Valve may be performed at the controller by depressing the AUTO/MAN key. When in manual, the setpoint display will show valve position setpoint command. The manual setpoint may be changed using the up and down arrow keys. PCMPF controllers will see the valve position change on the bottom display. The valve will remain at the position setpoint until the setpoint is altered, or returned to automatic operation. To return to automatic operation, depress the AUTO/MAN key again. 

CONTROLLER SPECIFICATIONS

Input: 24 VAC, 90VA minimum

Enclosure: watertight, NEMA 4X


Alarm: Normally open

Alarm Relay: 2 amps

CAUTION

The Hansen PCMP/PCMPF has built-in multiple control capabilities for other industries. Hansen has programmed the controller for the particular use described in this bulletin. Do not attempt to penetrate barriers to other programming.

PRESSURE TRANSDUCER

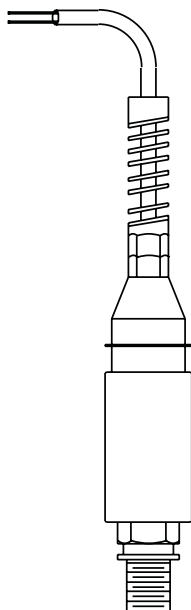

SEALED MOTOR VALVE WIRING DIAGRAM FOR SOLENOID VALVE REPLACEMENT


(Slow Opening, Slow Closing)

Models HMSV, HMSVC

TYPICAL APPLICATIONS

IDEAL FOR REPLACEMENT OF:

1. BOTH HOT GAS SOLENOID VALVE AND SOFT GAS SOLENOID VALVE WITH A SINGLE HANSEN SEALED MOTOR VALVE.
2. BOTH SUCTION SOLENOID VALVE AND EQUALIZE SOLENOID VALVE WITH A SINGLE HANSEN SEALED MOTOR VALVE.
3. ANY OPEN/CLOSED APPLICATION REQUIRING SLOW OPERATION TO MINIMIZE LIQUID VELOCITY SHOCK AND/OR REQUIRING NO PRESSURE DROP TO OPERATE. (VENT OR GRAVITY DRAIN)
4. MOST MOTORIZED BALL VALVE AND BUTTERFLY VALVE APPLICATIONS THEREBY ELIMINATING SHAFT SEAL LEAKAGE.

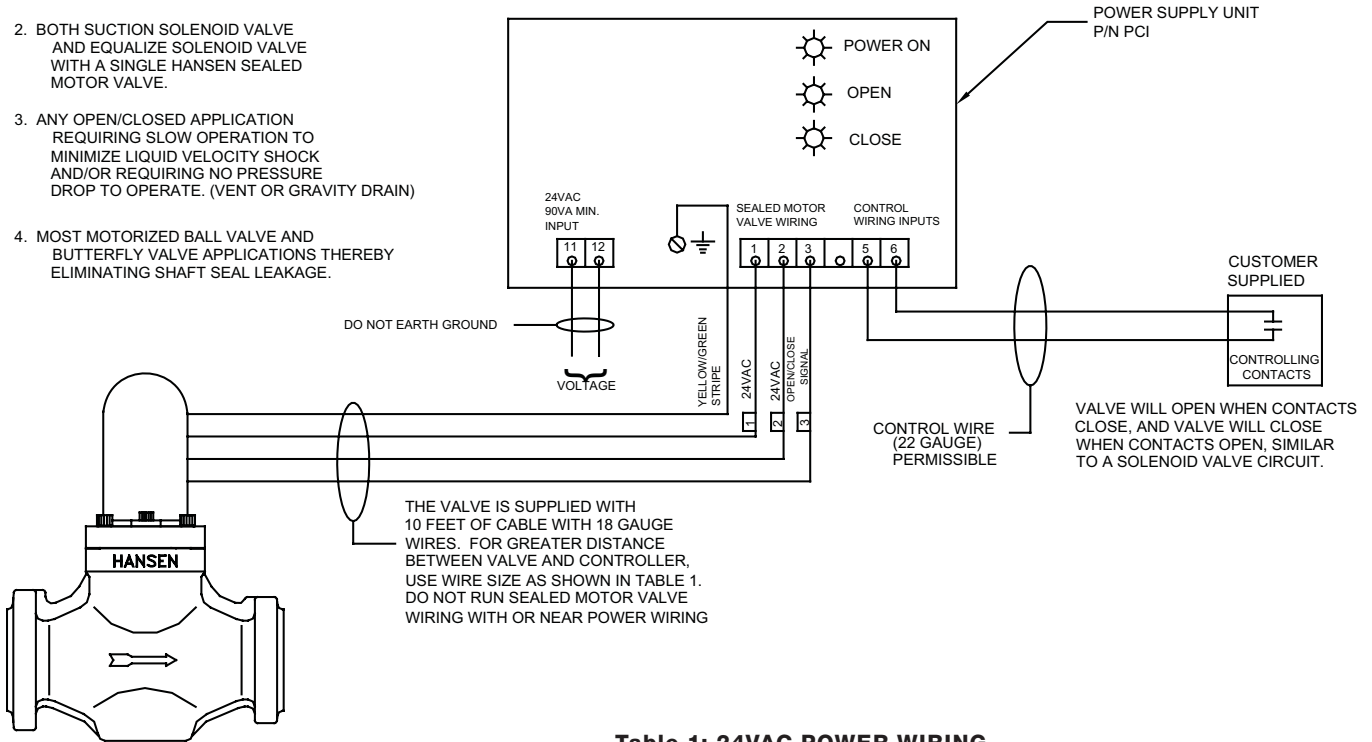

HANSEN SEALED MOTOR VALVE
TYPE HMSV, HMSVC

Table 1: 24VAC POWER WIRING

24VAC POWER WIRING (WIRES NO. 1 AND 2) (90VA PER VALVE REQUIRED)	AWG WIRE GAUGE (mm ²) NUMBER OF VALVES POWERED			
	1	2	3	4
CABLE LENGTH, ft(m)				
50 (15)	18 (1,0)	16 (1,5)	14 (2,5)	12 (4,0)
100 (30)	16 (1,5)	12 (4,0)	10 (6,0)	10 (6,0)
150 (46)	12 (2,5)	10 (6,0)	8 (10,0)	8 (10,0)
200 (61)	12 (4,0)	10 (6,0)	8 (10,0)	
300 (91)	10 (6,0)	8 (10,0)		

TROUBLESHOOTING THE SEALED MOTOR VALVE

If control or startup problems are being experienced, our recommended systematic approach is generally the fastest and most effective method to identify and remedy the cause of the problem. There are three major areas to investigate:

- 1) The mechanical state of the valve, refrigerant conditions, and piping design
- 2) The state of the valve power and power wiring components
- 3) The state of the process control equipment, control wiring, and control tuning

1. VALVE MECHANICAL STATE

The first check should be to check the mechanical state of the valve. Carefully remove the powerhead and operate the valve with a MOVT manual operation valve tool. The valve should move from wide open to closed, and should stop firmly at each end, and should release from the ends without stickiness or grabbing.

TROUBLESHOOTING MECHANICAL SYSTEM

PROBLEM	OBSERVATION	CAUSE	SOLUTION
Noisy or chattering valve	Noisy piping, especially 3" or 4" valves at low loads	Valve oversized, creating rapid accelerations of refrigerant.	Install smaller valve or reduced capacity v-ports (available from factory)
			Move liquid valve as close as possible to feed-vessel
Intermittent Sticking	Valve shows signs of sticking or grabbing at end-stops of travel during manual operation using MOVT. Disassembly of valve shows damage (components broken, bent, or stripped)	High velocity liquid slugs, liquid hammer.	Re-tune temperature control of wet-suction line (soften response and ramp slowly between setpoints).
			Lower liquid level in evaporator/chiller. Review effect of liquid-feed solenoid.
			Change control to close valve when intermediate feed vessel gets below safe levels.
Intermittent Sticking	Valve shows signs of sticking or grabbing at end-stops of travel during manual operation using MOVT. Disassembly of valve shows no obvious signs of damage to rotor, drive thread, or drive nut	Dirt and/or especially improper oil (rancid or improper pour-point) in system for the application.	Replace cartridge and v-port (2" and smaller) or pilot body (3" and above). Increase oil management and removal from system.
Intermittent Sticking 3" and 4" valves	Reverse-pressure is sometimes present	Lack of outlet check-valve.	Install check valve downstream of valve.
Intermittent Sticking	No signs of mechanical sticking when operated manually using MOVT.	Insufficient power	Refer to Valve Power Elements troubleshooting in next section.

TROUBLESHOOTING THE SEALED MOTOR VALVE

2. VALVE POWER WIRING ELEMENTS

If no mechanical or system problems are found, check the power wiring (to the #1 and #2 wires on valve). Most incidences of sticking and feedback problems have been traced to insufficient power reaching the valve. 24 Volt A.C. transformer(s) must have as a minimum 90VA for each valve powered. 24 Volt A.C. power is very sensitive to line losses due to insufficient wire size. This power loss may not show as a voltage loss when using a common multi-meter (due to the fast pulse of current required by the valve). As more power heads are placed in an individual circuit, the wire size must go up (refer to our wire sizing table below).

A common wiring installation error occurs between the transformer secondary and the terminal strips leading to multiple valves; these typically short wire runs must be sized for the total current of the combined load of all of the valves; larger or multiple wires are needed here to prevent power losses.

A second common but more grievous error results when one of the two 24 Volt A.C. secondary lines is incorrectly wired as if it were a "neutral". Undesirable but common results may occur: often the "neutral" wire size is grossly insufficient to carry the combined amperage of multiple valves, resulting in power losses to the valves; and secondly, this "neutral" is often incorrectly earthed or grounded, leading to potentially high stray voltages which may damage the electronics of the valve. Thirdly, incidents of combining higher voltage devices such as solenoid coils to this 24 Volt A.C. secondary "neutral" have also occurred. Proper wiring calls for both 24 Volt A.C. secondary wires be isolated from earthed or grounded neutrals, and have sufficient wire diameter in each segment to carry the combined amperage of the loads (minimum 90 watt, 3 Amp for each Sealed Motor Valve; 5 amp fast-blow fuses recommended). Refer to our wire sizing table below:

Table 1: 24VAC POWER WIRING

24VAC POWER WIRING (WIRES NO. 1 AND 2) (90VA PER VALVE REQUIRED)	AWG WIRE GAUGE (mm ²) NUMBER OF VALVES POWERED			
	1	2	3	4
CABLE LENGTH, ft(m)				
50 (15)	18 (1,0)	16 (1,5)	14 (2,5)	12 (4,0)
100 (30)	16 (1,5)	12 (4,0)	10 (6,0)	10 (6,0)
150 (46)	12 (2,5)	10 (6,0)	8 (10,0)	8 (10,0)
200 (61)	12 (4,0)	10 (6,0)	8 (10,0)	
300 (91)	10 (6,0)	8 (10,0)		

TROUBLESHOOTING THE SEALED MOTOR VALVE

TROUBLESHOOTING WIRING SYSTEM

PROBLEM	OBSERVATION	CAUSE	SOLUTION
Intermittent sticking	24 Volts A.C. measured at valve, but transformer not 90VA times # of valves on circuit.	Insufficient power	Use a larger transformer or split load between multiple transformers.
Intermittent sticking	24 Volts A.C. measured at valve, but #2 wire is wired as a "neutral", and combined with other valves and loads.	Insufficient power	Remove earthing or ground, remove other devices, and provide sufficient wire size for combined amperage of all valves on circuit (individual circuit-pairs are recommended).
Intermittent sticking	24 Volts A.C. measured at valve, but a single insufficiently-sized wire pair exists between the transformer and fuse block (#1 wire) or terminal block (#2 wire).	Insufficient power	Increase wire size and/or number of conductors between transformer and terminal blocks
No feedback or loss of calibration, or intermittent sticking	24 Volts A.C. measured at valve, but insufficient transformer size or wiring size for long wiring run.	Insufficient power	Use a larger transformer or split load between multiple transformers. Run larger wire diameter or more wire-pairs to valves. Consider running higher voltage to valve site and install 24VAC transformer near valve.
Blown or dead power heads	Valve will not move, or no feedback. Earthed or grounded 24 Volt A.C. transformer secondary.	Transient or stray voltages	Remove other devices from valve power circuit; remove earthing or grounding from transformer secondary.
Blown or dead power heads	Loose or missing powerhead screws, or rust inside of power heads.	Moisture damage to electronics	Replace power head. In some cases, dead power heads will revive after several weeks in a warm, dry environment. Maintain pressure-tight joint by torquing powerhead screws to 15 ft-lbf (20 N-m).

TROUBLESHOOTING THE SEALED MOTOR VALVE

3. PROCESS CONTROL ELEMENTS

Determine if valve responds to control input. If not, check control wiring in accordance to installation diagrams. Check for proper voltage and polarity of 24 Volt D.C. power supply in signal loop. Determine what other devices are connected to the control supply, and analyze for the possibility of ground loop errors. Verify proper milliamps using a milliamp meter.

Using VPIF, move valve to the open and closed position. If valve responds properly, the problem is in control wiring to the valve.

TROUBLESHOOTING THE CONTROL SYSTEM

<i>PROBLEM</i>	<i>SYMPTOM</i>	<i>CAUSE</i>	<i>CHECK/DO</i>
Valve does not maintain level- Model HMMR on liquid feed application	Erratic readout, level too high or too low	Level sensing probe incorrect	Recalibrate liquid level probe.
		4-20 mA loop erratic	Install independent properly grounded 24VDC power supply.
Valve Hunts	Does not maintain constant level or pressure	PID constants not set properly	Set I and D to zero, increase P to minimize valve position swings. Add I if valve is too "lazy".
	Does not maintain constant temperature	PID constants not set properly	Speed up temperature response by moving temperature sensor closer or into the vessel. If sensor is in a well, speed up sensor response time by adding thermal oil into well.
Valve position feedback does not work (customer supplied controller)	Readout is zero	Power supply is missing	Install 24 VDC power supply.
	Readout is incorrect	Disturbance from other devices on 4-20 mA supply	Install independent 24VDC power supply.
	Readout is above 100% or below 0% and does not change	Power head was removed and reinstalled	Recalibrate valve. See instructions.
Valve does not operate	Motor does not pulse when milliamp signal is changing	Mis-wired	Double check numbers printed on power head wires versus wiring diagram
		4-20 mA wires reversed	Follow wiring diagram to be sure wire goes from positive on one side of terminal to negative terminal around the 4-20 mA loop.
		No 4-20 mA signal to valve	Check milliamp signal to valve on either wires 3 or 4. Install milliamp meter in series with 4-20 mA signal to power head to confirm proper signal.

CAUTION

Hansen valves are for refrigeration and other Hansen approved systems only. These instructions and related safety precautions must be read completely and understood before selecting, using, or servicing these valves. Only knowledgeable, trained refrigeration technicians should install, operate, or service these valves. Stated temperature and pressure limits should not be exceeded. Bonnets should not be removed from these valves unless the system has been evacuated to zero pressure. See also Safety Precautions in current List Price Bulletin and Safety Precautions Sheet supplied with product. Escaping refrigerant can cause injury, especially to the eyes and lungs.

WARRANTY

Hansen electrical and electronic parts are guaranteed against defective materials and workmanship for 90 days F.O.B. our plant. All other components are guaranteed for one year F.O.B. our plant. No consequential damages or field labor is included.

TYPICAL SPECIFICATIONS

Motor operated control valves shall feature direct actuation of the main valve seat by the motor shaft, a canned motor to eliminate valve stem seal leakage, a ductile iron body, and be suitable for a safe working pressure of 400 psig (27 bar), as manufactured by Hansen Technologies Corporation, or approved equal.

NOMINAL PORT SIZE INCH (mm)	FLANGE CONNECTION STYLES AND SIZES			
	SW, WN		ODS	STANDARD
	STANDARD	ALSO	STANDARD	
7/32 (5)	1/2	3/4	7/8	
9/32 (7)	1/2	3/4	7/8	
3/4 (20)	3/4	1, 1 1/4	7/8	
1 (25)	1	3/4, 1 1/4	1 1/8	
1 1/4 (32)	1 1/4	3/4, 1	1 3/8	
1 1/2 (40)	1 1/2	2	1 5/8	
2 (50)	2	1 1/2	2 1/8	
3 (80)	3	-	3 1/8	
4 (100)	4	-	4 1/8	

ORDERING INFORMATION

FPT only available 3/4", 1" and 1 1/4" port size.

TO ORDER:

Specify valve type (HMMV, HMMVB, HMMR, HMMRA, HMMRB, HMSV, HMXV), nominal port size, flange connection style and size.

Add C for Power-Close Model Number.

(Example: HMMVC)

OPTIONAL CONTROLLERS

CATALOG NUMBER	DESCRIPTION
HMMV/HMMR OPTIONAL CONTROLLERS	
PCMT	Temperature controller with temperature sensor for fully modulating temperature control.
PCMTF	Temperature controller with sensor and valve position display for fully modulating temperature control.
PCML	Level controller for fully modulating applications. Level sensor not included.
PCMLF	Level controller with valve position display for fully modulating applications. Level sensor not included.
PCMP	Pressure controller with pressure transducer for fully modulating pressure control.
PCMPF	Pressure controller with pressure transducer and valve position display for fully modulating pressure control.
RDR	Remote digital readout displays valve position.
TR92	115VAC/230VAC:24VAC 92VA transformer for HMMV/HMMR controller power.
HMSV OPTIONAL CONTROLLER	
PCI	Power Control Interface for open/close applications.
SEALED MOTOR VALVE TOOLS	
MOVT	Manual Opening Valve Tool
75-1185	Calibration Key

VPIF VALVE POSITION INDICATOR KITS	
CATALOG NUMBER	DESCRIPTION
75-1208	Power Head Upgrade Kit includes Power Head, VPIF, VPIF bracket and cables
75-1213	Power-Close Power Head Upgrade Kit includes Power-Close Power Head, VPIF, VPIF bracket and cables
75-1210	VPIF Retro-fit Kit includes VPIF, 2 cables and junction box
75-1211	VPIF Retro-fit Kit includes VPIF, cable and solder quick disconnect cable connector
VPIF	Valve Position Indicator (VPIF) Monitor for SMV Models with 4-20mA (less cables & bracket)
VPIEC	8' Extension Cable

HANSEN

Hansen Technologies Corporation
 6827 High Grove Boulevard
 Burr Ridge, Illinois 60527 USA
 Tel: 630.325.1565 Fax: 630.325.1572 Toll: 800.426.7368
 Email: info@hantech.com Web: www.hantech.com
USA · Asia · Europe · India · Latin America · Middle East
 © 2007 Hansen Technologies Corporation