MHANSEN



1 1/4" (32 mm) HS4A Solenoid Valve

INTRODUCTION

These advanced design, strong bodied, precision-manufactured solenoid valves control the on-off flow of refrigerant. They are superior in their ability to overcome dirt and sticky oil during opening and closing, and operate smoothly even in an oil-free "dry" system. When electrically energized, the upstream pressure is ported through the pilot solenoid to the top of the piston to push it downward and open the main valve seat wide; when de-energized, pressure is no longer ported to the top of the piston and a spring closes the main valve seat to stop flow in the arrow direction on the valve body.

APPLICATIONS

These reliable, flanged bodied valves are ideal for use as standard, stock refrigerant solenoid valves. While primarily for ammonia, these valves are also suitable for R22, R134a, CO2 and other approved refrigerants and warm refrigeration oil. Most common use is to automatically stop liquid feed to recirculating liquid overfeed evaporators, and as liquid makeup solenoid valve for pump recirculators. They are also suitable for hot gas defrost supply and evaporator suction stop applications. (Note: For gravity liquid drain or equalization applications, use low pressure drop Hansen Type HCK2 gas-powered suction stop valves or Type HS9B gas-powered solenoid valves.)


Specifications, Applications, Service Instructions & Parts

HS4A SOLENOID VALVES 3/4" thru 6" PORT (20 thru 150 mm)

Flanged 3/4" thru 4"
Weld End 5" & 6"
for Refrigerants



KEY FEATURES

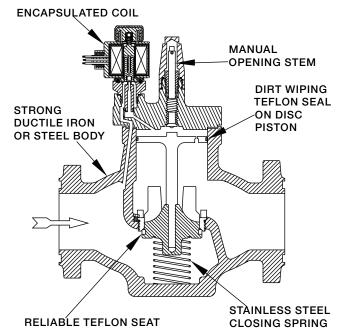

ADDITIONAL FEATURES

Tolerant of dry systems

Teflon main & pilot seats

Encapsulated Hansen standard coil

Heavy duty, pilot operation

300 psi MOPD (20.7 bar), 500 psi (34.4 bar) for CO2

Simple serviceable design

Available close-coupled strainer/check valve

Non-asbestos gaskets

CSA certified status

CE available for 11/4" (32mm) and larger

Wireless pilot lights

Weld-in-Line Available; Contact Factory

MATERIAL SPECIFICATIONS

Body:

34"-4" (20-100mm): Ductile iron, ASTM A536 5" & 6" (125 & 150mm): Cast steel, ASTM A352 LCB

Adapter: Ductile iron, ASTM A536

Piston: Steel, disc type, spring energized teflon

seal

V-Port/Seat:

34"-114" (20-32mm): Steel, plated, with teflon seat $1\frac{1}{2}$ "-6" (40-150mm): Ductile iron with teflon seat Main Seat:

3/4"-11/4" (20-32mm): Integral ductile iron

1½"-6" (40-150mm): Stainless steel, removable

Gaskets: Non-asbestos, graphite composite

Manual Opening Stem: Steel, plated Solenoid Tube: Stainless steel Solenoid Plunger: Stainless steel Pilot Orifice: Stainless steel

Flanges: Forged steel, ASTM A105

Max. Opening Pressure (MOPD): 300 psi (20.7 bar),

500 psi (34.4 bar) for CO2

Safe Working Pressure: 400 psig (28 bar), 600 psig

(41 bar) for CO2

Operating Temperature: -60°F to +240°F

 $(-50^{\circ}C \text{ to } +115^{\circ}C)$

ADVANTAGES

These valves combine modern design and new age materials with advanced manufacturing techniques and intense quality control to offer a significantly superior and reliable product. Their ductile iron bodies are stronger and more rugged than common cast iron, including semi-steel (class B iron) valves. They are more dirt resistant than full skirted piston designed valves and use a single, standard, power saving, low wattage coil that can be used on all valve sizes. All valves incorporate reliable teflon seating and stainless steel spring closing. Non-asbestos gaskets are standard. Main seats are stainless steel on 11/2" and larger valves. All valves use a spring activated, teflon, dirt-wiping piston seal. Manual opening stems are located on top of valves, up and away from dirt and rust particles to extend stem seal life. This also facilitates easier insulating of valves. Each valve is individually packaged or sealed for valve interior cleanliness and ease of storage until ready for use. All valve boxes are clearly marked with catalog numbers and description.

INSTALLATION

Protect the interior of valve from dirt and moisture during storage and installation. Valve should be installed so that the arrow on the valve body is in direction of normal refrigerant flow. Valve will not prevent reverse flow; use check valves where necessary. System should be free from dirt, weld slag and rust particles. A 60 mesh, close-coupled

strainer is available for installation at inlet of valve; no small internal screens are used. Pipe sizing, rating, anchoring, and similar prudent precautions should be taken to ensure "liquid hammer" will not occur when valves open or close. For proper flange gasket sealing, care must be taken when threading or welding to assure flanges are parallel to each other and perpendicular to pipe. Also, gaskets should be lightly oiled and all bolts must be tightened evenly.

Valves in 5" and 6" size are Type HS4W with integral butt weld end only. These steel bodied solenoid valves are directly welded into the pipe line. During welding, the manual opening stem should be opened downward several turns to protect the teflon seat from weld heat.

Welds should be annealed as necessary in accordance with good practice. Supplementary painting of valves and welds is recommended for complete corrosion protection. Pipe covering, where applied, should have proper moisture barrier. Before putting valves into service, all pipe connections, valve seats and seals should be tested for leaks at pressure levels called for in appropriate codes.

ELECTRICAL

The coils draw 16 watts and will operate properly between 85% and 110% of rated voltage (24V coil draws 19 watts). Standard coil connection is a 1/2" fitting (NPSM) for conduit, with two 18" wire leads and ground wire. Coils with DIN plug or 1/2" NPSM quick disconnect plug are available. Contact the factory. All coils are totally encapsulated and meet NEMA 3R (rainproof) and NEMA 4 (splashproof, approx. IP65) requirements. The coil should only be energized while on the solenoid tube. Otherwise, immediate coil burnout may occur. To avoid bending the solenoid tube, remove the coil from valve before connecting any electrical conduit. Wireless pilot lights are available.

COIL OPTIONS AVAILABLE





LIQUID CAPACITIES (TONS)

Port Size Inches (mm)		R717 R2				
IIICHE	S (IIIIII)	Pressure	e Drop (∆P)	Pressure	Drop (∆P)	
			4 psi	2 psi	4 psi	
3/4"	(20)	164	232	28	40	
1"	(25)	300	425	52	74	
1 1/4"	(32)	421	595	73	103	
1 1/2"	(40)	899	1271	155	220	
2"	(50)	1207	1706	209	295	
2 1/2"	(65)	1977	2796	342	484	
3"	(80)	2670	3776	462	653	
4"	(100)	4262	6027	737	1043	

R717 capacities based on 20°F (-6.7°C) liquid temperature and 5°F (-15°C) evaporator temperature and no flashing through valve. For overfeed systems, multiply evaporator tons by recirculating rate and size valve to the tons result. To convert to 86°F (30°C) liquid, multiply values in table by 0.9. R22 capacities based on 86°F (30°C) condensing temperature and 5°F (-15°C) evaporator temperature and no flashing through valve. To convert liquid capacities from R22 to R134a, multiply table tons by 0.92 (accuracy within 8%).

SUCTION VAPOR CAPACITIES (TONS)

(1 Ton= 12,000 Btu/hr= 3.517 kW= 3024 kcal/hr)

			R7	R717		R22							
		Size Cv (Kv)		Pressure Drop	Е	vaporating	Temperatu	ire	E	vaporating	Temperatu	re	
inches (M	illimeters)			Across Valve	-20°F† (-28°C)	0°F (-17.8°C)	+20°F (-6.7°F)	+40°F (4.4°C)	-20°F† (-28.9°C)	0°F (-17.8°C)	+20°F (-6.7°F)	+40°F (4.4°C)	
3/4"	(20)	6.4	(5.5)	2 psi	6.4	7.4	9.5	12	2.8	2.8	3.6	4.4	
3/4	(20)	0.4	(3.3)	5 psi	9.7	8.7	15	19	4.3	4.4	5.5	6.9	
1"	(25)	11.7	(10)	2 psi	12	13	17	22	5.2	5.2	6.5	8.0	
'	(23)	11.7	(10)	5 psi	18	16	27	34	7.9	8.0	10	13	
1 1/4"	(22)	16.4	(1.1)	2 psi	16	19	24	31	7.2	7.2	9.1	11.3	
1 1/4	(32)	10.4	(14)	5 psi	25	22	38	48	11	11	14	18	
1 1/2"	(40)	35 (3	(20)	2 psi	35	40	52	65	15	15	19	24	
1 1/2	(40)		35	33	(30)	5 psi	53	48	81	102	24	24	30
2"	(50)	47	47 (40)	2 psi	47	54	70	87	21	21	26	32	
2	(50)	47	(40)	5 psi	71	64	108	137	32	32	41	51	
2 1/2"	(65)	77	(66)	2 psi	77	89	114	143	34	34	43	53	
2 1/2	(65)	11	(00)	5 psi	116	105	177	224	52	53	67	83	
3"	(80)	104	(89)	2 psi	104	120	154	193	46	46	58	71	
3	(60)	104	(69)	5 psi	157	141	239	303	70	71	90	112	
4"	(100)	166	(112)	2 psi	166	191	246	309	73	73	92	114	
4	(100)	100	166 (142)	5 psi	251	226	382	483	112	114	144	179	
5"	(125)	242	040 (007)	2 psi	242	278	358	450	107	107	135	166	
5	(125)	242	(207)	5 psi	365	329	557	704	163	166	210	261	
6	(150)	413	(254)	2 psi	412	478	611	768	182	183	230	283	
O	(150)	413	(354)	5 psi	624	562	950	1202	278	282	358	446	

2 psi = 0.14 bar

5 psi = 0.35 bar

Kv = valve capacity factor m3/hr of water at 1 bar differential.

†-20°F (-28°C) capacities are based on a two stage system. For suction closure at temperatures below 0°F (-18°C) alternate low pressure drop valves are preferably used such as Hansen Gas-Powered Suction Stop Valve Type HCK2 or Gas-Powered Solenoid Valve Type HS9B.


Conditions: Capacities based on evaporator temperatures shown and 86°F (30°C) liquid. R717: For each 10°F (5.6°C) lower liquid temperature increase above table capacity by 3%. R22: For each 10°F (5.6°C) lower liquid temperature increase above table capacity by 5%. To convert for R134a, multiply R22 table values by 0.73 (accuracy within 8%).


For liquid overfeed evaporator suction between normal 2:1 to 5:1 rate, add 20% to the evaporator load or use the next larger port size to accommodate liquid volume accompanying the suction gas and to reduce impact velocities.

INSTALLATION DIMENSIONS

3/4" THRU 1 1/4" (20 THRU 32 MM)

1 1/2" THRU 4" (40 THRU 100 MM)

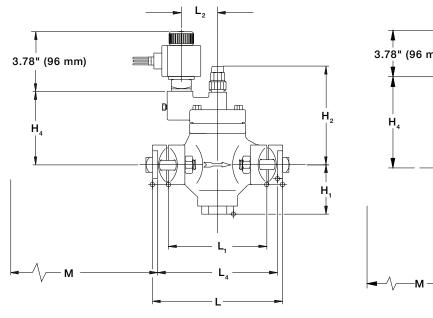

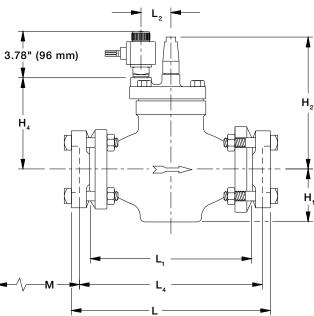


M = ADDITIONAL LENGTH FOR CLOSE-COUPLED STRAINER

Port Size	H1	H2	H4		L	L1	L2	L4	М	W*
Inches (mm)	111	112	114	FPT, SW	WN, ODS	LI	LZ	L4	IVI	VV
3/4", 1", 1 1/4"†	3.09"	6.77"	4.63"	8.20"	8.94"	6.19"	2.38"	7.20"	3.70"	4.50"
(20, 25, 32)	(78)	(172)	(117)	(208)	(227)	(157)	(60)	(183)	(94)	(114)
1 1/2", 2"	2.87"	8.84"	5.72"	12.39"	13.39"	9.88"	2.35"	10.89"	9.83"	4.50"
(40, 50)	(73)	(225)	(145)	(315)	(340)	(251)	(60)	(277)	(250)	(114)
2 1/2"	3.62"	9.69"	6.53"	13.01"	14.03"	9.88"	2.35"	11.01"	9.83"	5.62"
(65)	(92)	(246)	(166)	(330)	(356)	(251)	(60)	(280)	(250)	(143)
3"	4.06"	10.00"	6.88"	15.38"	16.40"	12.25"	2.35"	13.38"	12.20"	6.50"
(80)	(103)	(254)	(175)	(391)	(417)	(311)	(60)	(340)	(310)	(165)
4"	4.69"	10.56"	7.46"	17.01"	20.51"	14.12"	2.56"	15.01"	14.07"	8.06"
(100)	(119)	(268)	(189)	(432)	(521)	(359)	(65)	(381)	(357)	(205)

^{*}Maximum width of valves.

† Alternate special 1 1/4" 4-bolt version is available to replace existing 4-bolt flanged valves.

INSTALLATION DIMENSIONS 5" AND 6" (125 AND 150 MM)

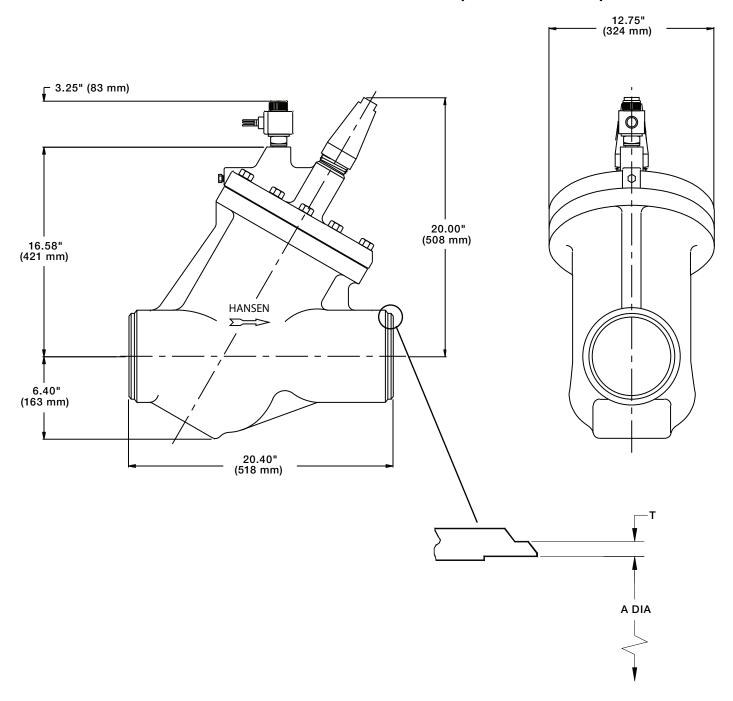

WELD END DIMENSIONS


Port Size Inches (mm)	Α	Т
5" (125)	5.05" (128)	0.26" (6.6)
6" (150)	6.06" (154)	0.28" (7.1)

TYPICAL APPLICATIONS FOR HOT GAS DEFROST


These are only examples of possible control valve schemes. As always, they are provided only to assist system designer in applying and selecting valves and controls. Ultimately, designer is responsible for safe and satisfactory operation of any defrost system.

BOTTOM FEED EVAPORATOR

EQUALIZE SOLENOID VALVE -KK-M

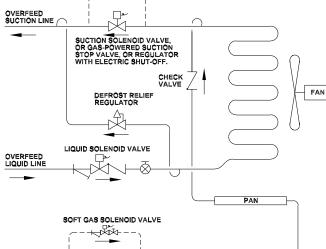


TOP FEED EVAPORATOR

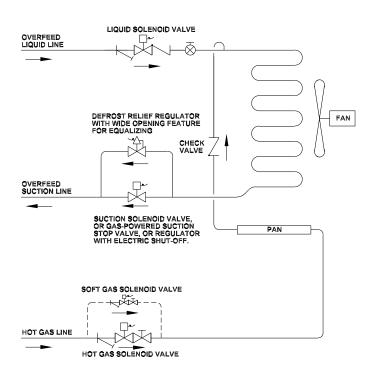


EVAPORATOR WITH GAS-POWERED SUCTION STOP VALVE

HOT GAS SOLENOID VALVE

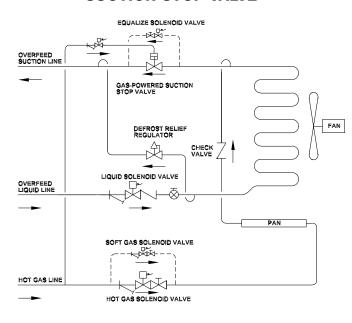


EVAPORATOR WITH DEFROST CONDENSATE LIQUID DRAINER

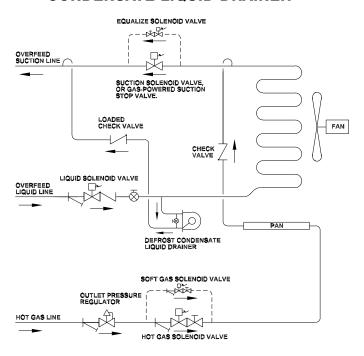

*For suction closure at temperatures below 0°F (-18°C) alternate low pressure drop valves are preferably used such as Hansen Gas-Powered Suction Stop Valve Type HCK2.

HOT GAS LINE

PARTS LIST 3/4" THRU 1 1/4" (20 THRU 32 MM)

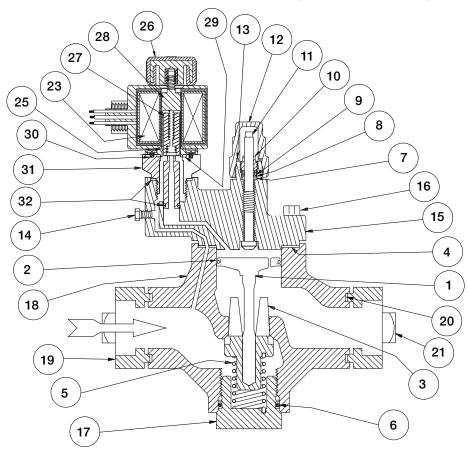

Item	Description	Qty	Part No.
	Piston Kit	1	75-1019
	Above kits consist of:		
1	Piston	1	75-0191
2	Piston Seal		75-0353
4	Adapter Gasket	1	75-0489
20	Flange Gasket	2	70-0132
	V-Port/Seat Kit 3/4"	1	75-1020
	V-Port/Seat Kit 1"	1	75-1021
	V-Port/Seat Kit 1 1/4"	1	75-1022
	Above kits consist of:		
3a	3/4" V-Port/Seat	1	75-0194
3b	1" V-Port/Seat	1	75-0193
3с	1 1/4" V-Port/Seat	1	75-0192
5	Closing Spring	1	75-0287
6	Bottom Cap O-Ring	1	75-0183
4	Adapter Gasket	1	75-0489
	Gasket Kit	1	75-1023
	Above kit consists of:		
4	Adapter Gasket	1	75-0489
6	Bottom Cap O-Ring	1	75-0183
7	Stem O-Ring	1	70-0010
8	Stem Washer	1	70-0026
9	Stem Packing	1	70-0025
10	Packing Nut	1	70-0499
13	Seal Cap O-Ring	1	70-0011
20	Flange Gasket	2	70-0132
29	Solenoid Tube O-Ring	1	72-0066
32	Port Plug Gasket & O-Ring	3 EA	75-1071
11	Manual Opening Stem	1	75-0164
12	Seal Cap Kit	1	70-1042
14	Gauge Port Plug (1/4" NPT)	1	75-0189

Item	Description	Qty	Part No.
15	Adapter Kit* 3/4"- 1"	1	75-1047
16	Adapter Hex Screws (1/2"-13 x 1-1/2)	4	75-0190
17	Bottom Cap	1	75-0155
18	Body	1	FACTORY
19	Flange (Various)	2	FACTORY
21	Flange Bolt (5/8"- 11 x 2.75")	4	70-0339
22	Flange Nut (5/8" - 11)	4	70-0136
	Coil Kit (115V) 1/2" Fitting w/leads	1	70-1085
	Coil Kit (208/230V) 1/2" Fitting w/leads	1	70-1086
	Coil Kit (24V) 1/2" Fitting w/leads	1	70-1087
	Coil Kit (Other Voltages)	1	FACTORY
	Above kits consist of:		
23a	Bare Coil, 115V 50/60 Hz w/leads	1	70-0580
23b	Bare Coil, 208/230V 50/60Hz w/leads	1	70-0581
23c	Bare Coil, 24V 50/60Hz w/leads	1	70-0582
23d	Other Voltage Coils	1	FACTORY
25	Coil O-Ring	1	75-0340
26	Coil Knob	1	70-0579
	Solenoid Tube/Plunger Kit	1	70-1059
	Above kit consists of:		
25	Coil O-Ring	1	75-0340
26	Coil Knob	1	70-0579
27	Plunge	1	70-0295
28	Solenoid Tube	1	70-0298
29	Solenoid Tube O-Ring	1	72-0066
30	Tube Screws	4	70-0297
31	Solenoid Control Module	1	70-1052
	Control Module Body, including Plunger		
	Kit, Port Plug Gasket and O-Ring (less		
	coil)		

^{*} Adapter kit includes adapter, seal cap, manual open stem, gauge port plug, adapter gasket, stem packing, packing nut, and stem o-ring.


PARTS LIST 1 1/2" THRU 4" (40 THRU 100 MM)

Item	Description	Qty	Part No.
	Piston Kit 1 1/2", 2"	1	75-1025
	Piston Kit 2 1/2" Piston Kit 3"	1	75-1026
	Piston Kit 3 Piston Kit 4"	1	75-1027 75-1028
	Above kits consist of:	•	10 1020
1a	Piston 1 1/2", 2"	1	75-0957
1b	Piston 2 1/2"	1	75-2073
1c	Piston 3"	1	75-2072
1d 2a	Piston 4" Piston Seal 1 1/2", 2"	1	75-0278 75-0292
2b	Piston Seal 2 1/2", 3"	1	75-0292
2c	Piston Seal 4"	1	75-0236
3a	Adapter Gasket 1 1/2",	1	75-0113
3b	Adapter Gasket 2 1/2",	1	75-0093
3c 23a	Adapter Gasket 4" Flange Gasket 1 1/2", 2"	1 2	75-0233 75-0138
23a	Flange Gasket 1 1/2 , 2 Flange Gasket 2 1/2"	2	75-0136 75-0125
23c	Flange Gasket 3"	2	75-0137
23d	Flange Gasket 4"	2	75-0253
	V-Port/Seat Kit 1 1/2"	1	75-1029
	V-Port/Seat Kit 2"	1	75-1030
	V-Port/Seat Kit 2 1/2" V-Port/Seat Kit 3"	1	75-1031 75-1032
	V-Port/Seat Kit 4"		75-1032
	Above kits consist of:	•	10 1000
4a	V-Port/Seat 1 1/2"	1	75-0369
4b	V-Port/Seat 2"	1	75-0177
4c	V-Port/Seat 2 1/2"	1	75-0178
4d 4e	V-Port/Seat 3" V-Port/Seat 4"	1	75-0179 75-0313
3a	Adapter Gasket 1 1/2", 2"	Ιί	75-0313
3b	Adapter Gasket 2 1/2", 3"	1	75-0093
3с	Adapter Gasket 4"	1	75-0233
6a	Seat Seal O-Ring 1 1/2", 2"	1	75-0274
6b 6c	Seat Seal O-Ring 2 1/2" Seat Seal O-Ring 3", 4"	1	75-0275 75-0276
7	Seat Screw		75-0270
8a	Closing Spring 1 1/2", 2"	1	75-0171
8b	Closing Spring 2 1/2"	1	75-0201
8c	Closing Spring 3"	1	75-0248
8d	Closing Spring 4"	1	75-0235
	Coil Kit (115V) 1/2" Fitting w/leads Coil Kit (208/230V) 1/2" Fitting w/leads	1	70-1085 70-1086
	Coil Kit (24V) 1/2" Fitting w/leads	1	70-1087
	Coil Kit (Other Voltages)	1	FACTORY
26a	Above kits consist of: Bare Coil, 115V 50/60 Hz w/leads	1	70-0580
26b	Bare Coil, 208/230V 50/60Hz w/leads		70-0580
26c	Bare Coil, 24V 50/60Hz w/leads	1	70-0582
26d	Other Voltage Coils	1	FACTORY
28	Coil O-Ring	1	75-0340
29	Coil Knob	1	70-0579
	Solenoid Tube/Plunger Kit Above kit consists of:	1	70-1059
28	Coil O-Ring	1	75-0340
29	Coil Knob	1	70-0579
30	Plunger	1	70-0295
31	Solenoid Tube	1	70-0298
32 33	Solenoid Tube O-ring	1	72-0066
33 34	Tube Screw Solenoid Control Module	1	70-0297 70-1052
	Control Module Body, including Plunger		70.002
	Kit, Port Plug Gasket and O-Ring		
	(less coil)		


Item	Description	Qty	Part No.
	Gasket Kit 1 1/2", 2"	1	75-1039
	Gasket Kit 2 1/2"	1	75-1040
	Gasket Kit 3"	1	75-1041
	Gasket Kit 4"	1	75-1042
	Above kits consist of:		
3a	Adapter Gasket 1 1/2", 2"	1	75-0113
3b	Adapter Gasket 2 1/2", 3"	1	75-0093
3c	Adapter Gasket 4"	1	75-0233
6	Seat Seal O-Ring 1 1/2", 2	1	75-0274
6b	Seat Seal O-Ring 2 1/2"	1	75-0275
6c	Seat Seal O-Ring 3", 4"	1	75-0276
9a	Back-up Washer 1 1/2" - 3"	1	75-0245
9b	Back-up Washer 4"	1	50-0351
10a 10b	Stem O Ring 1 1/2" - 3"	1	50-0179
10b	Stem O-Ring 4" Stem Washer 1 1/2" - 3"	1	50-0253
11a	Stem Washer 4"	1	50-0046 50-0247
12a	Stem Packing 1 1/2" - 3"	1	50-0247
12a	Stem Packing 4"	1	50-0045
13a	Packing Nut 1 1/2" - 3"	1	50-0248
13b	Packing Nut 4"	1	50-0955
14a	Seal Cap O-Ring 1 1/2" - 3	1	50-0231
14b	Seal Cap Gasket 4"	1	50-0432
15a	Stem Pin 1 1/2" - 3"	1	75-0173
15b	Stem Pin 4"	1	75-0434
23a	Flange Gasket 1 1/2", 2"	2	75-0138
23b	Flange Gasket 2 1/2"	2	75-0125
23c	Flange Gasket 3"	2	75-0137
23d	Flange Gasket 4"	2	75-0253
32	Solenoid Tube O-ring	1	72-0066
35	Port Plug Gasket & O-Ring	3 ЕА	
5a	Seat Ring 1 1/2", 2	1	75-0084
5b	Seat Ring 2 1/2	1	75-0170
5c	Seat Ring 3	1	75-0071
5d	Seat Ring 4	1	75-0231
16a	Manual Opening Stem 1 1/2" - 3	1	75-0079
16b	Manual Opening Stem 4	1	75-0427
17a	Seal Cap Kit 1 1/2" - 3"	1	75-1014
17b	Seal Cap Kit 4"	1	75-1015
18a	Adapter Kit* 1 1/2", 2"	1	75-1049
	Adapter Kit* 2 1/2", 3"	1	75-1051
	Adapter Kit*4"	1	75-1053
	Gauge Port Plug (1/4" NPT)	1	75-0189
20a	Adapter Hex Screws 1 1/2", 2" (1/2"-13 x 1-3/4")	4	75-0175
20b	Adapter Hex Screws 2 1/2", 3" (5/8"-11 x 2")	4	65-0057
20c	Adapter Hex Screws 4"	4	75-0291
	(3/4"-10 x 2-1/2")		FACTORY
21	Body	1	FACTORY
22	Flange (Various)	2	FACTORY
	Flange Bolt 1 1/2", 2" (5/8" - 11 x 3.25") Flange Bolt 2 1/2", 3" (3/4" - 10 x 3.75	8	70-0135
24b 24c	Flange Bolt 4" (7/8"-9 x 4")	8	75-0202 75-0279
_	Flange Bolt 4" (7/8"-9 x 4") Flange Nut 1 1/2", 2" (5/8"-11)	8 8	75-0279 70-0136
	Flange Nut 1 1/2 , 2 (5/8 -11) Flange Nut 2 1/2", 3" (3/4"-10)	8	70-0136
25c	Flange Nut 2 1/2 , 3 (3/4 - 10)	8	75-0210 75-0280
-50		U	10-0200

^{*} Adapter kit includes adapter, seal cap, manual open stem, gauge port plug, adapter gasket, stem packing, packing nut, and stem o-ring.

PARTS LIST 1 1/2" THRU 4" (40 THRU 100 MM)

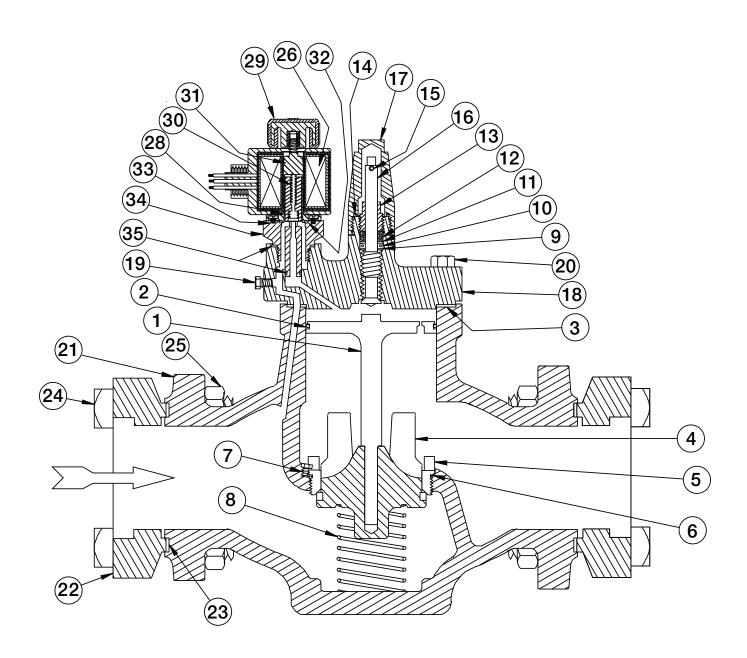

PARTS LIST 5" AND 6" (125 AND 150 MM)

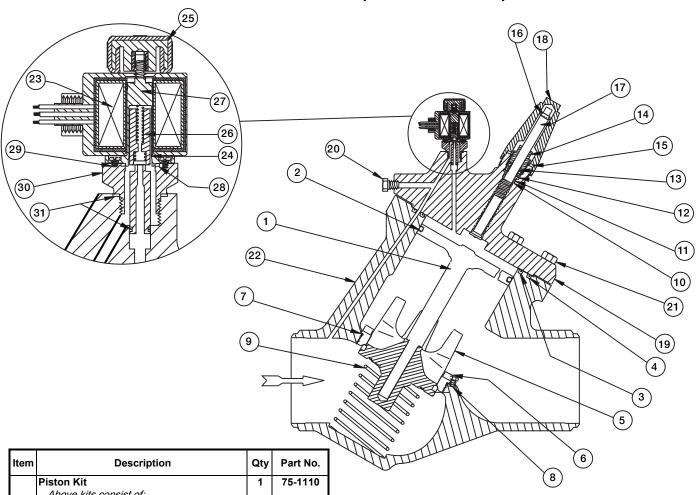

Item	Description	Qty	Part No.
	Piston Kit	1	75-1110
	Above kits consist of:		
1	Piston	1	75-0570
2	Piston Seal	1	75-0602
3	Adapter O-Ring, Inner	1	75-0605
4	Adapter O-Ring, Outer	1	75-0606
	Gasket Kit	1	75-1111
	Above kits consist of:	•	70
3	Adapter O-Ring, Inner	1	75-0605
4	Adapter O-Ring, Outer	1	75-0606
7	Seat Seal O-Ring	1	75-0613
10	Back-up Washer	1	50-0324
11	Stem O-Ring	1	50-0293
12	Stem Washer	1	50-0299
13	Stem Packing	1	50-0290
14	Packing Nut	1	50-0292
15	Seal Cap Gasket	1	50-0315
16	Manual Opening Stem Pin	1	75-0607
28	Solenoid Tube O-ring	1	72-0066
31	Port O-Ring & Gasket	3 EA	75-1071
	Coil Kit (115V) 1/2" Fitting w/leads	1	70-1085
	Coil Kit (208/230V) 1/2" Fitting w/leads	1	70-1086
	Coil Kit (24V) 1/2" Fitting w/leads	1	70-1087
	Coil Kit (Other Voltages)	1	FACTORY
	Above kits consist of:		
23a	Bare Coil, 115V 50/60 Hz w/leads	1	70-0580
23b	Bare Coil, 208/230V 50/60Hz w/leads	1	70-0581
23c	Bare Coil, 24V 50/60Hz w/leads	1	70-0582
23d 24	Other Voltage Coils	1	FACTORY
25	Coil O-Ring Coil Knob	1	75-0340 70-0579
25 30	Solenoid Control Modul	1	70-0579 70-1052
30	Control Module Body, including Plunger	"	70-1052
	Kit, Port Plug Gasket and O-Ring (less		
	coil)		

Item	Description	Qty	Part No.
	V-Port/Seat Kit 5"	1	75-1112
	V-Port/Seat Kit 6"	1	75-1113
	Above kits consist of:		
5a	V-Port/Seat 5"	1	75-0640
5b	V-Port/Seat 6"	1	75-0641
3	Adapter O-Ring, Inner	1	75-0605
4	Adapter O-Ring, Outer	1	75-0606
7	Seat Seal O-Ring	1	75-0613
8	Seat Screw	1	75-0220
9	Closing Spring	1	75-0601
	Solenoid Tube/Plunger Kit	1	70-1059
	Above kit consists of:		
24	Coil O-Ring	1	75-0340
25	Coil Knob	1	70-0579
26	Plunger	1	70-0295
27	Solenoid O-Ring	1	70-0298
28	Solenoid Tube O-Ring	1	72-0066
29	Tube Screws	4	70-0297
6	Seat Ring	1	75-0558
17	7 Manual Opening Stem		75-0581
18	Seal Cap Kit		50-1038
19	Adapter Kit*5", 6"		75-1288
20	Gauge Port Plug		75-0189
21	Adapter Hex Screws 7/8-9 x 3"	8	75-0604
22	Body	1	FACTORY

^{*} Adapter kit includes adapter, seal cap, manual open stem, gauge port plug, adapter gasket, stem packing, packing nut, and stem o-ring.

SERVICE AND MAINTENANCE

Failure to Open: Wrong voltage coil; low line voltage; controlling switch or thermostat not contacting; coil is burned-out; adjacent shut-off valve closed; plunger or main valve seat is dirt jammed; adapter gasket hole not aligned with hole in body and adapter; dirt packed under teflon seal ring enabling excessive blow-by; dirt blocking internal passages.

Failure to Close: controlling switch or thermostat not opening contacts; manual opening stem is turned in; valve installed in wrong direction; damage or dirt at main valve seat or pilot seat; piston bleed hole plugged.

Before opening valve or disassembling pilot for service, be sure it's isolated from the system and all refrigerant is removed (pumped out to zero pressure).

Follow usual refrigeration system safe servicing procedure. Read CAUTION section of this bulletin before attempting to service; see page 12.

To check solenoid pilot section of valve, disconnect electrical power from coil. Remove the coil by unscrewing the coil knob. Remove the four solenoid tube screws, solenoid tube and plunger from valve. Inspect for dirt and damage to teflon seat and stainless steel pilot orifice. Always replace plunger and solenoid tube together. Clean, polish or replace parts as necessary. Lightly oil solenoid tube gasket, re-assemble pilot section of valve and replace electrical coil housing washer and nut.

3/4" thru 11/4" (20 thru 32 mm): Use a 3/8" (9 mm) male hexagon wrench to loosen the four adapter bolts. Carefully break gasket seal before removing bolts; proceed slowly to avoid any refrigerant which may still remain in the valve. If piston parts are stuck, remove the 2" hex bottom cap to facilitate separation of the valve V-port/seat from the disc piston. Inspect disc and piston bore for burrs, nicks and other damage. Remove burrs and nicks, clean or replace disc piston as necessary. Long-life seal on disc piston need only be replaced when damaged or severely worn. Inspect V-port/seat and main valve seat for nicks, marks, etc. Main valve seat may be lapped by hand or power drill to remove marks. Clean, polish or replace parts as necessary. If necessary, the V-port tapered seat may be reconditioned by removing up to 0.04" (1 mm) of teflon from it on a lathe. Lightly lubricate all parts and gaskets with soft rag containing refrigerant oil. Align hole in valve body, adapter gasket, and adapter to assure proper operation. Re-assemble valve. Carefully check entire valve for leaks before restoring it to service.

11/2" thru 6" (40 thru 150 mm): Loosen adapter bolts using a 12" adjustable wrench (15" wrench for 5" and 6" valves). Carefully break gasket seal before removing bolts; proceed slowly to avoid any refrigerant which may still remain in the valve. If disc piston is difficult to remove, insert a 1/4"-20 threaded screw (3/8"-16 for 5"& 6" valves) into center of piston and lift straight-up. Inspect piston and piston bore for burrs, nicks and other damage. Remove burrs and nicks, clean or replace piston as necessary. Long-life seal on disc piston need only be replaced when damaged or severely worn. These valves have a removable stainless steel main valve seat. To remove seat ring for inspection, first remove small hex head seat screw. Turn seat ring counter-clockwise by turning it out with wrench and a steel bar tool positioned horizontally or by carefully tapping seat ring notch with a punch and hammer. Inspect V-port/seat and main valve seat for nicks, marks, etc. Main valve seat may be lapped by hand or power drill to remove marks. Grease and replace seat seal O-ring. Clean, polish or replace parts as necessary. The V-port tapered seat may be reconditioned by removing up to 0.04" (1 mm) of teflon from it on a lathe. Lightly lubricate all parts and gaskets with soft rag containing refrigerant oil. Align hole in valve body, adapter gasket, and adapter to assure proper operation (5" & 6" have dual O-ring adapter seal.) Reassemble valve. Carefully check entire valve for leaks before restoring it to service.

MANUAL OPENING

The stem is located on top of adapter cover. Slowly remove manual opening stem seal cap, being cautious to avoid any refrigerant which may have collected under it. Turn stem in (clockwise) to open valve manually; Counter-clockwise to return valve to automatic operation.

ORDERING INFORMATION

Flange Connection Style & Sizes Inches (Millimeters)					
FP	FPT, SW, WN				
STD	ALSO	STD			
3/4" (20)	1" (25), 1 1/4" (32)	7/8" (22)			
1" (25)	3/4" (20), 1 1/4" (32)	1 1/8" (28)			
1 1/4" (32)	3/4" (20), 1" (25)	1 3/8" (35)			
1 1/2" (40)	2" (50)	1 5/8" (42)			
2" (50)	1 1/4" (32)	2 1/8" (54)			
2 1/2" (65)	3" (80)	2 5/8" (67)			
3" (80)	-	3 1/8" (79)			
4" (100)	_	4 1/8" (105)			
5" (125) BW	_	_ ` ´			
6" (150) BW	_	_			

5" and 6" valves are Type HS4W having integral butt weld end only.

*11/4" port valve is standard 2-bolt flange design; 4-bolt flange style available upon request to field replace existing 4-bolt flange.

Weld-In-Line Available; Contact Factory

OPTIONAL BEACON PILOT LIGHTS

Pilot Light Kit includes Beacon pilot light, knob and o-ring. A/C Coils Only.

Beacon Pilot Light Kits				
Color	Part No.			
Red	70-1100			
Amber	70-1101			
Green	70-1102			



TO ORDER:


Specify type, connection type and size, volts, and strainer if required. Specify voltage and color of optional Beacon Pilot Light if required. Unless otherwise specified, standard coil with 1/2" connection will be supplied.

TYPICAL SPECIFICATIONS

"Refrigerant solenoid valves shall have encapsulated, watertight coils, Teflon seats, steel or ductile iron bodies, spring closing pilot and main valve seats, and be suitable for a safe working pressure of 400 psig (28 bar), as manufactured by Hansen Technologies Corporation or approved equal."

OPTIONAL STRAINERS

Generous capacity strainer is a separate, close-coupled, 60 mesh (233 micron rating), flanged unit that bolts directly to the solenoid valve inlet.

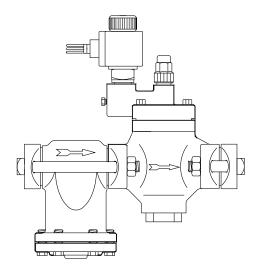

HS4A WITH CLOSE-COUPLED STRAINER

CAUTION

Hansen valves are for refrigeration systems only. These instructions must be read completely and understood before selecting, using, or servicing these valves. Only knowledgeable, trained refrigeration technicians should install, operate, or service these valves. Stated temperature and pressure limits should not be exceeded. Bonnets, solenoid tubes, etc., should not be removed from valves unless the system has been evacuated to zero pressure. See also Safety Precautions in the current List Price Bulletin and the Safety Precautions sheet supplied with product. Escaping refrigerant can cause injury, especially to the eyes and lungs.

WARRANTY

All Hansen products, except electronics, are guaranteed against defective materials or workmanship for one year F.O.B. factory. Electronics are guaranteed against defective materials or workmanship for 90 days F.O.B. factory. No consequential damages or field labor is included.



Hansen Technologies Corporation
400 Quadrangle Drive, Suite F
Bolingbrook, Illinois 60440 USA
Tel: 630.325.1565 Fax: 630.325.1572 Toll: 800.426.7368
Email: sales@hantech.com Web: www.hantech.com
USA · Asia · Europe · India · Latin America · Middle East
© 2015 Hansen Technologies Corporation